




CROSSFIRE
MOTORCYCLES

400GT Parts Manual


No.	PART No.
V01	STEERING ASSY
V02	FUEL TANK
V03	SEAT ASSY
V04	FRAME
V05	FENDER
V06	SHOCK ABSORBER FRONT
V07	SHOCK ABSORBER REAR
V08	WHEEL FRONT
V09	WHEEL REAR
V10	SHIFT
V11	FRAME ROOF
V12	REAR AXLE INSTALLATION
V16	FRONT AND REAR KNUCKLE ASSY
V18	ELECTRICAL SYSTEM
V19	BRAKING SYSTEM
V20	AUXILIARY BRAKE
V21	PEDAL
V22	BUMPER
V24	ENGINE & TRANSMISSION
V25	FRONT GEAR-BOX
V26	REAR AXLE
V27	GEARBOX INSTALLATION
V28	BOX ASSY
V29	REFLECTION
V30	SEAT BELT
V31	BODY, SIDE NETS
V32	TOOLS
V33	OPTIONS
E02	CYLINDER HEAD
E03	CAMSHAFT
E04	CYLINDER
E05	CRANKSHAFT COMP
E06	CRANKCASE
E09	LEFT CRANKCASE COVER
E10	RIGHT CRANKCASE COVER
E11	GENERATOR
E12	ELECTRIC STARTER
E13	CLUTCH
E14	TRANSMISSION I
E15	TRANSMISSION II
E16	TRANSMISSION III
E17	OIL PUMP&OIL PUMP & WATER PUMP
E19	FUEL INJECTION ASSY
E21	RADIATOR
E23	AIR CLEANER
E25	EXHAUST

1. STEERING ASSY

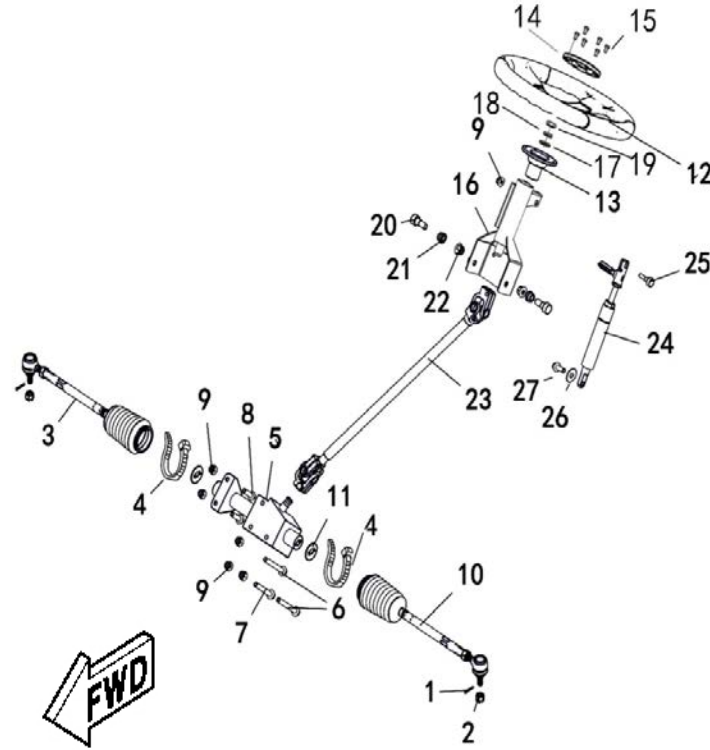


No.	PART No.	DESCRIPTION	QTY
1	10501	PIN 2.5×25	2
2	27067	NUT M10X1.25	2
3	48102	STEERING TIE-ROD,RH	1
4	48326	TIE	2
5	47600	STEERING MOTOR	1
6	11642	BOLT M8X95	2
7	11244	BOLT M8×80	1
8	10783	BOLT M8X20	2
9	11145	NUT M8	6
10	48103	STEERING TIE-ROD,LH	1
11	48104	STEERING MOTOR SHEET	2
12	26925	STEERING WHEEL	1
13	26932	STEERING WHEEL HOLDER	1
14	26934	STEERING COVER	1
15	73072	SCREW M5X10	6
16	47601	STEERING COLUMN ASSY.	1
17	11488	WASHER 12	1
18	10054	WASHER SPRING 12	1
19	26257	NUT M12	1
20	73143	SHOULDER BOLT M10×1.25×30	2
21	73125	BUSHING FOR ADJUSTABLE STEERING WHEEL	2
22	10795	NUT M10	2
23	47602	SHAFT STEERING	1
24	48354	ADJUSTMENT CYLINDER, NEW	1
25	73119	SHOULDER BOLT M8×1.25×30	1
26	11246	WASHER 6	1
27	10140B	BOLT M6X12	1

2. FUEL TANK

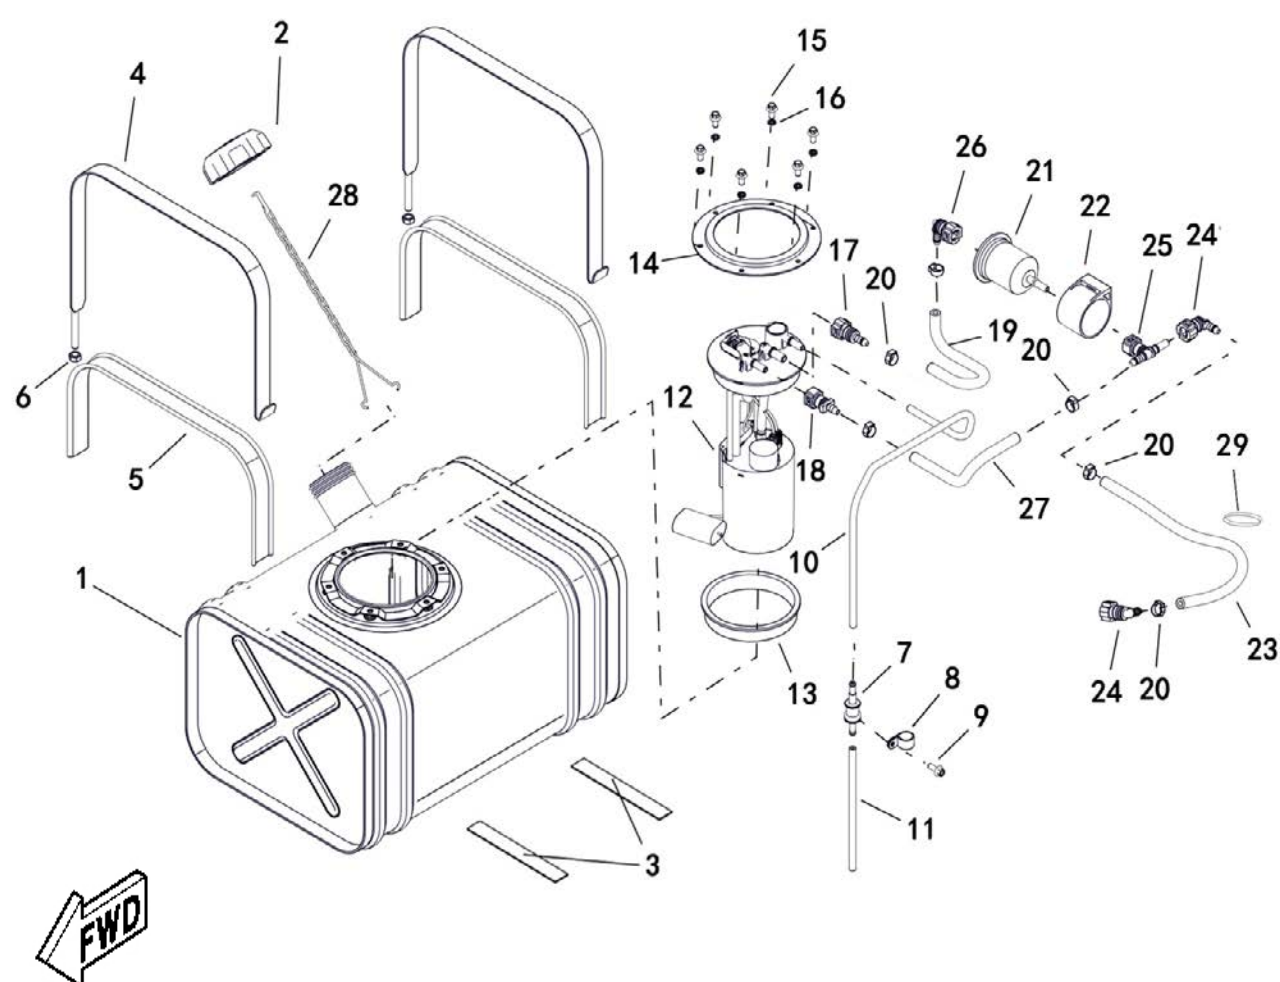


No.	PART No.	DESCRIPTION	QTY
1	47603	FUEL TANK COMP STEEL	1
2	71972	CAP FUEL TANK	1
3	73051	RUBBER DAMPER	2
4	47604	STRAP FOR STEEL FUEL TANK MOUNTING	2
5	73052	RUBBER STRAP	2
6	11145	NUT M8	2
7	25037	ROLLOVER VALVE	1
8	25351	BRACKET, ROLLOVER VALVE	1
9	11495	BOLT M6X16	1
10	48032	HOSE 1	1
11	48033	HOSE 2	1
12	47605	FUEL PUMP	1
13	73154	SEALING FOR FUEL PUMP_STEEL TANK	1
14	47606	BRACKET FOR FUEL PUMP	1
15	10087	BOLT M6X10	6
16	11019	WASHER SPRING 6	6
17	73145	QUICK FITTING ASSY 9.49	1
18	73146	QUICK FITTING ASSY 7.89	1
19	47607	FUEL LINE 1	1
20	48122	CLIP 14.6	6
21	48318	FUEL FILER	1
22	48415	FUEL FILER SUPPORT	1
23	47608	FUEL LINE 2	1
24	48004	QUICK FITTING ASSY 7.89,B13	2
25	48005	QUICK FITTING ASSY 7.89,B6	1
26	48319	QUICK FITTING ASSY 7.89,B13	1
27	47609	FUEL RETURN LINE	1
28	48123	CHAIN	1
29	48517	WIDE RUBBER BAND	1

3. SEAT ASSY

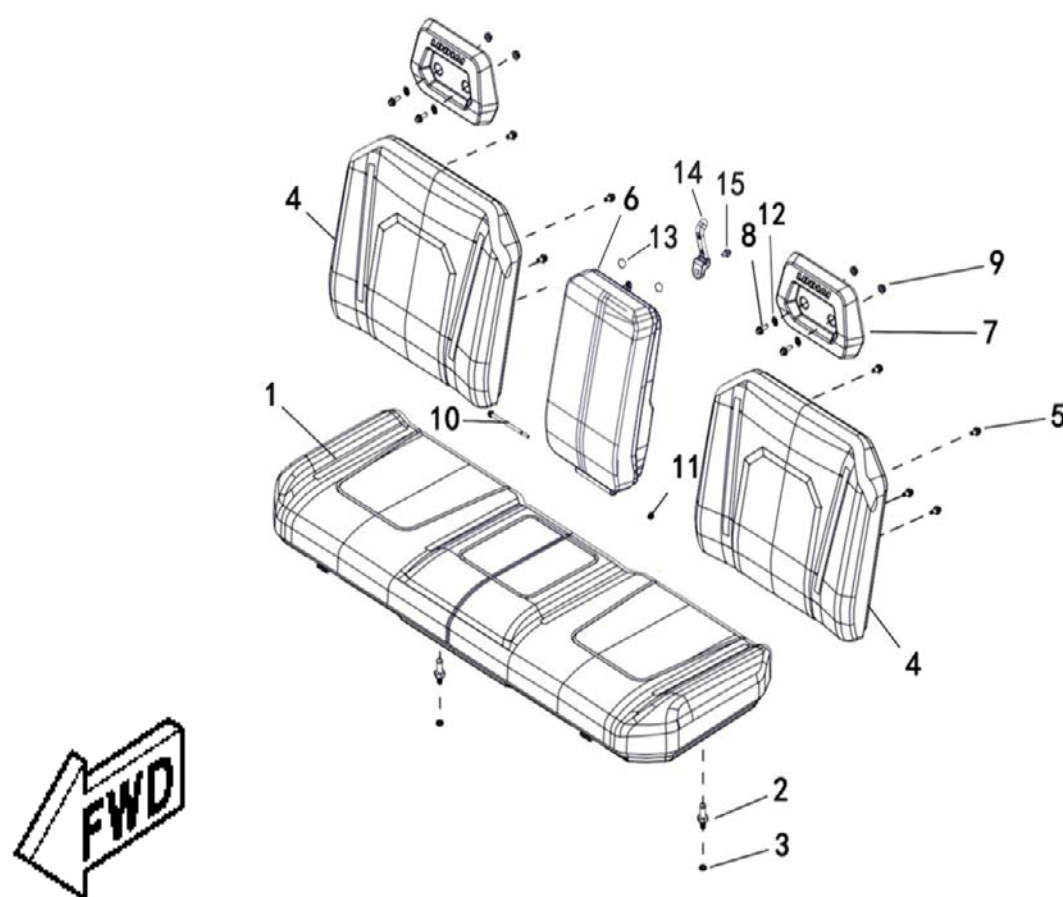


No.	PART No.	DESCRIPTION	QTY
1	48126	INTEGRAL SEAT ASSEMBLY	1
2	48125	PIN, FIX	2
3	11165	WASHER SPRING 10	2
4	48129	SIDE BACKREST	2
5	10783	BOLT M8X20	8
6	48564	MIDDLE BACKREST	1
7	48128	HEAD REST	2
8	10783	BOLT M8X20	4
9	11145	NUT M8	4
10	48085	BOLT	1
11	11233	NUT M6	1
12	10089	WASHER 10	4
13	48565	RUBBER DAMPERE (Φ20X4)	2
14	48566	RUBBER LOCK	1
15	10140B	BOLT M6X12	1

4. MIDDLE FENDERS AND FRAME

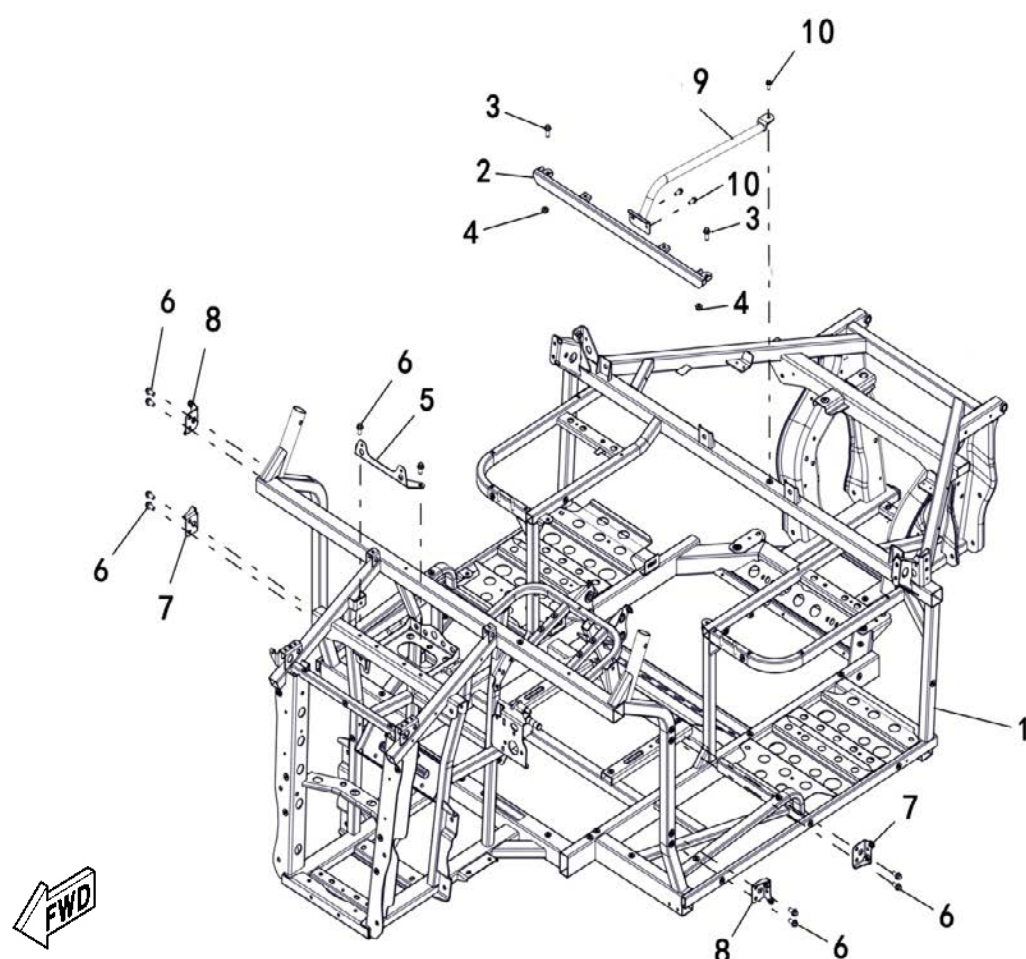


No.	PART No.	DESCRIPTION	QTY
1	47610	FRAME	1
2	47611	CROSS BRACE, SEAT FRAME	1
3	10783	BOLT M8X20	2
4	11145	NUT M8	2
5	47612	BRACKET, RADIATOR	1
6	11236	BOLT M8X16	6
7	47613	BRACKET 1, PLASTIC PARTS	2
8	47614	BRACKET 2, PLASTIC PARTS	2
9	47615	PIPE, SEAT FRAME	1
10	11495	BOLT M6X16	3

5. FENDER

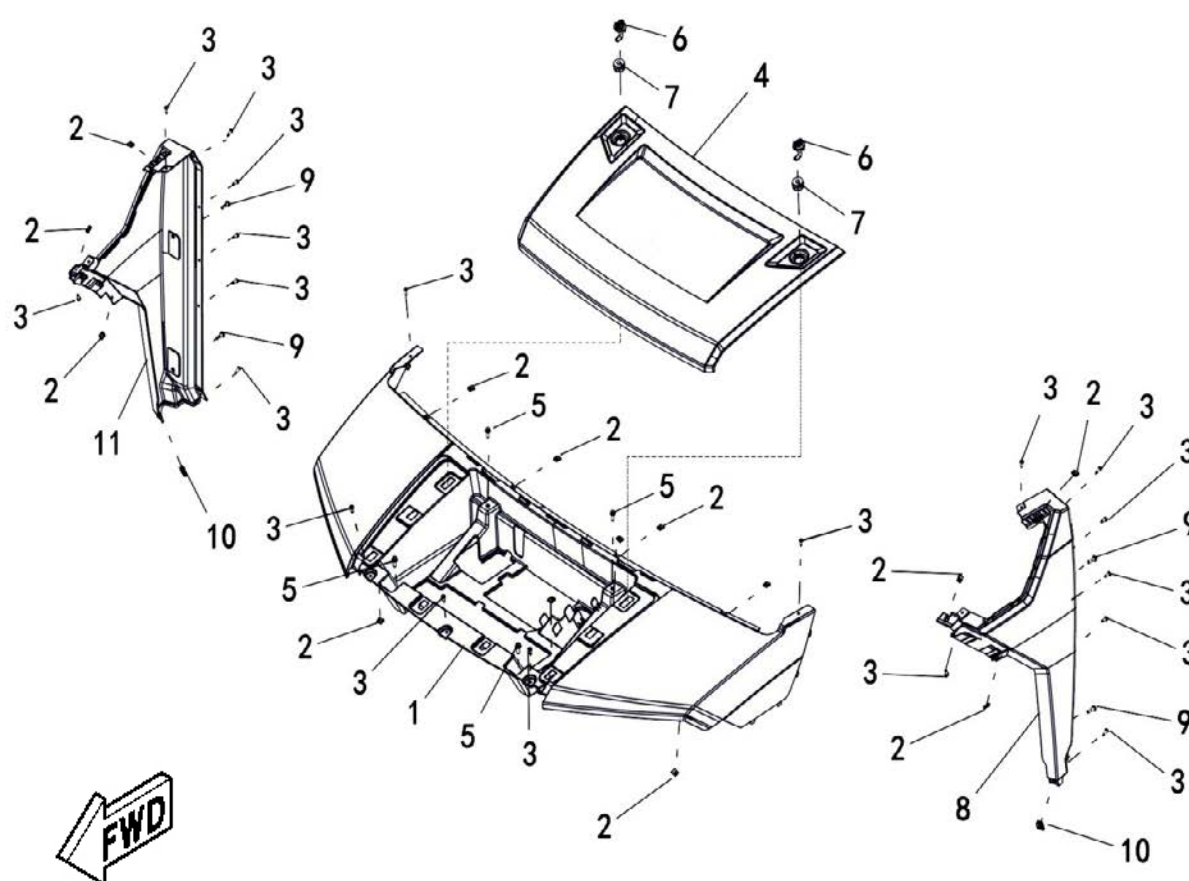

No.	PART No.	DESCRIPTION	QTY
1	47616	Front Panel	1
2	48314	Elastic Nut M5	14
3	47617	Hexagon Self-Tapping Screw M5X16	19
4	47618	Front Shroud	1
5	482117F	Hexagon Bolt M6X16	4
6	47619	Quick removal of plastic handle from Front Shroud	2
7	47620	Quick removal of rubber boot from Front Shroud	2
8	47621	The Left Front Batten	1
9	73054	Screw M6X16	4
10	70960	Plastics Elastic Nut	2
11	47622	The Right Front Batten	1


5. FENDER

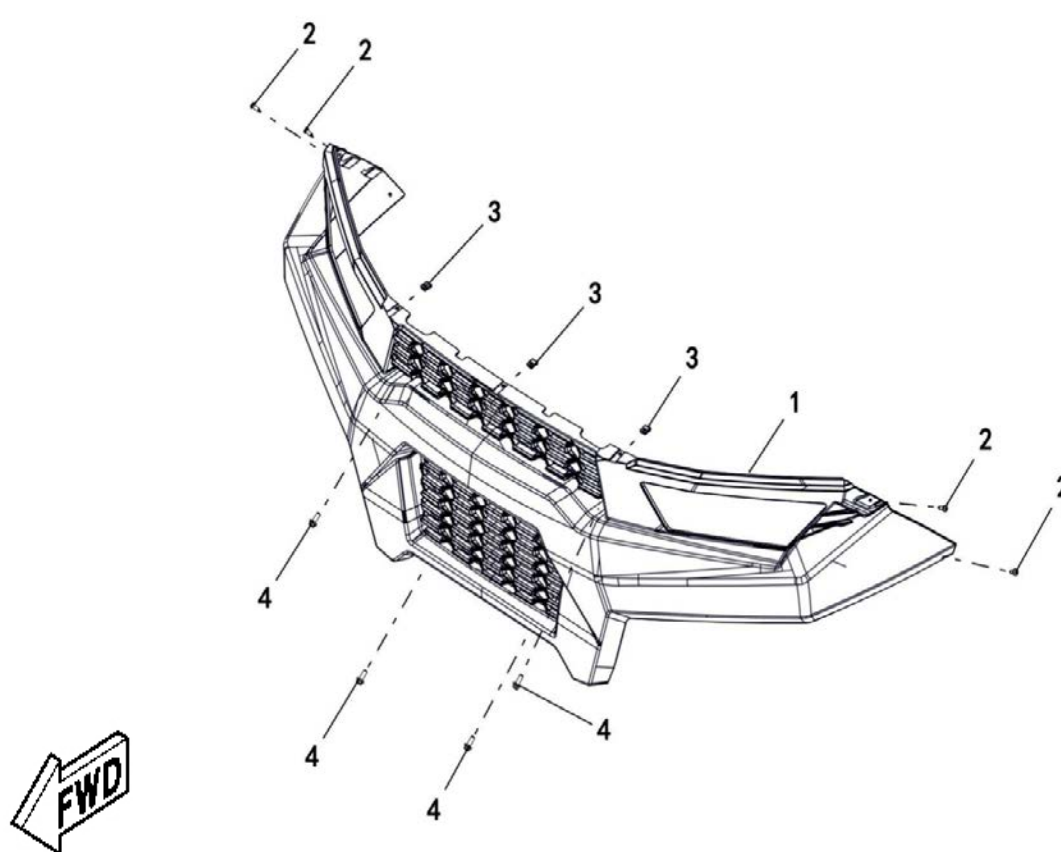

No.	PART No.	DESCRIPTION	QTY
1	47623	Grill, Front	1
2	47617	Hexagon Self-Tapping Screw M5X16	4


3	48314	Elastic Nut M5	3
4	48269	Hexagon Bolt M6X16	4

5. FENDER

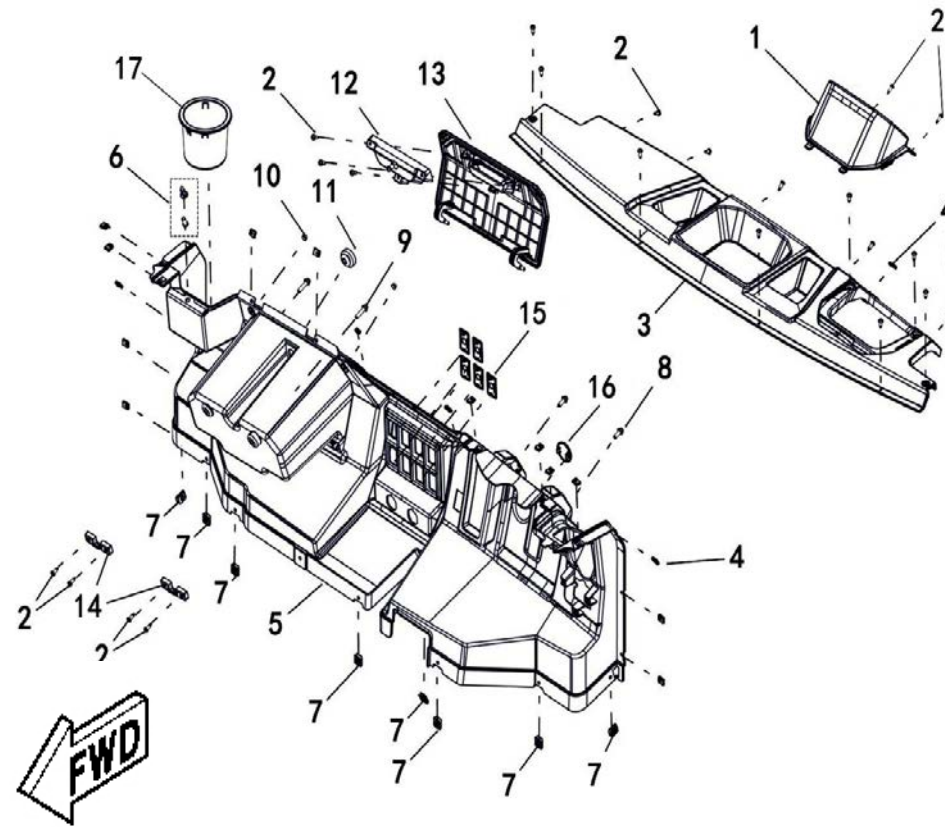


No.	PART No.	DESCRIPTION	QTY
1	47624	Instrument Cowl	1
2	47617	Hexagon Self-Tapping Screw M5X16	21
3	47625	Upper Panel, Instrument	1
4	48314	Spring Nut M5	18
5	47626	Bottom Panel, Instrument	1
6	47627	Expansion Screw	1
7	70960	Plastics Elastic Nut	8
8	11495	Bolt M6X16	2
9	48268	Bolt M6X25	2
10	48219	Cushion Rubber	2
11	48218	Grommet Rubber, Mount	1
12	48220	Fixed Support, Glovebox Lid	1
13	48217	Lid, Glovebox	1
14	48221	Retainer, Glovebox Lid	2
15	73048	Cap, Electrical Switch	5
16	48264	Cap, USB	1
17	47628	Cup Stand	1

5. FENDER

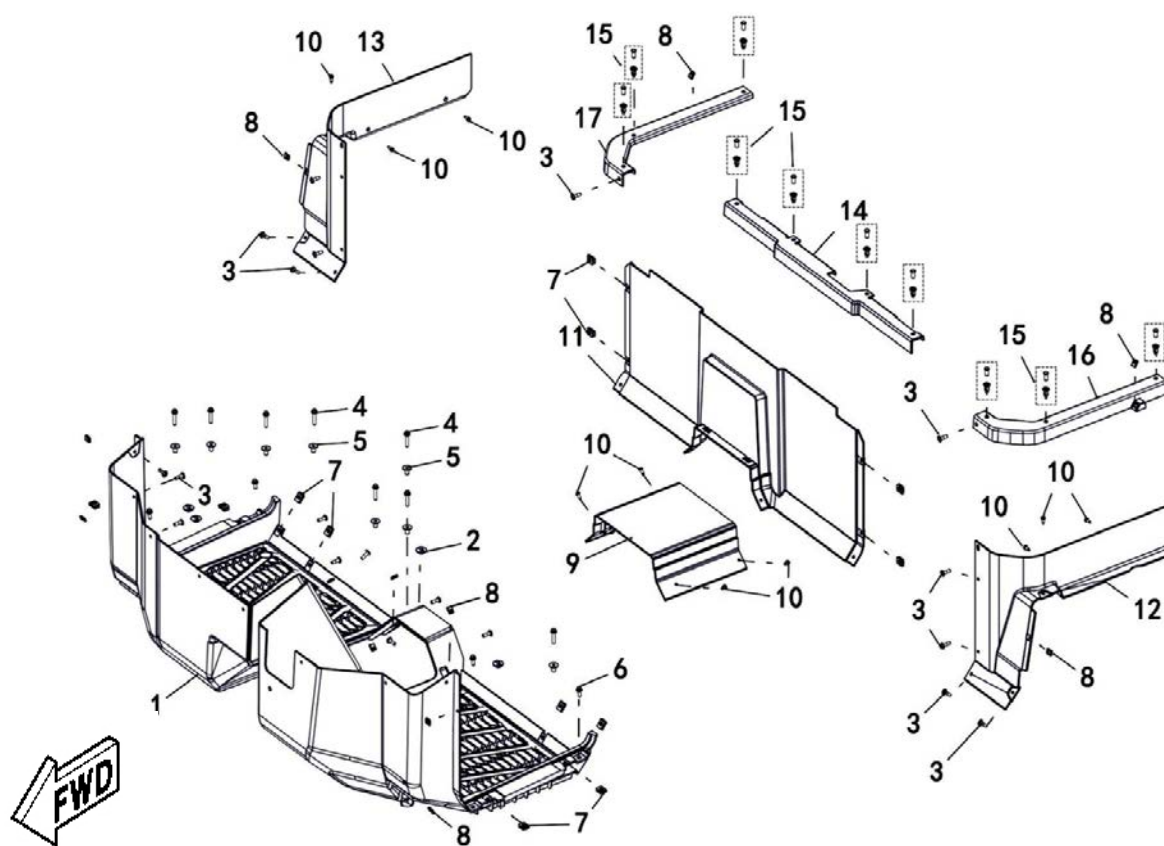


No.	PART No.	DESCRIPTION	QTY
1	47629	Foot Plate	1
2	22349	Rubber Plug	4
3	46193	Screw M6×20	19
4	11241	Hexagon Flange Bolt M6×30	8
5	48256	T - Shaped Liner Bushing	8
6	11495	Bolt M6X16	4
7	70960	Plastics Elastic Nut	12
8	48314	Spring Nut M5	12
9	48226	Lower Floor Cover, Footrest	1
10	47617	Hexagon Self-Tapping Screw M5X16	10
11	47630	Seat, Front Cover Plate	1
12	47631	Seat, Cover Plate, L	1
13	47632	Seat, Cover Plate, R	1
14	47633	Seat, Front Cover Plate, The Baffle	1
15	47627	Plastic Screw	10
16	47634	Seat, Cover Plate, L	1
17	47635	Seat, Cover Plate, R	1

5. FENDER

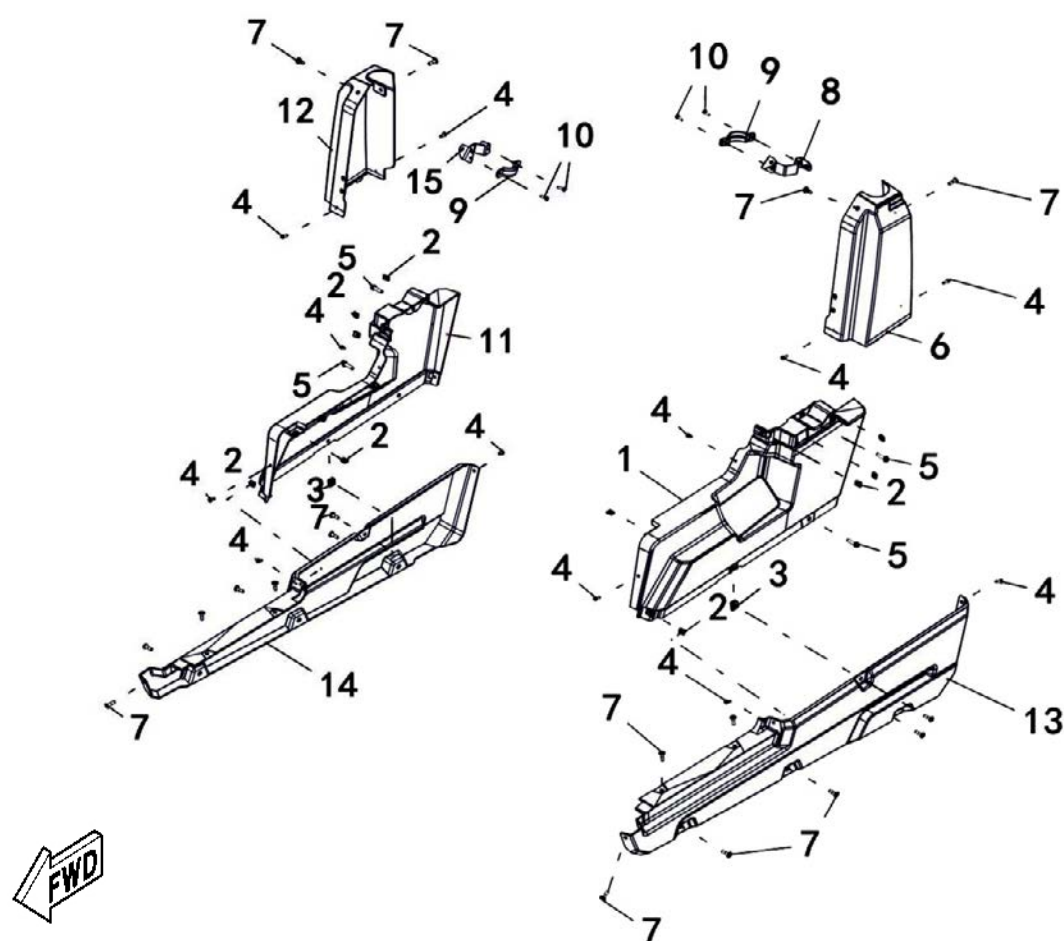


No.	PART No.	DESCRIPTION	QTY
1	47636	LH Panel,	1
2	48314	Spring Nut M5	10
3	70960	Spring Nut M6	2
4	47617	Hexagon Self-Tapping Screw M5X16	12
5	48268	Hexagon Flange Bolt M6x25	4
6	47637	LH Upper Panel,	1
7	46193	Screw M6x20	18
8	47638	Side Panel, Mounting Bracket, LH	1
9	48222	Side Panel, Mounting Buckle	2
10	11529	Screw With Cross Groove M5X16	4
11	47639	RH Panel	1
12	47640	RH Upper Panel	1
13	48234	LH Side Fender	1
14	48235	RH Side Fender	1
15	47641	Side Panel, Mounting Bracket, RH	1

5. FENDER

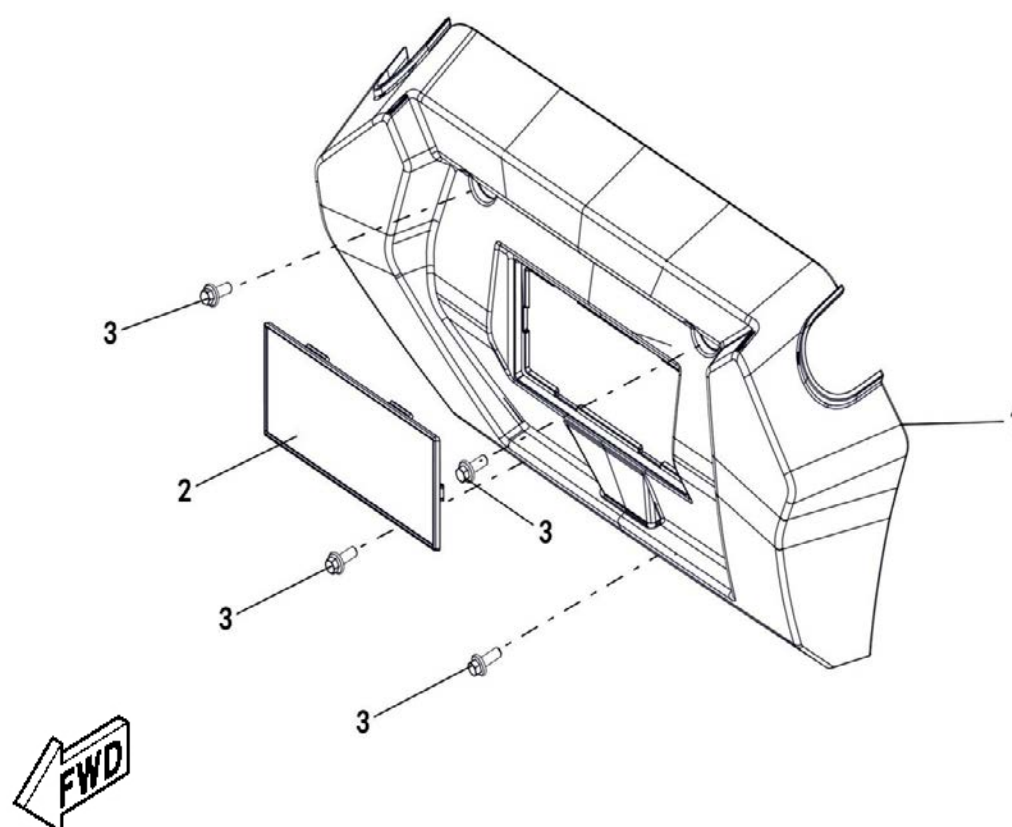


No.	PART No.	DESCRIPTION	QTY
1	47642	Bumper Guard	1
2	48201	Retractor Cover Plate	1
3	48269	Hexagon Flange Bolt M6×16	4

5. FENDER

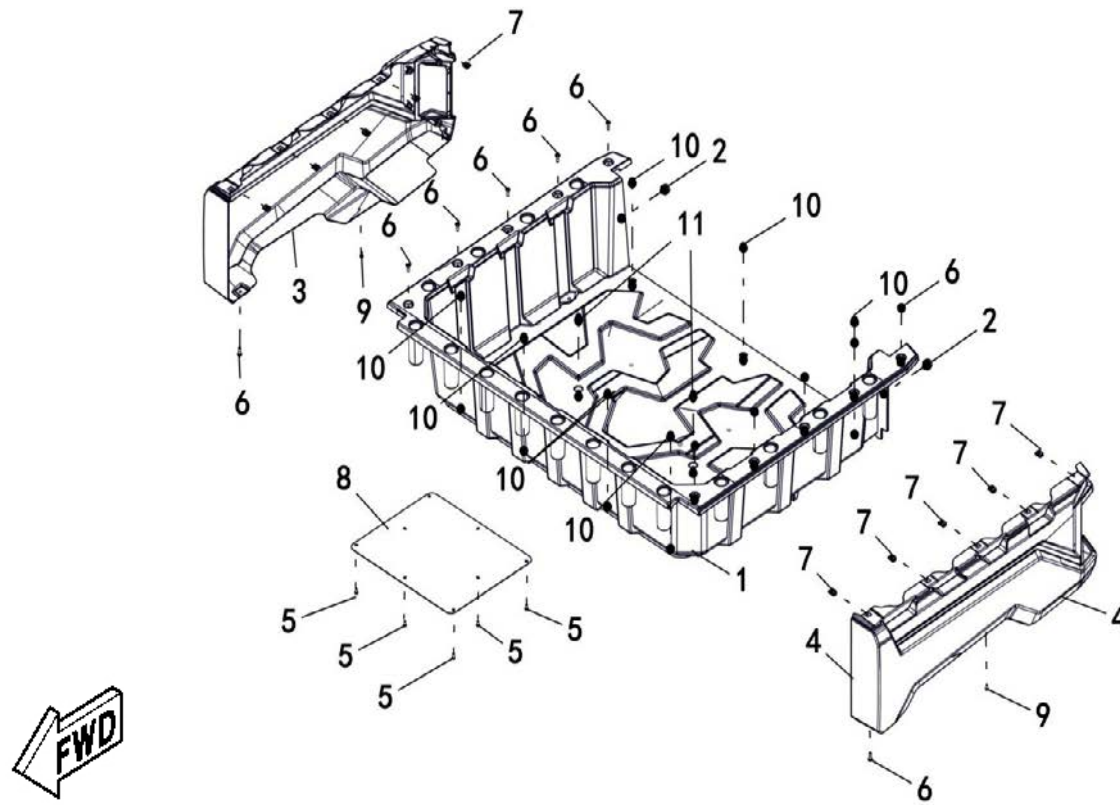


No.	PART No.	DESCRIPTION	QTY
1	47643	Box Floor Cover	1
2	48145	Box Rear Panel Rubber Stopper	2
3	47644	Box Cover,R Cover Cap	1
4	47645	Box Cover,L Cover Cap	1
5	48316	Self-Tapping Screw M5X16	8
6	46193	Screw M6×20	12
7	70960	Spring Nut M6	8
8	47646	Box thermal baffle	1
9	47617	Hexagon Self-Tapping Screw M5X16	2
10	48359	Disc brake disc erection bolt	7
11	47647	Case mounting bolts	2

5. FENDER

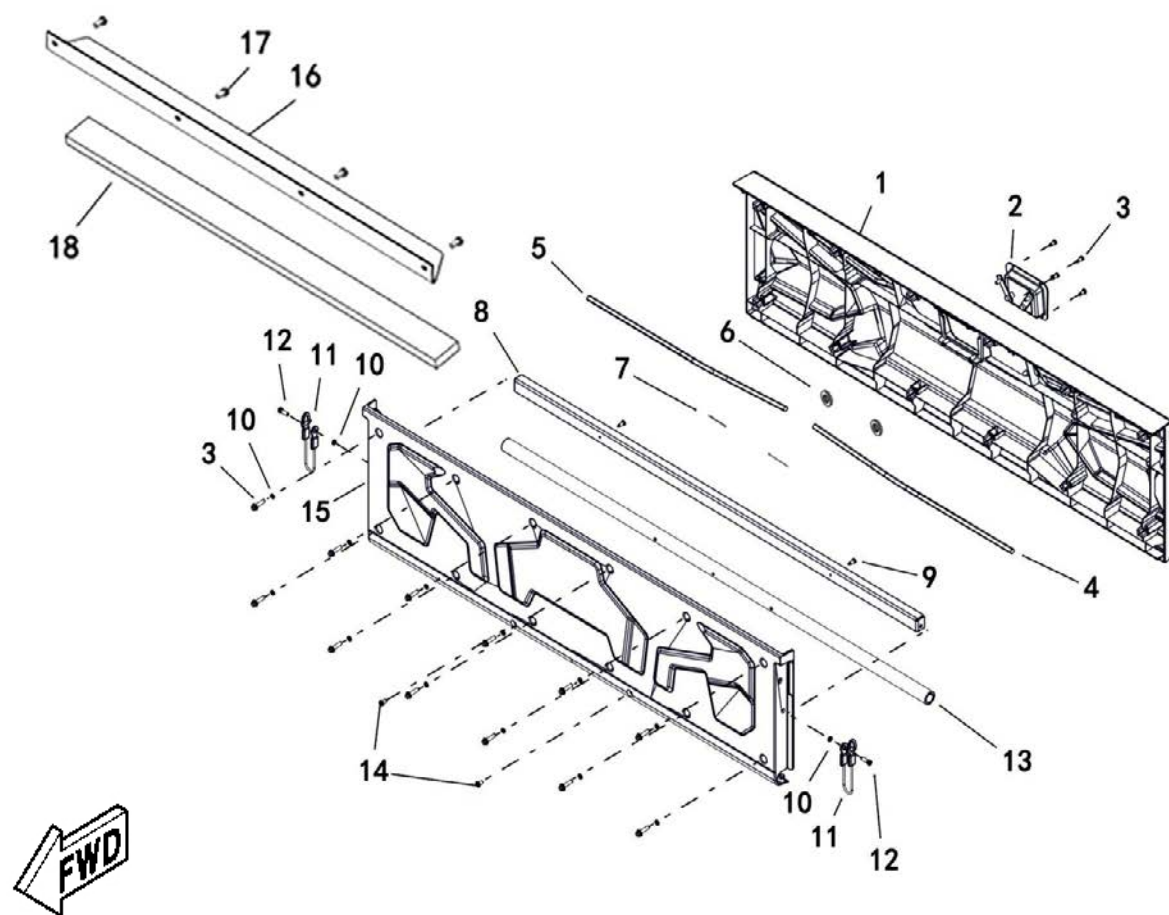


No.	PART No.	DESCRIPTION	QTY
1	47648	Box Rear Panel	1
2	48137	Box Rear Panel Handle	1
3	47617	Tapping Screw M5X16	16
4	47649	Box Rear Panel Lock Pin , L	1
5	47650	Box Rear Panel Lock Pin , R	1
6	48150	Handle Adjust Washer	2
7	48149	Handle Cotter Pin	2
8	47651	Box Rear Panel Mounting Plate	1
9	11243	Tapping Screw ST4.8×10	2
10	10308	Spring Lock Washer 6	2
11	47652	Upper Retainer Cable	2
12	47653	Inner Hexagonal Flat Head Step Bolt M6×20	2
13	47654	Box Rear Panel Axis	1
14	11151	Cross Recessed Countersunk Head Screw M6×12	2
15	47655	Box Inner Panel	1
16	48351	Plate, Box	1
17	46193	Bolt M6X20	4
18	48352	Sponge	1

5. FENDER

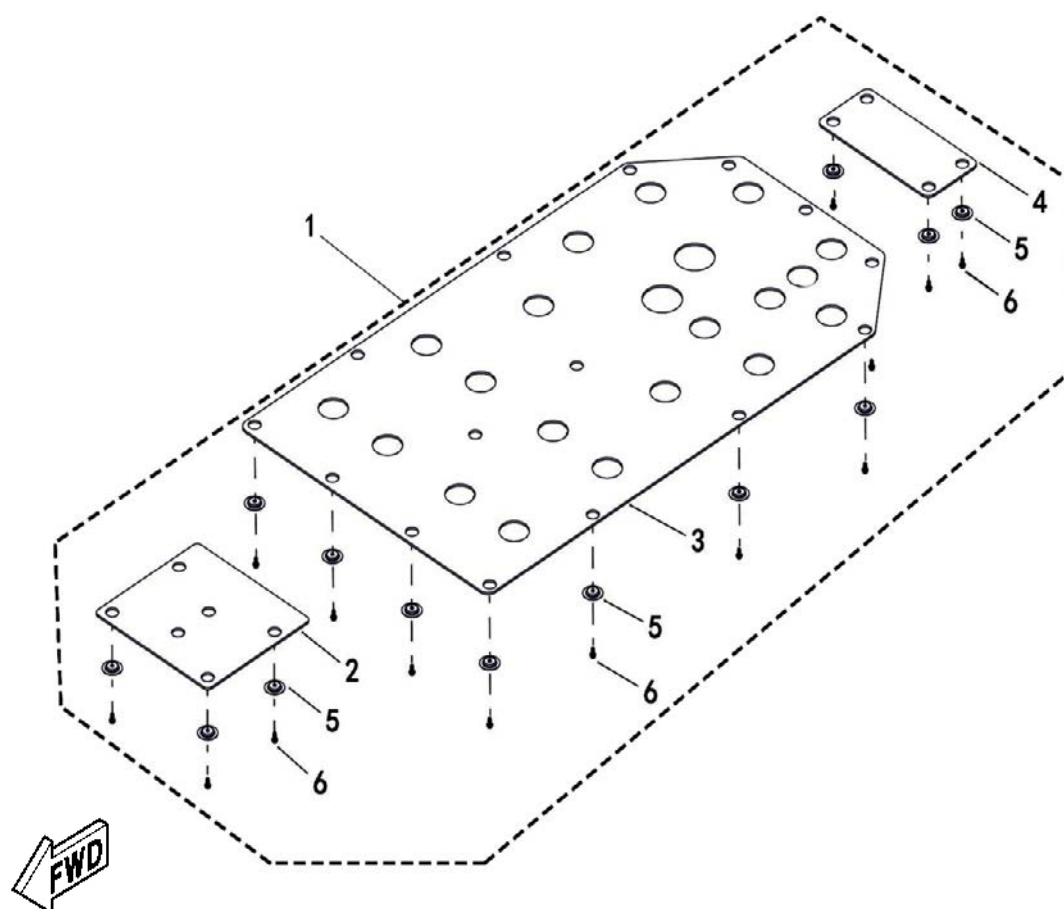


No.	PART No.	DESCRIPTION	QTY
1	47656	Plate	1
2	48277	Plate, Front	1
3	47657	Plate, Middle	1
4	47658	Plate, Rear	1
5	20331	Washer	23
6	11495	Bolt M6×16	23

5. FENDER

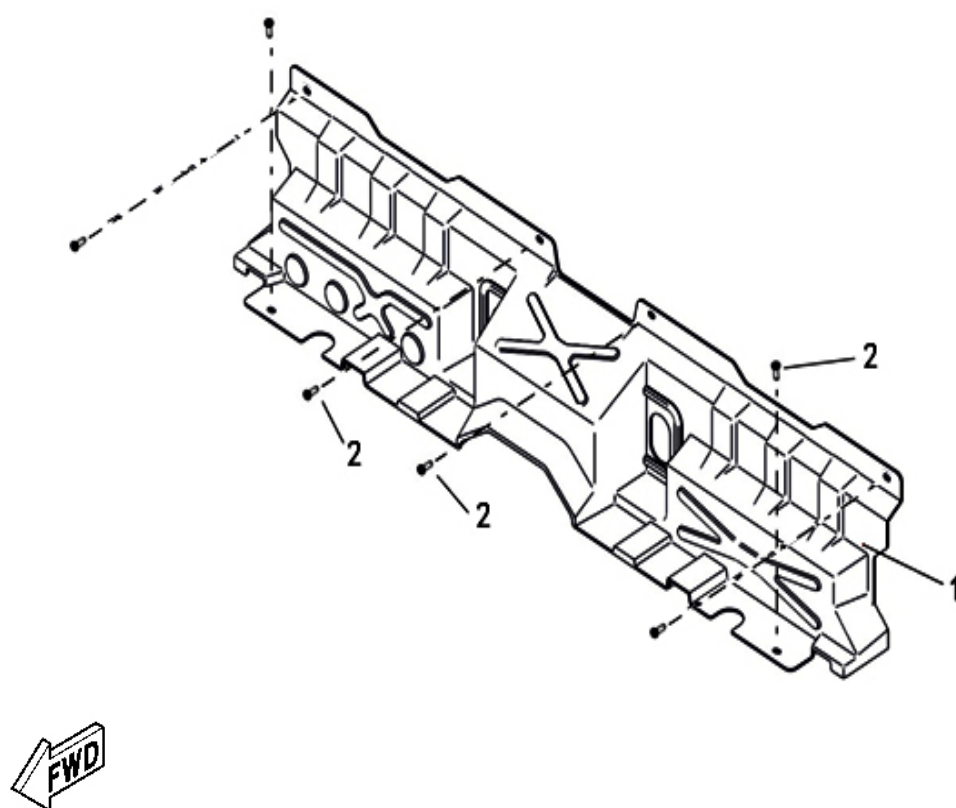


No.	PART No.	DESCRIPTION	QTY
1	47659	Heat Protection Plate, Seat	1
2	46193	Bolt M6×20	6

5. FENDER

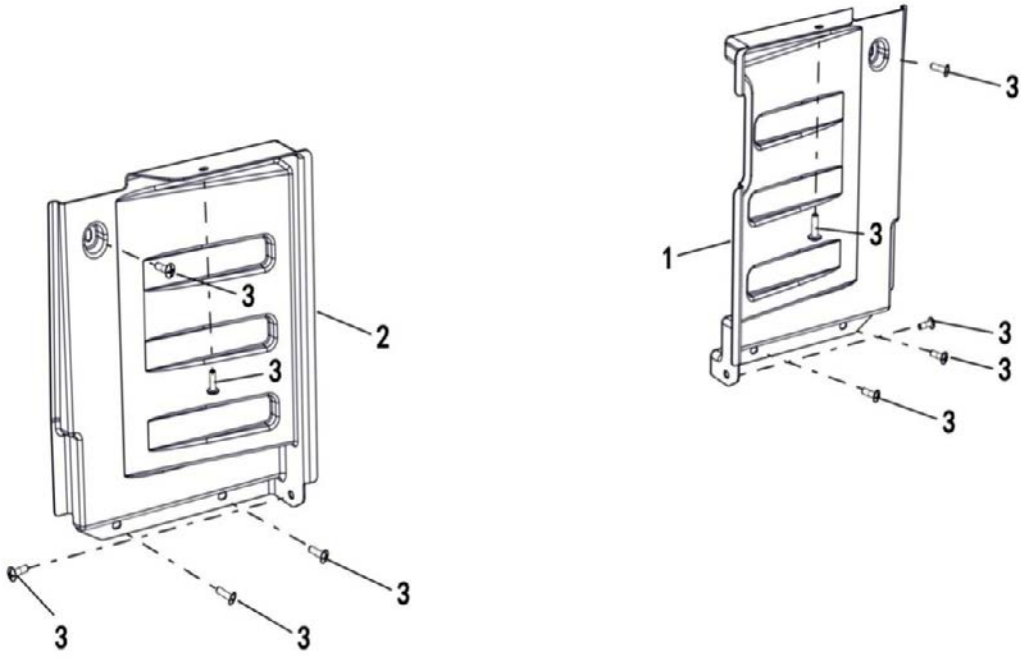


No.	PART No.	DESCRIPTION	QTY
1	47660	REAR FENDER,LH	1
2	47661	REAR FENDER,RH	1
3	46193	BOLT M6X20	10

6. SHOCK ABSORBER FRONT

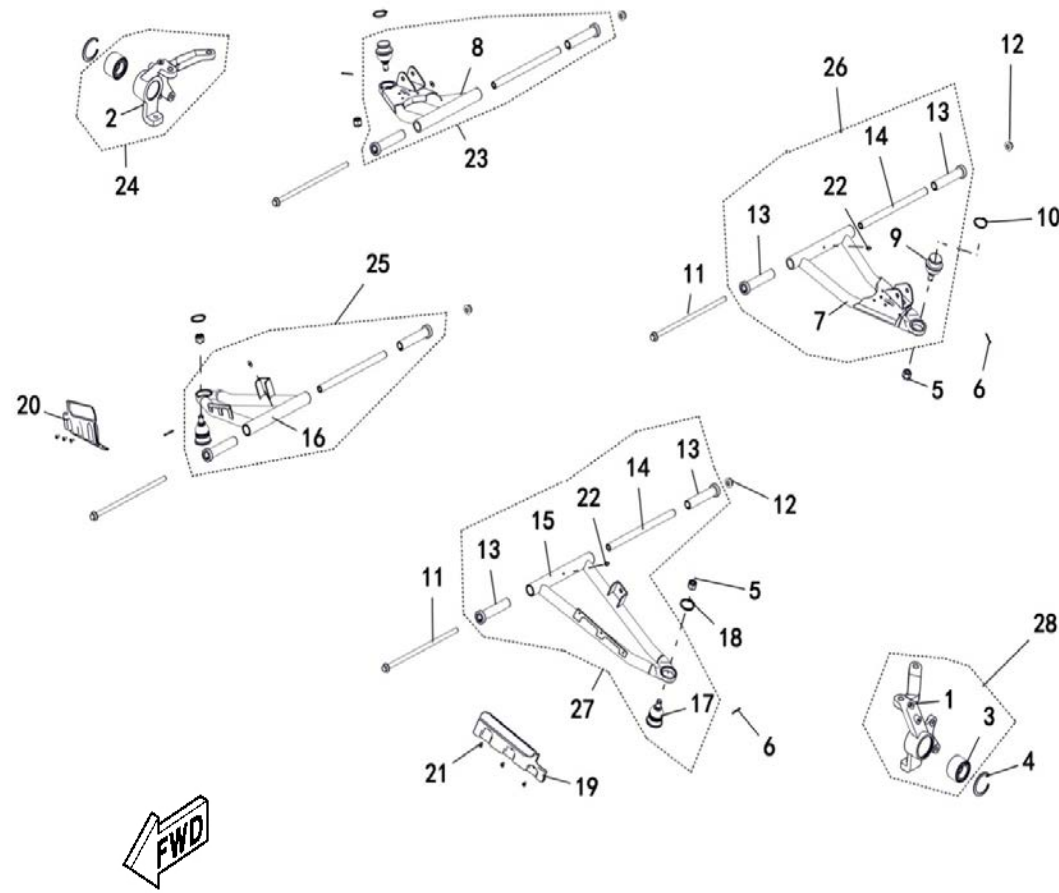


No.	PART No.	DESCRIPTION	QTY
1	48091	Carrier Bearing,Front,Lh	1
2	48094	Carrier Bearing,Front,Rh	1
3	48092	Bearing	2
4	11204	Circlip 55	2
5	70679	Nut M12×1.25	4
6	10792	Pin 3.2×22	4
7	47772	Arm Upper Frt Lh	1
8	47773	Arm Upper Frt Rh	1
9	48090	Ball Joint,Upper	2
10	11152	Circlip 32	2
11	48107	Scr Hxfl,Frt Arm	4
12	10795	Nut M10	4
13	48106	Bushing,Long	8
14	48105	Shaft Pivot	4
15	47774	Arm Lwr Frt Lh	1
16	47775	Arm Lwr Frt Rh	1
17	48089	Ball Joint,Lwr	2
18	70046	Circlip 34	2
19	84251	Cover, Arm Lwr Frt Lh	1
20	84252	Cover, Arm Lwr Frt Rh	1
21	11153	Screw M5X10	6
22	27074	Grease Fitting M6	4
23	47776	Arm Upper Frt Rh Assy	1
24	48336	Carrier Bearing Wheel Rh Assy	1
25	47777	Arm Lwr Frt Rh Assy	1
26	47778	Arm Upper Frt Lh Assy	1
27	47779	Arm Lwr Frt Lh Assy	1
28	48340	Carrier Bearing Wheel Lh Assy	1

6. SHOCK ABSORBER FRONT

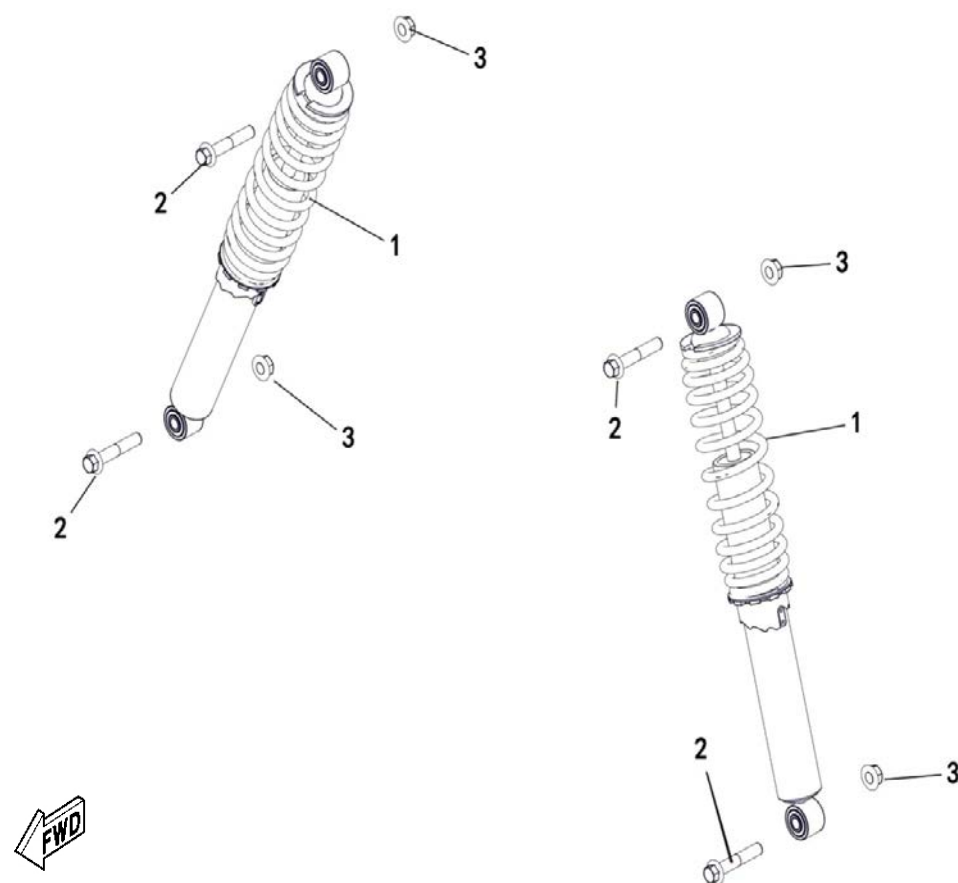


No.	PART No.	DESCRIPTION	QTY
1	47662	FRONT SHOCK ABSORBER ASSY	2
2	11238	BOLT M10X1.25X57	4
3	10795	NUT M10	4

7. SHOCK ABSORBER REAR

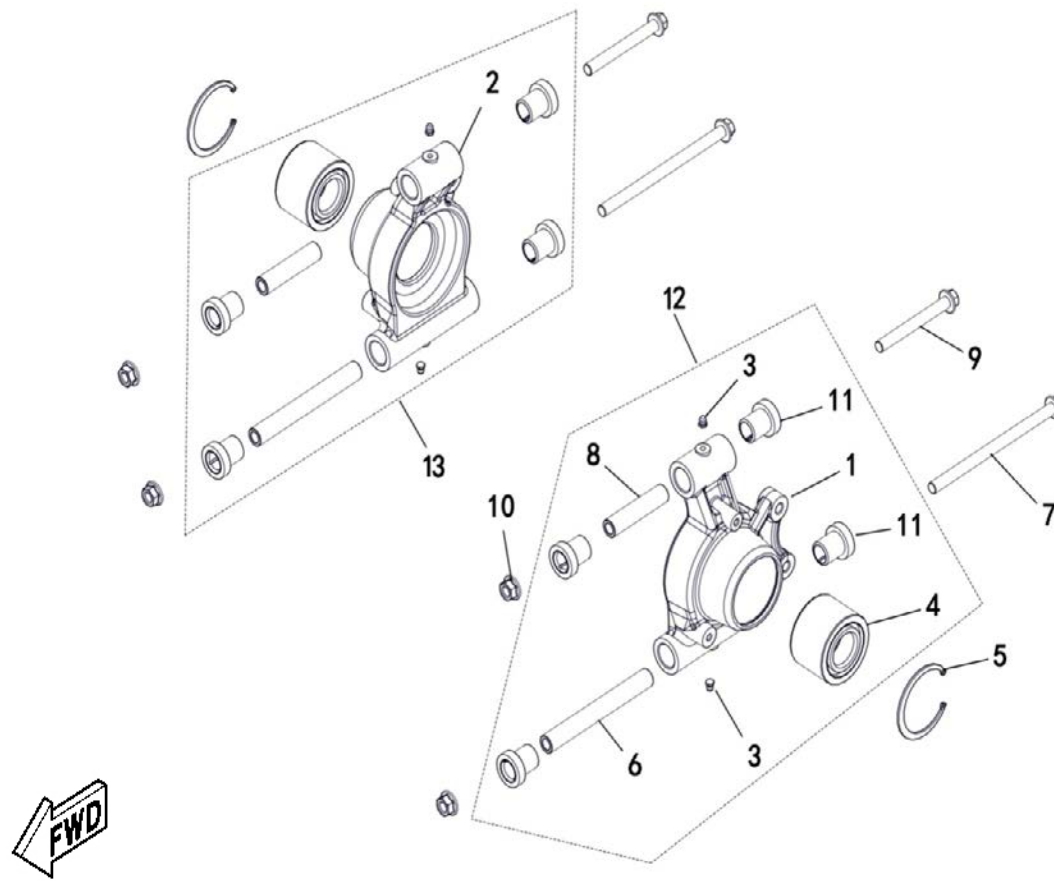


No.	PART No.	DESCRIPTION	QTY
1	48164	CARRIER BEARING WHEEL REAR LH	1
2	48165	CARRIER BEARING WHEEL REAR RH	1
3	27074	GREASE FITTING M6	4
4	48077	BEARING	2
5	11155	CIRCLIP 63	2
6	48161	SHAFT PIVOT ,LWR	2
7	48162	SCR HXFL,REAR ARM,LWR	2
8	48160	SHAFT PIVOT ,UPPER	2
9	11146	BOLT M10X1.25X90	2
10	10795	NUT M10	4
11	48070	BUSHING,SHORT	8
12	48345	CARRIER BEARING WHEEL REAR LH ASSY	1
13	48346	CARRIER BEARING WHEEL REAR RH ASSY	1

7. SHOCK ABSORBER REAR

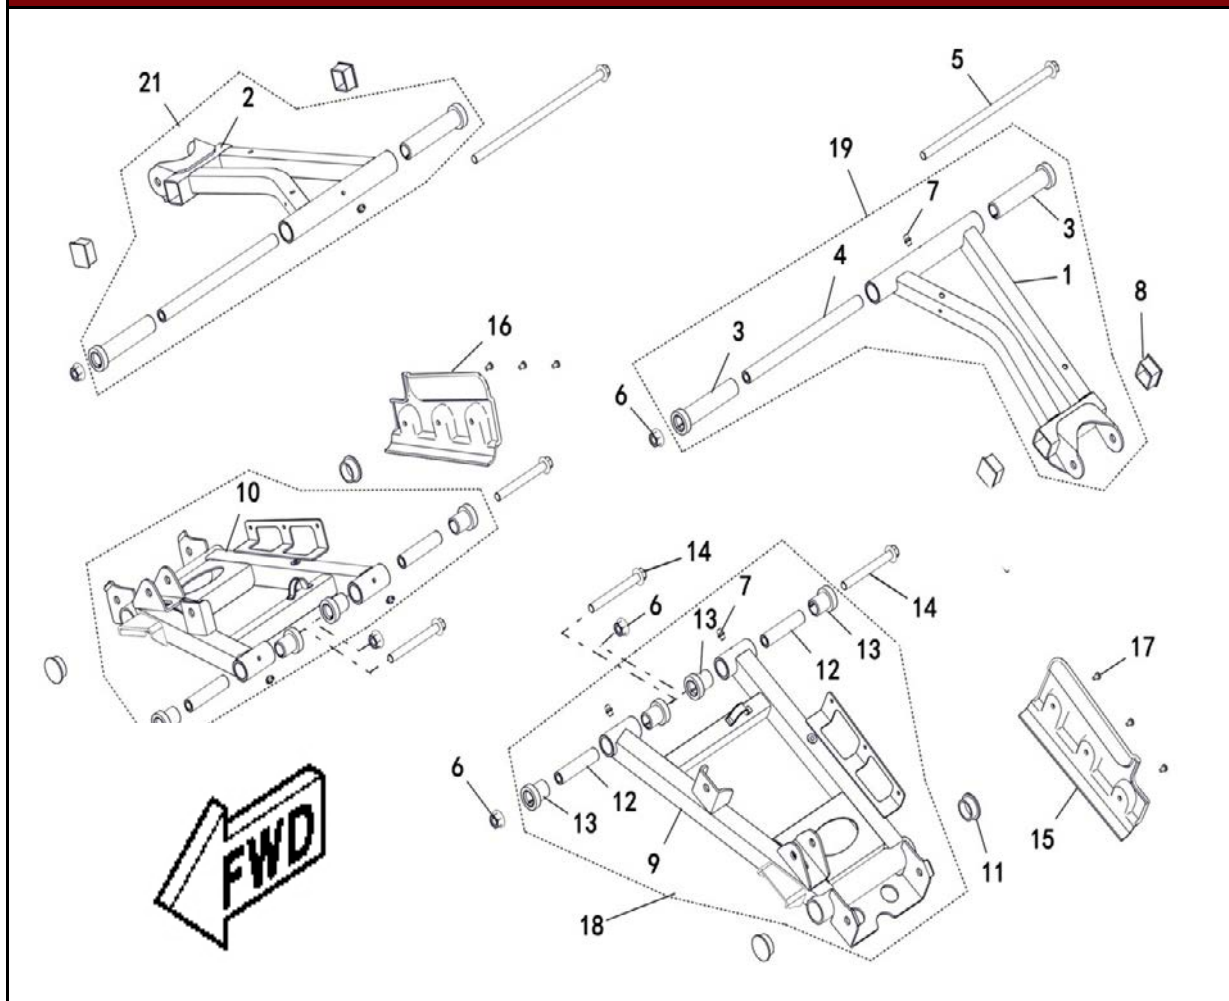


No.	PART No.	DESCRIPTION	QTY
1	47772	ARM UPPER REAR LH	1
2	47773	ARM UPPER REAR RH	1
3	48106	BUSHING, LONG	4
4	48068	SHAFT, REAR UPPER ARM	2
5	48071	SCR HXFL, REAR UPPER ARM	2
6	11287	NUT M10	6
7	27074	GREASE FITTING M6	6
8	70287	SQUARE RUBBER PLUG	4
9	47774	ARM LWR REAR LH	1
10	47775	ARM LWR REAR RH	1
11	48073	PLUG	4
12	48069	SHAFT, REAR LWR ARM	4
13	48070	BUSHING, SHORT	8
14	11354	BOLT M10X1.25X90	4
15	84251	COVER, ARM LWR REAR LH	1
16	84252	COVER, ARM LWR REAR RH	1
17	11153	SCREW M5X10	6
18	47776	ARM LWR REAR LH ASSY	1
19	48342	ARM UPPER REAR LH ASSY	1
20	47777	ARM LWR REAR RH ASSY	1
21	48344	ARM UPPER REAR RH ASSY	1

7. SHOCK ABSORBER REAR

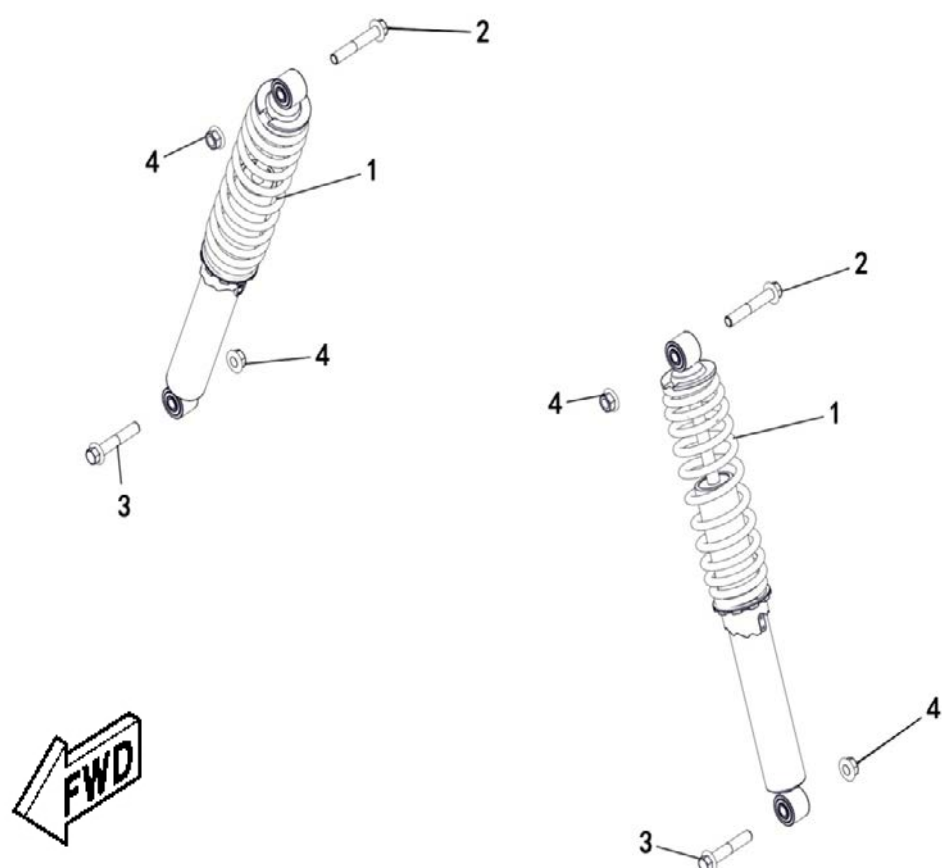


No.	PART No.	DESCRIPTION	QTY
1	47778	REAR SHOCK ABSORBER ASSY	2
2	10120d	BOLT M10X1.25X62	2
3	11238	BOLT M10X1.25X57	2
4	11287	NUT M10	4

7. SHOCK ABSORBER REAR

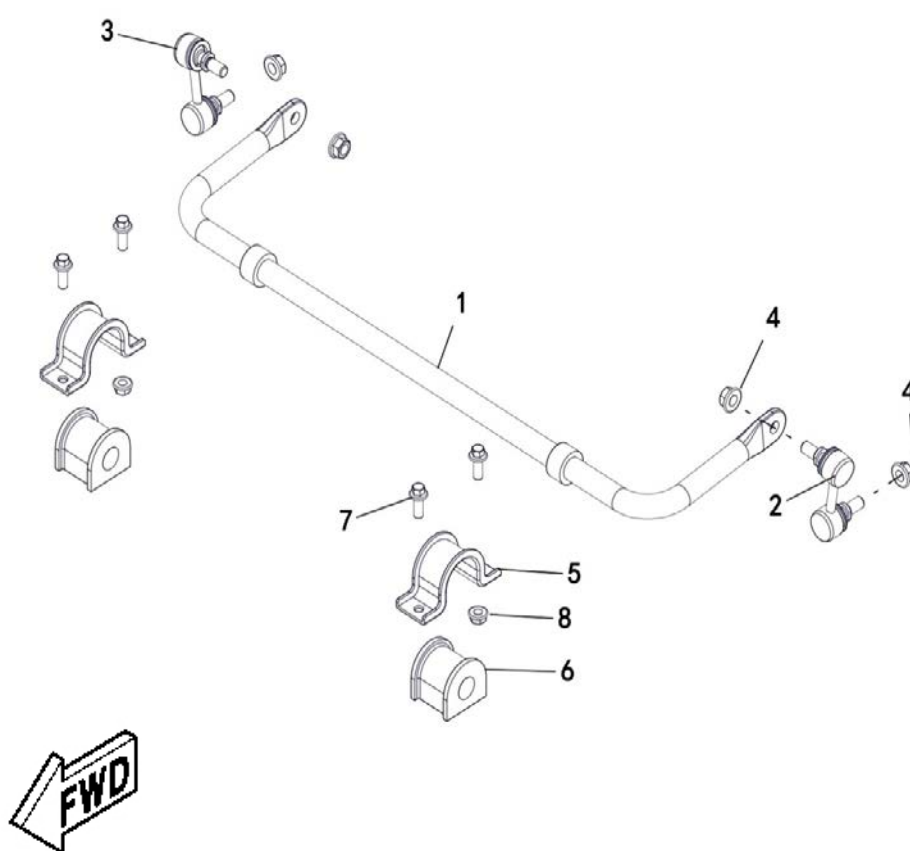


No.	PART No.	DESCRIPTION	QTY
1	48079	STABILIZER BAR	1
2	48081	ASM-LINKAGE,STABILIZER BAR,LH	1
3	48080	ASM-LINKAGE,STABILIZER BAR,RH	1
4	10795	NUT M10	4
5	27090	SHIELD-BUSHING	2
6	27091	BUSHING STABILIZER	2
7	10783	BOLT M8X20	4
8	11145	NUT M8	2

8. WHEEL FRONT

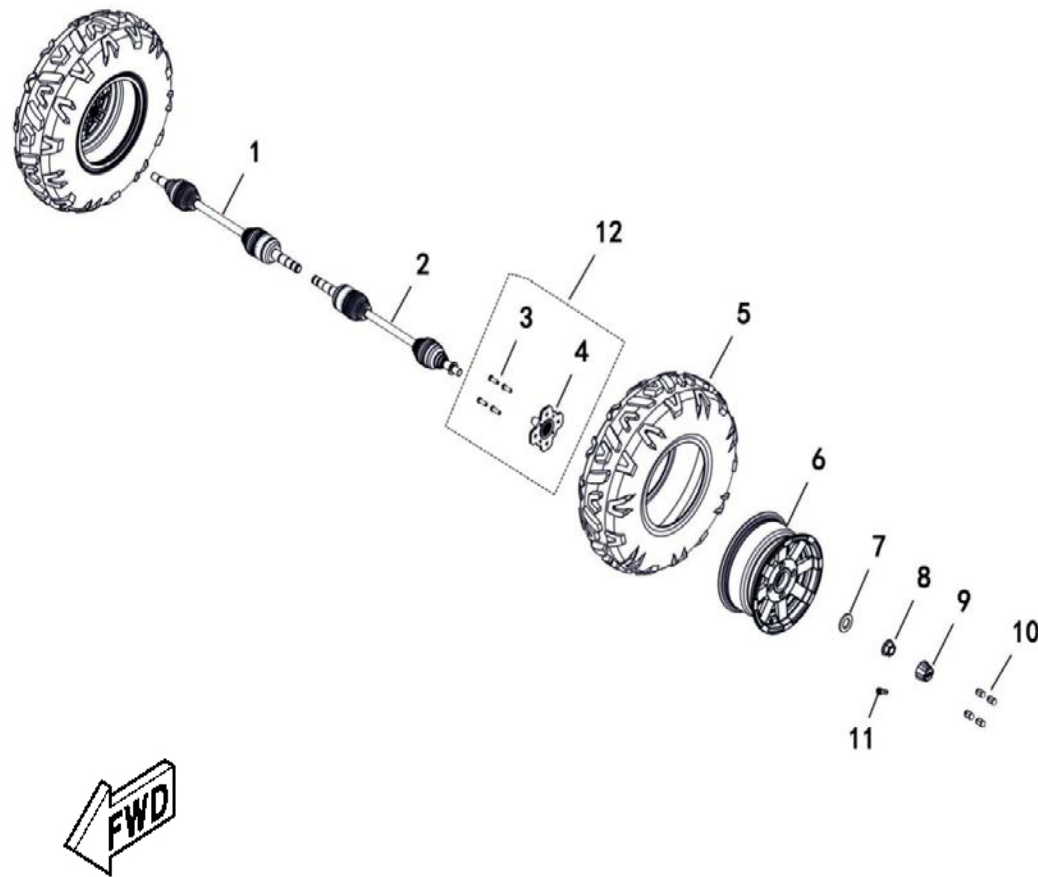


No.	PART No	DESCRIPTION	QTY
1	48355	FRONT RIGHT DRIVE AXLE	1
2	48356	FRONT LEFT DRIVE AXLE	1
3	48155	BOLT M10X1.25	8
4	48156	HUB ASSY SHRT	2
5	47663	FRONT TIRE	2
6	47664	WHEEL SUB-ASSY	2
7	48163	WASHER 24	2
8	48157	NUT M24, WHEEL	2
9	47665	CAP, WHEEL SUB-ASSY	2
10	48154	NUT M10×1.25, WHEEL	8
11	20807a	VALVE, RIM (TR412)	2
12	48347	HUB FOR STEEL WHEEL ASSY	2

9. WHEEL REAR

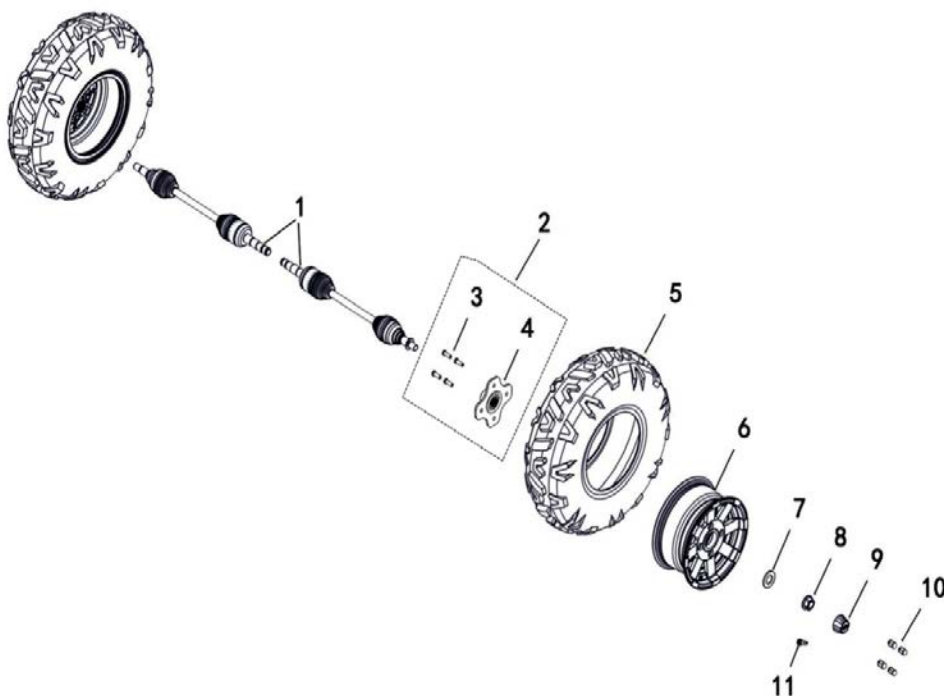


No.	PART No.	DESCRIPTION	QTY
1	47666	REAR DRIVE AXLE ASSEMBLY	2
2	47667	HUB FOR STEEL WHEEL ASSY	2
3	48155	BOLT M10X1.25	8
4	47668	HUB ASSY SHRT	2
5	46289	TIRE REAR	2
6	47669	WHEEL SUB-ASSY	2
7	48163	WASHER 24	2
8	48157	NUT M24, WHEEL	2
9	47665	CAP, WHEEL SUB-ASSY	2
10	48154	NUT M10×1.25, WHEEL	8
11	20807a	VALVE, RIM (TR412)	2

10. SHIFT ROD

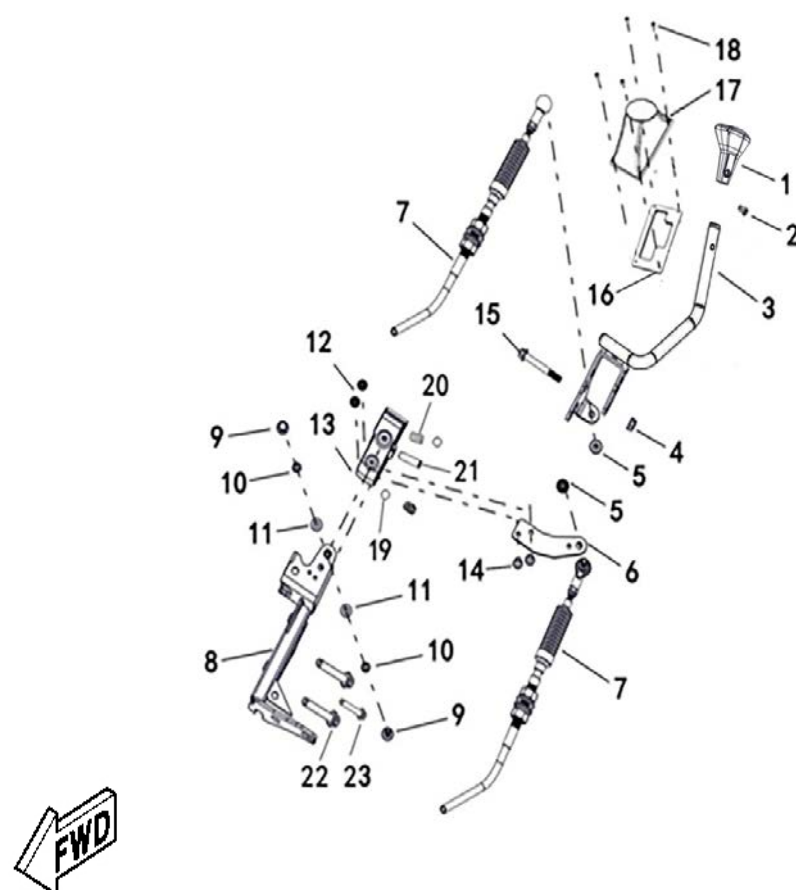


No.	PART No.	DESCRIPTION	QTY
1	47670	KNOB SHIFTER	1
2	73072	SCREW M5X10	1
3	47671	SHIFTER LEVER WELDING ASSEMBLY	1
4	10882	NUT M8	1
5	10882	NUT M8	2
6	47672	SHIFT CABLE HOLDER	1
7	47673	SHIFT PUSH CABLE ASSEMBLY	2
8	47674	SHIFT BRACKET WELDING ASSEMBLY	1
9	46230	LIMIT BOLT	2
10	10106	WASHER SPRING 8	2
11	10068	WASHER 8	2
12	11233	NUT M6	2
13	46237	SHIFT INNER CORE	1
14	11459	BOLT M6×20	2
15	11643	BOLT M8×60	1
16	47676	SHIFT TRIM MOUNTING PLATE	1
17	47677	SHIFT TRIM	1
18	11169	SCREW M10X1.25X32	4
19	46236	STEEL BALL	2
20	46235	SPRING	2
21	47678	SPACER BUSH	1
22	10781	BOLT M8×35	2
23	11236	BOLT M8×16	1

11. FRAME ROOF

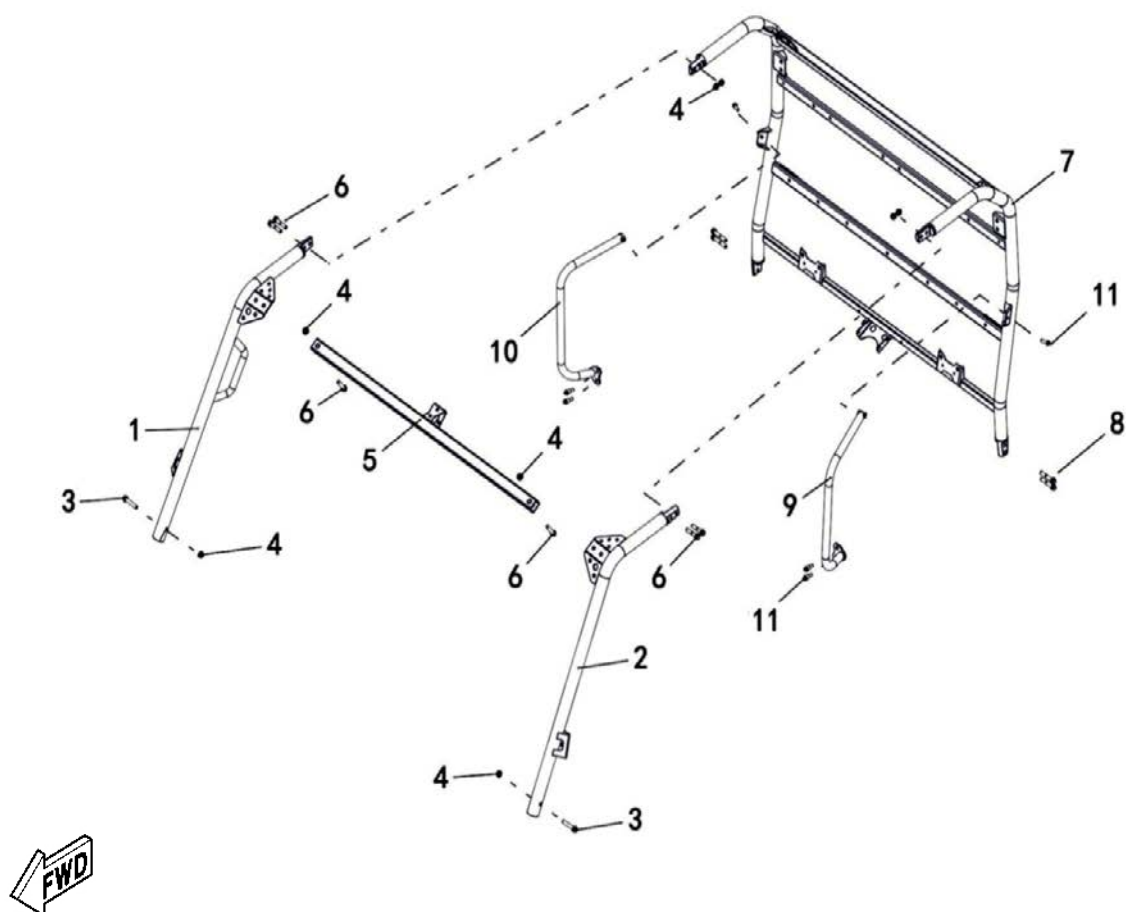


No.	PART No.	DESCRIPTION	QTY
1	47679	MEMBER,ROOF FRAME ,FRONT RH	1
2	47680	MEMBER,ROOF FRAME ,FRONT LH	1
3	11238	BOLT M10X57	2
4	10795	NUT M10	8
5	47681	MEMBER,ROOF FRAME ,FRONT	1
6	11239	BOLT M10X50	6
7	47682	MEMBER,ROOF FRAME ,REAR	1
8	11240	BOLT M10X1.25X35	4
9	47683	HANDREST PIPE ,LH	1
10	47684	HANDREST PIPE ,RH	1
11	10059	BOLT M8X25	6

12. REAR AXLE INSTALLATION

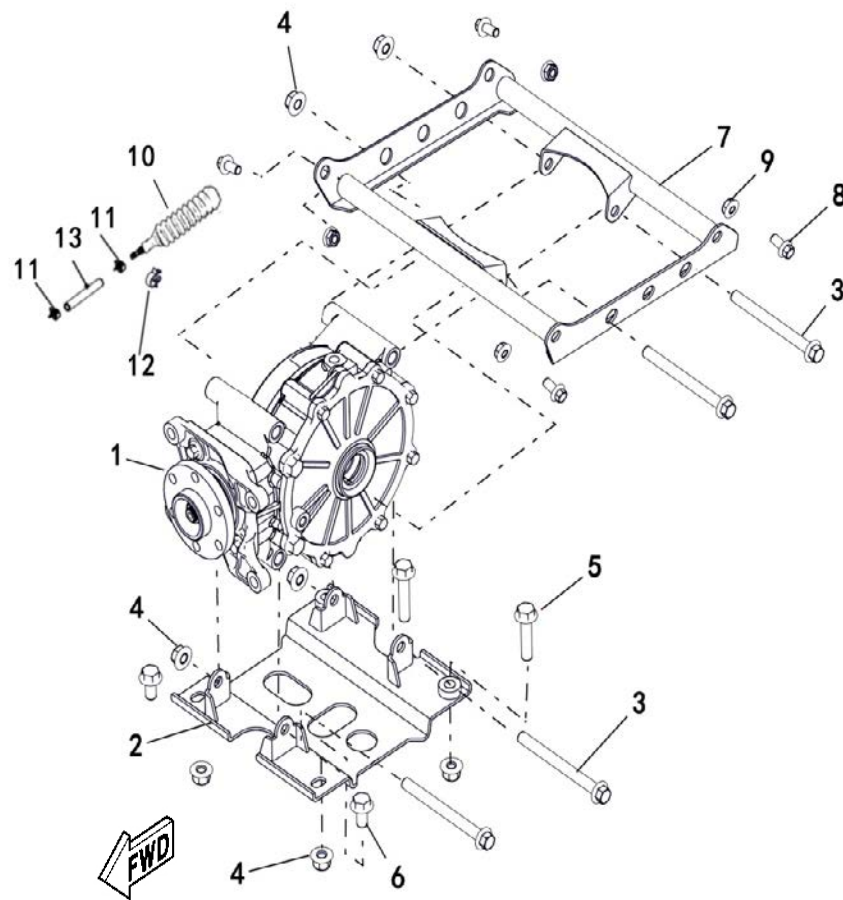


No.	PART No	DESCRIPTION	QTY
1	47685	REAR AXLE	1
2	47686	BRACKET, LWR, REAR AXLE	1
3	11050	BOLT M10×1.25×110	4
4	10795	NUT M10	10
5	11552	BOLT M10×1.25×50	2
6	11237	BOLT M10×1.25×20	2
7	47687	BRACKET, UPPER, REAR AXLE	1
8	10814	BOLT M8×20	4
9	11145	NUT M8	4
10	48377	BREATHING AIR	1
11	25107	CLIP	2
12	48191	BUCKLE	1
13	21111	VENT PIPE	1

16. FRONT AND REAR KNUCKLE SYSTEM

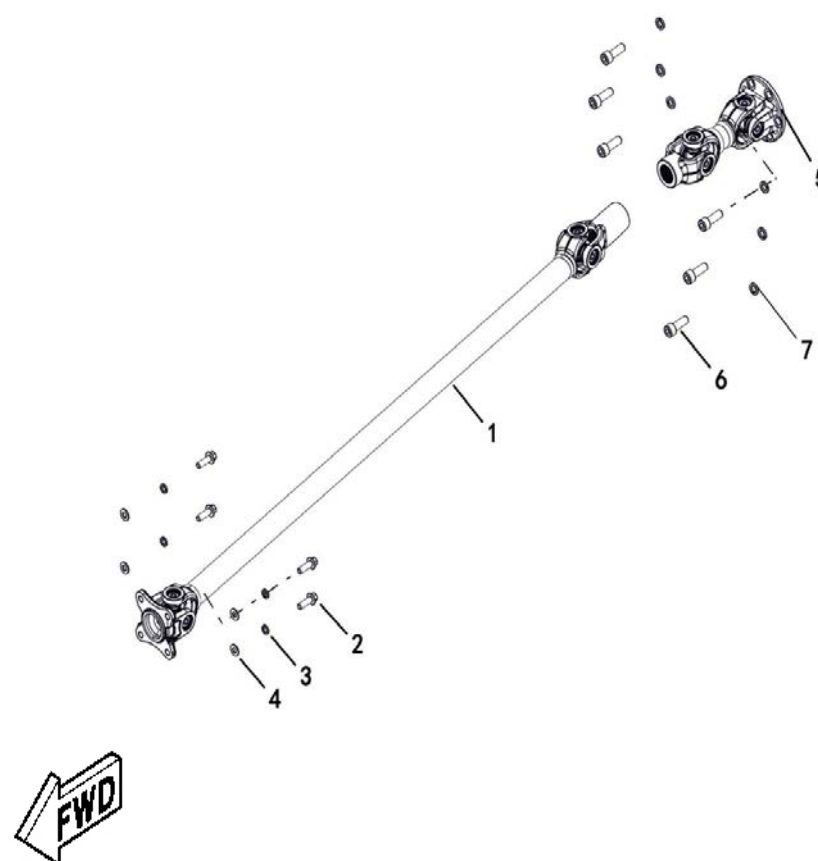


No.	PART No.	DESCRIPTION	QTY
1	47688	FRONT PROP SHAFT	1
2	11249	BOLT M8X1.0X25	4
3	10106	WASHER SPRING 8	4
4	10068	WASHER 8	4
5	47689	REAR PROP SHAFT	1
6	11169	BOLT M10X1.25X32	6
7	11165	WASHER SPRING 10	6

18. ELECTRICAL SYSTEM

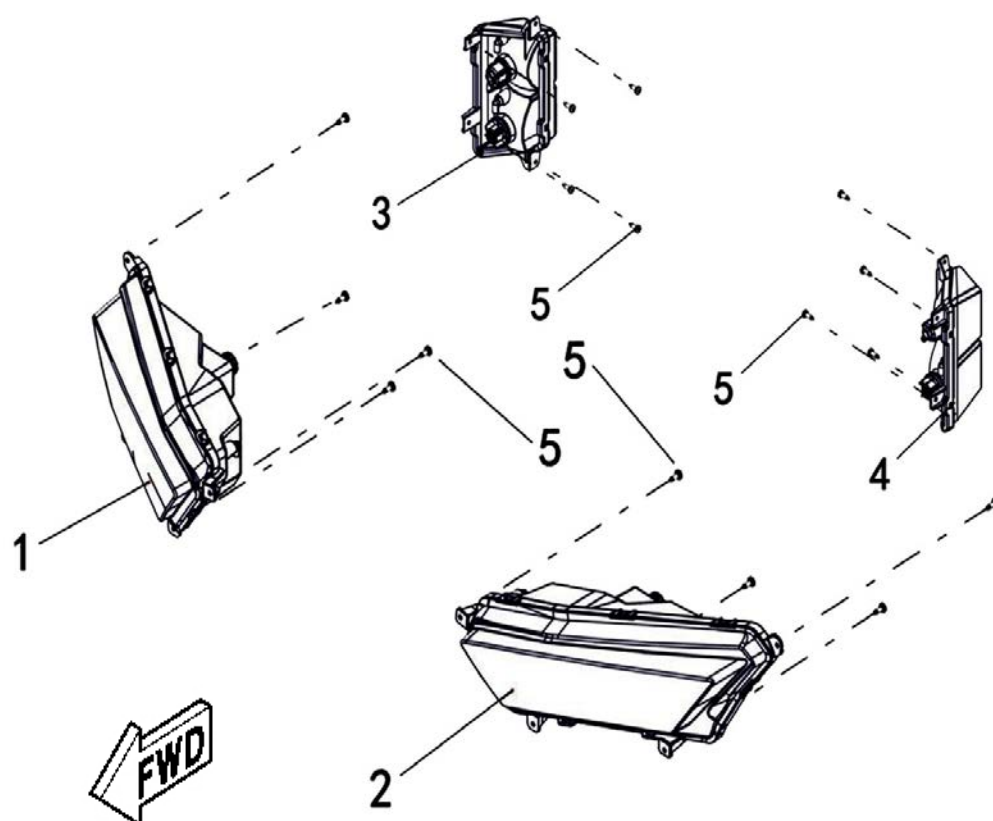


No.	PART No.	DESCRIPTION	QTY
1	47690	HEADLIGHT, R	1
2	47691	HEADLIGHT, L	1
3	47692	TAILLIGHT, R	1
4	47693	TAILLIGHT, L	1
5	48316	TAPPING SCREW M5 ×16	16

18. ELECTRICAL SYSTEM

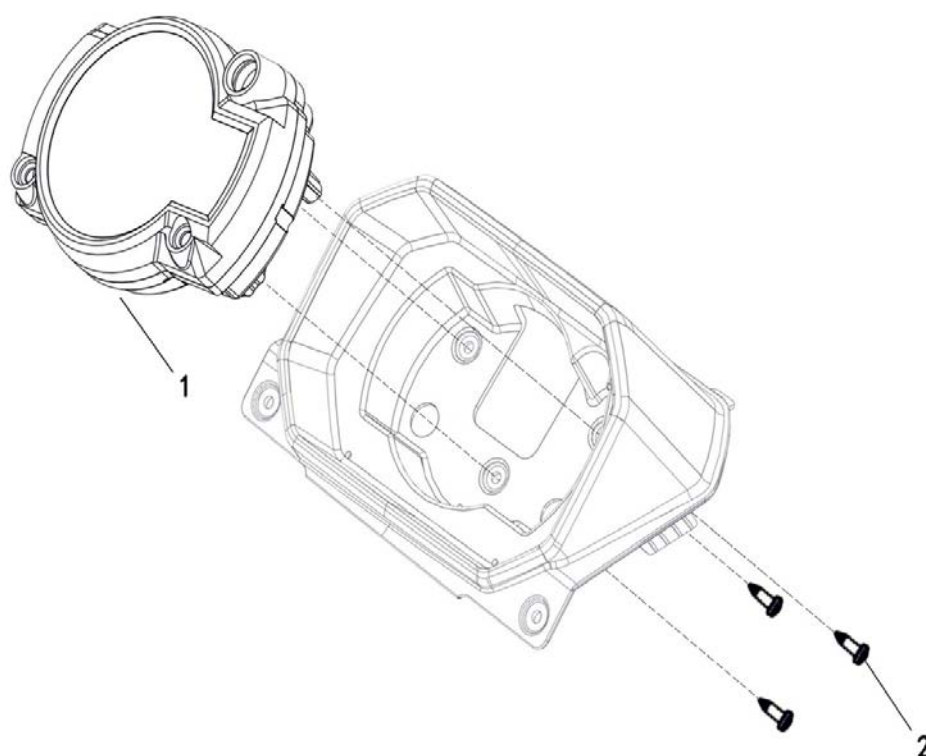

No.	PART No.	DESCRIPTION	QTY
1	47694	BRACKET, METER	1
2	48316	TAPPING SCREW M5 ×16	3


18. ELECTRICAL SYSTEM

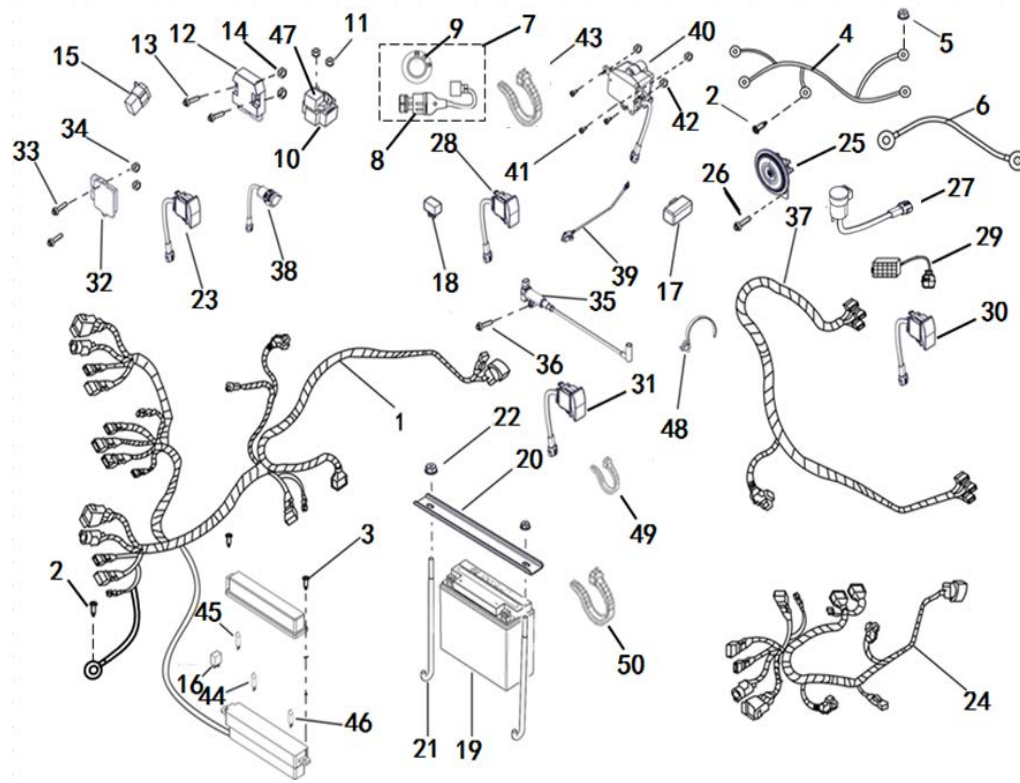

No.	PART No.	DESCRIPTION	QTY
1	47695	WIRING HARNESS	1
2	11495	BOLT M6×16	2
3	48316	TAPPING SCREW M5 ×16	2
4	47696	CABLE OF STARTING 1	1
5	11520	NUT M6	1
6	47697	CABLE OF STARTING 2	1
7	48397	LOCK ASSY	1
8	48295	LOCK	1
9	48551	LOCK DECAL	1
10	71602	STARTING RELAY	1
11	11644	NUT M6	2
12	71603	RECTIFIER REGULATOR	1
13	11496	BOLT M6×30	2
14	11454	NUT M6	2
15	71976	REVERSING BUZZER	1
16	35083	AUXILIARY RELAY	3
17	71474	EFI RELAY	1
18	26272	PROTECTOR	2
19	70407a	BATTERY (12V 18AH)	1
20	48327	PLATE FOR BATTERY	1
21	47699	FASTENING ROD OF BATTERY	2
22	11145	NUT M8	2
23	47700	HIGH/LOW BEAM SWITCH	1
24	47701	WIRING HARNESS FOR EFI	1
25	70404	HORN	1
26	11495	BOLT M6×16	1
27	27438	FLASHER RELAY ASSY	1
28	47072	TURNING LIGHTS SWITCH	1
29	73439	WIRE, TURNING LIGHTS SWITCH	1
30	48298	HORN SWITCH	1
31	73547	TRACTOR SWITCH	1
32	27909	ECU	1
33	10183B	BOLT M6×16	2
34	11454	NUT M6	2
35	70822D	IGNITION COIL	1
36	11260	BOLT M6×40	1
37	47702	TAILLIGHT TRANSITION LINE	1
38	36120	ACCESSORY SOCKET ASSY FOR USB	1
39	48293	PARKING SWITCH	1
40	47703	4WD SWITCH	1
41	48316	TAPPING SCREW M5 ×16	3
42	48314	SPRING NUT M5	3
43	47704	TIE	3
44	48360	5 AMP FUSE	2


45	48361	10 AMP FUSE	2
46	48362	15 AMP FUSE	2
47	84275	30 AMP FUSE	1
48	48294	TIE	38
49	11334	TIE	7
50	55016	TIE	20

19. BRAKING SYSTEM

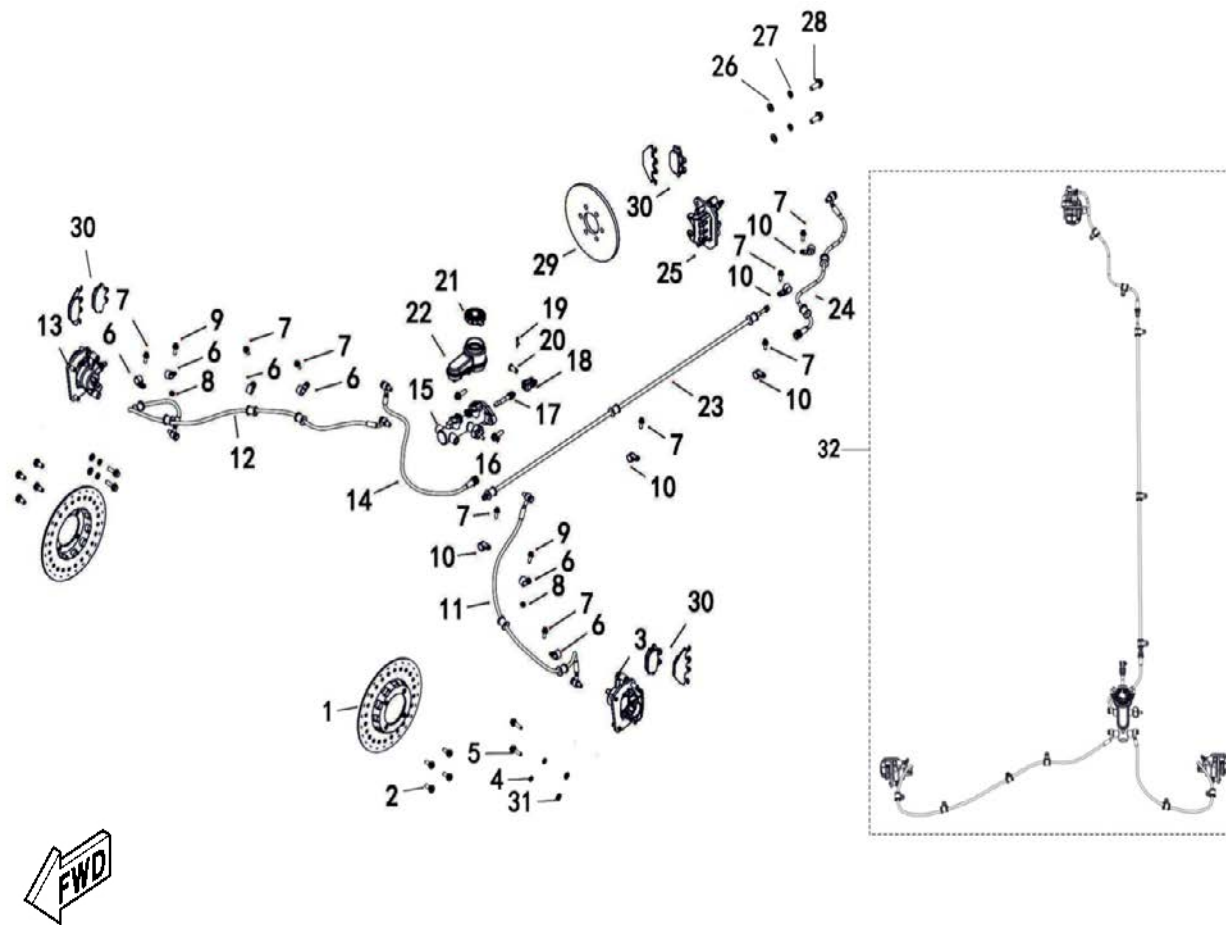


No.	PART No.	DESCRIPTION	QTY
1	48181	BRAKE ROTOR, DRIVER	2
2	48000	BOLT,BRAKE ROTOR	8
3	48173	BRAKE CALIPER, LEFT,FRONT	1
4	10106	SPRING 8	4
5	11466	BOLT M8×25 (10.9)	4
6	48182	CLAMP 1	6
7	11495	BOLT M6X16	9
8	11233	NUT M6	2
9	11459	BOLT M6×20	2
10	48183	CLAMP 2	5
11	48180	HOSE 1	1
12	48184	HOSE 2	1
13	48174	BRAKE CALIPER, RIGHT,FRONT	1
14	48185	HOSE 3	1
15	48175	MASTER CYLINDER	1
16	10059	BOLT M8×25	2
17	47705	PUSH ROD	1
18	73090	CLEVIS	1
19	10094	COTTER PIN 2X20	1
20	73091	CLEVIS PIN	1
21	48179	BRAKE RESRVOIR, COVER	1
22	48178	BRAKE RESRVOIR	1
23	48190	TUBE	1
24	48186	HOSE 4	1
25	47706	BRAKE CALIPER,MIDDLE	1
26	11021	SPRING 10	2
27	10089	WASHER 10	2
28	10503	BOLT M10×25	2
29	35075	PARK BRAKE DISC	1
30	48414	BRAKE PADS	3
31	10068	WASHER 8	4
32	47707	BRAKE ASSEMBLY	1

20. AUXILARY BRAKE

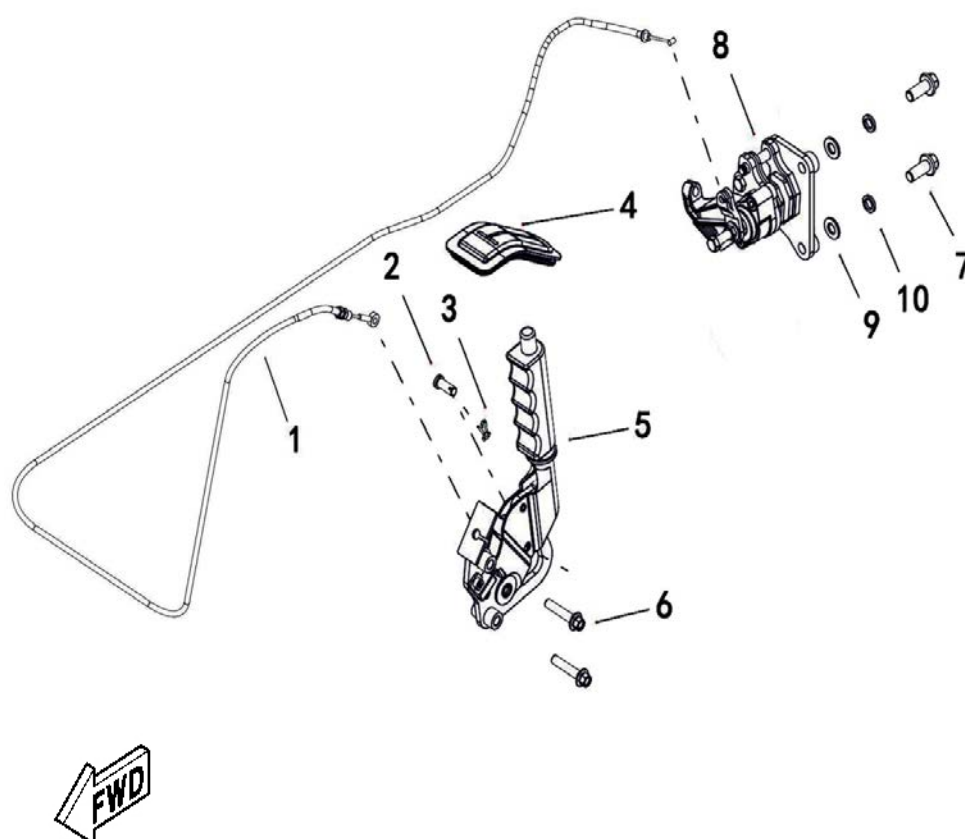


No.	PART No.	DESCRIPTION	QTY
1	48197	PARK BRAKE CABLE	1
2	48171	PIN AXLE	1
3	48172	PIN , R	1
4	48170	RUBBER,PARK BRAKE	1
5	48169	PARK BRAKE LEVER	1
6	11045	BOLT M8x40	2
7	10503	BOLT M10X1.25X25	2
8	47708	BRAKE (ALIPER)	1
9	10027	SPRING WASHER 10	2
10	10089	WASHER 10	2

21. PEDAL

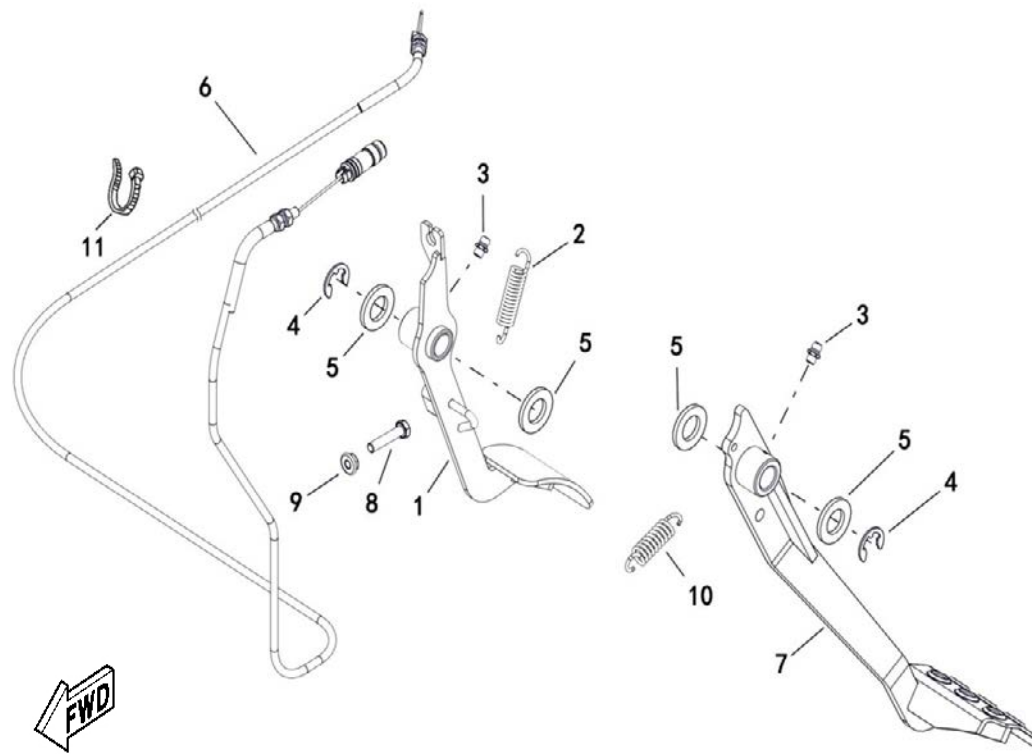


No.	PART No.	DESCRIPTION	QTY
1	47709	ACCELERATE PEDAL ASSY	1
2	73204	PEDAL SPRING, ACCELERATE	1
3	27074	GREASE FITTING M6	2
4	10811	LOCK WASHER 12 FOR SHAFTS	2
5	11247	WASHER 16	4
6	47710	THROTTLE CABLE	1
7	47711	BRAKE PEDAL ASSY	1
8	11248	BOLT M6X25	1
9	11192	NUT M6	1
10	47712	PEDAL SPRING, BRAKE	1
11	55016	TIE	1

22. BUMPER

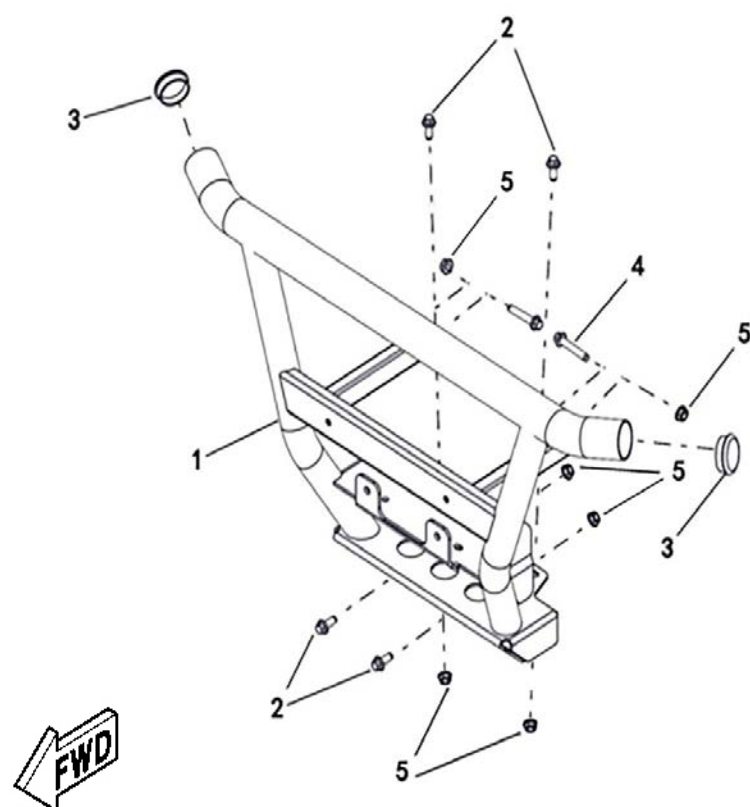


No.	PART No.	DESCRIPTION	QTY
1	47713	FRONT BUMPER	1
2	10783	BOLT M8X20	4
3	26763	PLUG	2
4	11101	BOLT M8X45	2
5	11145	NUT M8	6

24. ENGINE & TRANSMISSION

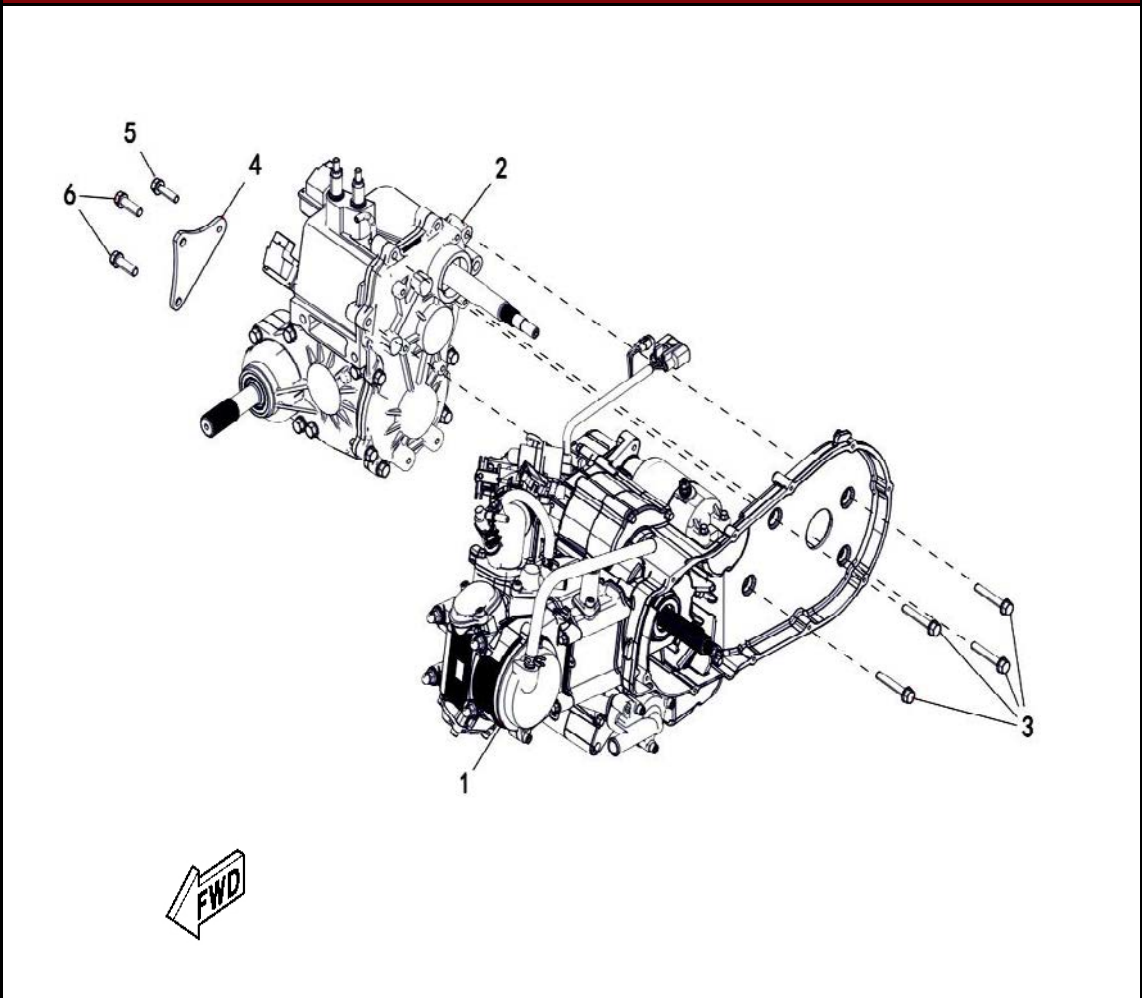

No.	PART No.	DESCRIPTION	QTY
1	47515	ENGINE(LH180MQ-3B)	1
2	47516	TRANSMISSION ASSY	1
3	11464	BOLT M8X50	4
4	47517	CONNECTING PLATE , ENGINE	1
5	10183	BOLT M8X16	1
6	11649	BOLT M10X1.25X25	2


25. FRONT GEARBOX

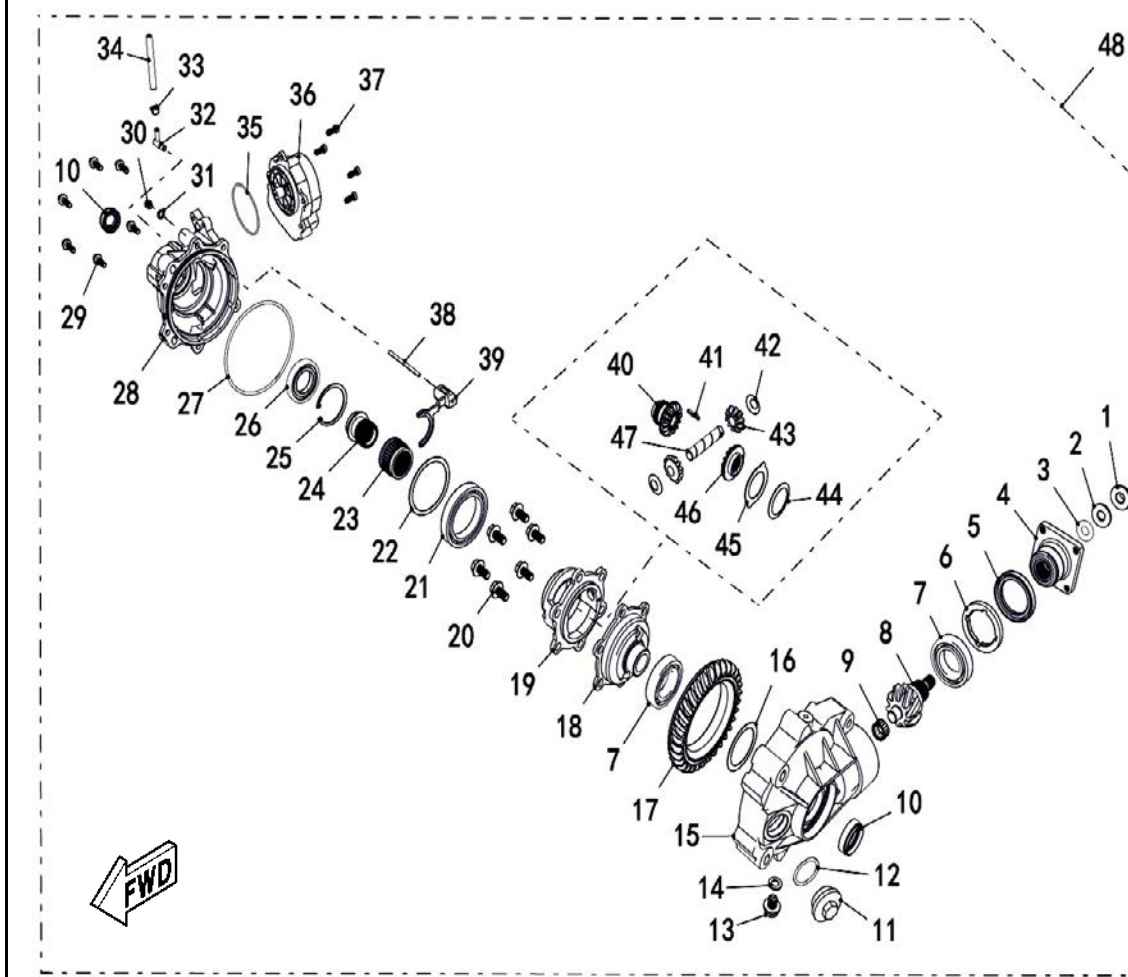

No.	PART No.	DESCRIPTION	QTY
1	26318	NUT, FRONT OUTPUT SHAFT	1
2	26324	WASHER, FRONT OUTPUT SHAFT NUT	1
3	35428	O-RING	1
4	26330	COUPLER, FRONT AXLE	1
5	35423	OIL SEAL 48×65×9	1
6	26317	BEARING RETAINER	1
7	35424	BEARING 6007	2
8	47715	BEVEL GEAR -DRIVING	1
9	35429	NEEDLE BEARING	1
10	35410	OIL SEAL 24×38×8	2
11	24305	FILL PLUG	1
12	50082	O-RING 30.5×3	1
13	73020	DRAIN BOLT	1
14	73021	WASHER 10	1
15	48285	FRONT AXLE BOX COVER	1
16	26323	ADJUSTING SHIM(61×48)	as needed
17	47716	BEVEL GEAR -DRIVEN	1
18	73854	TOP BRACKET,DIFFERENTIAL GEAR	1
19	73853	BRACKET,DIFFERENTIAL	1
20	26331	BOLT M10×1.25×20	6
21	10959	BEARING 61912	1
22	26322	ADJUSTING SHIM(83×71)	as needed
23	26315	DRIVE CLUTCH	1
24	26316	DRIVE CLUTCH COVER	1
25	10047	CIRCLIP 62	1
26	10960	BEARING 16007	1
27	35401	O-RING 141×2.4	1
28	48284	GEAR CASE, FRONT AXLE	1
29	10059	BOLT M8×25	6
30	11075	SCREW M8×8	1
31	35493	WASHER 8	1
32	47717	VENT NOZZLE	1
33	25107	CLIP	1
34	48288	VENT PIPE	1
35	35389	O-RING 81.2×1.9	1
36	35388	GEAR MOTOR	1
37	35391	SCREW M8×20	4
38	10957	PIN SHAFT	1
39	26314	SHIFT FORK	1
40	35434	DRIVE GEAR	1
41	11076	PIN 5×25	1
42	26327	WEARING RING	2
43	35437	GEAR(CENTER), DIFFERENTIAL	2


44	26325	WASHER	1
45	26326	SHIM	1
46	35440	DRIVEN GEAR	1
47	26333	GEAR SHAFT	1
48	47718	FRONT AXLE	1

26. REAR AXLE

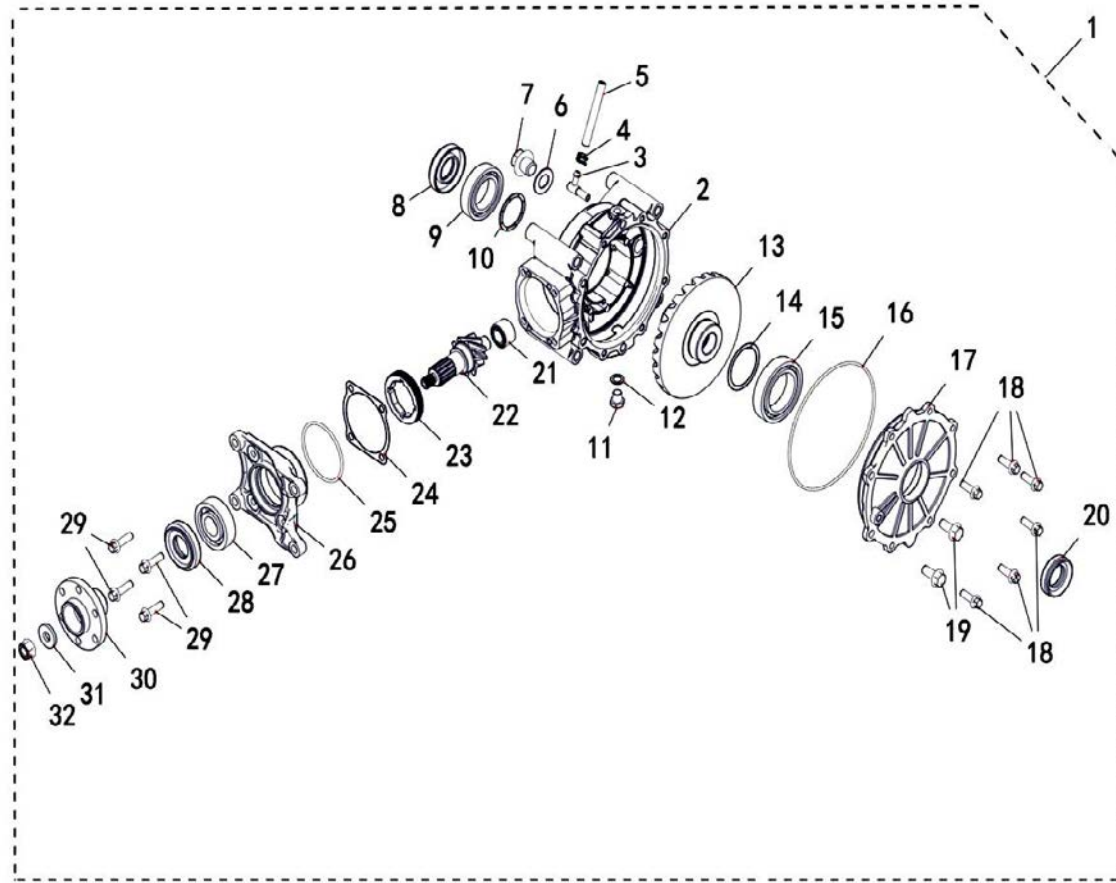


No.	PART No.	DESCRIPTION	QTY
1	47685	REAR AXLE ASSEMBLY	1
2	47719	REAR GEAR CASE	1
3	47717	VENT NOZZLE	1
4	25107	CLAMPS	1
5	21111	VENT PIPE	1
6	83180	WASHER 18	1
7	83179	BOLT M18x1.5	1
8	26303	OIL SEAL30x60x15	1
9	10958	BEARING 6008	1
10	26305	ADJUST SHIM48x40.3	as needed
11	83010	HEXAGON HEAD BOLT	1
12	83462	WASHER	1
13	47720	DRIVEN BEVEL GEAR ASSEMBLY	1
14	26306	ADJUST SHIM60.5x50.3	as needed
15	10569	BEARING 6010	1
16	35493	O-RING 151×3	1
17	26301	REAR GEAR BEARING HOUSING	1
18	11499	BOLT M8×25	6
19	11078	BOLT M10x25	2
20	26302	OIL SEAL 30x50x13.5	1
21	35465	NEEDLE BEARING	1
22	47721	DRIVE BEVEL GEAR ASSEMBLY	1
23	26310	BEARING RETAINERM64x1.5x10	1
24	26308	ADJUST SHIM	as needed
25	26311	O-RING 69×3	1
26	47722	BEVEL GEAR BEARING HOUSING	1
27	35468	BEARING 6305	1
28	35471	OIL SEAL Φ35×Φ61×9	1
29	11077	BOLT M8×30	4
30	35474	COUPLER, REAR AXLE	1
31	26309	WASHER 12.5×30×4	1
32	35473	NUT M12×1.25	1

27. ENGINE INSTALLATION

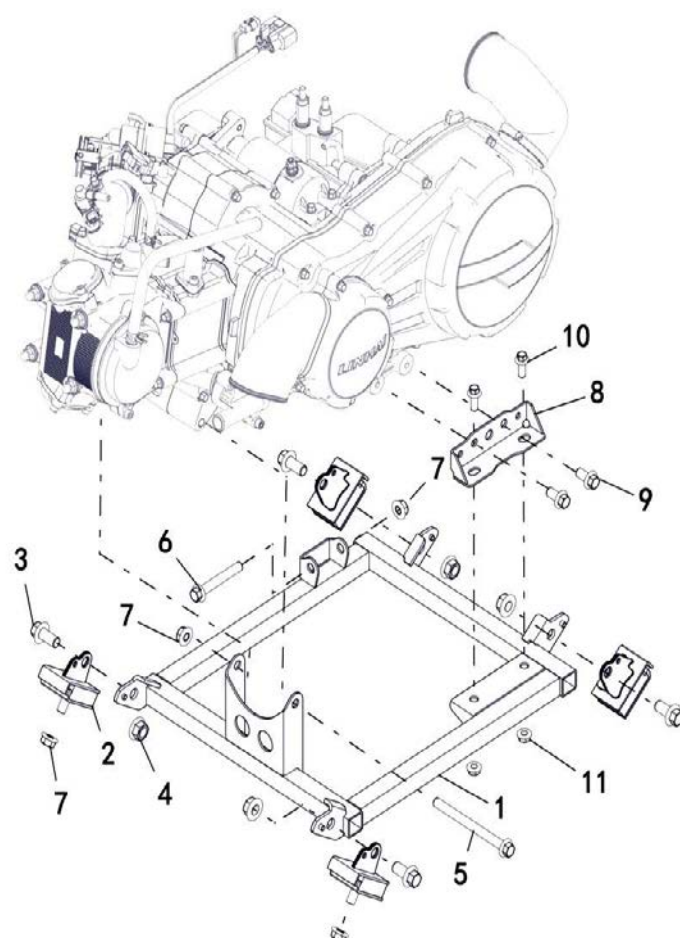


No.	PART No.	DESCRIPTION	QTY
1	47723	ENGINE MOUNT BRACKET	1
2	35503	DAMPER, RUBBER	4
3	11645	BOLT M12X1.25X25	4
4	11480	NUT M12	4
5	11646	BOLT M10X1.25X120	1
6	11647	BOLT M10X1.25X70	1
7	11287	NUT M10	6
8	47727	BRACKET, TRANSMISSION	1
9	11648	BOLT M10X1.5X20	2
10	11461	BOLT M8X20	2
11	10882	NUT M8	2

29. BOX ASSY

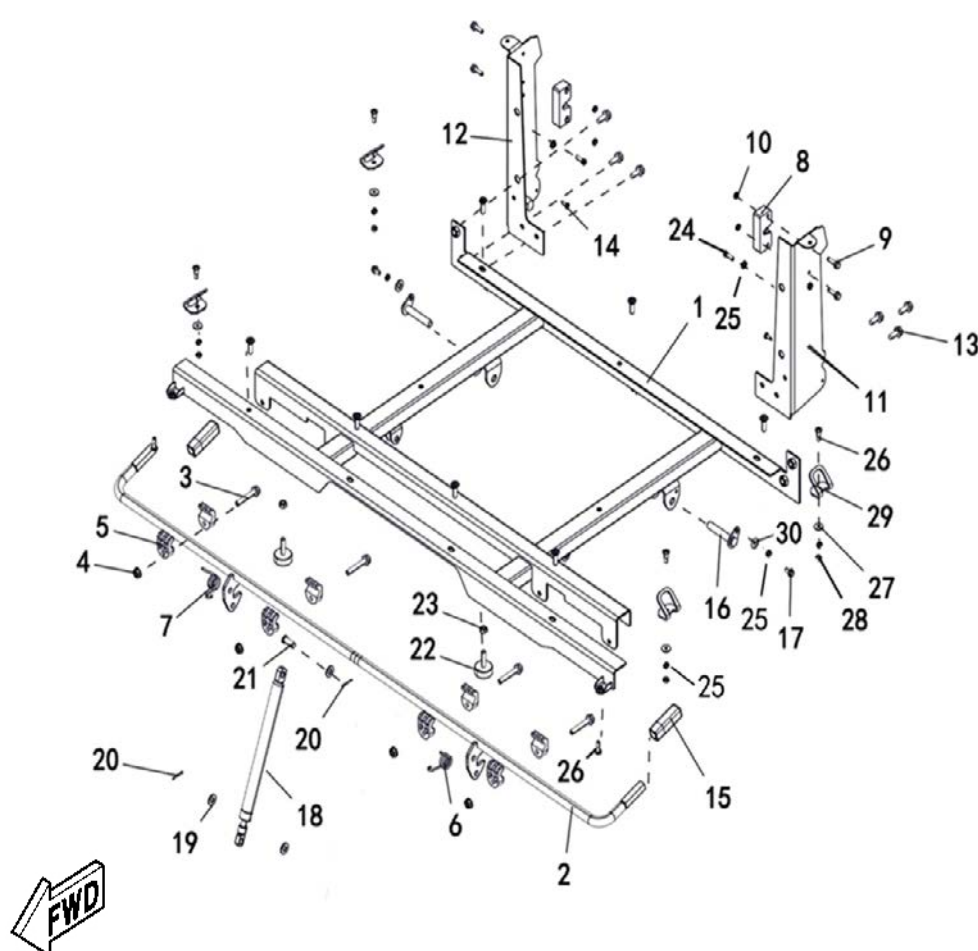


No.	PART No.	DESCRIPTION	QTY
1	47729	BOX FLOOR COVER	1
2	47730	CARGO HANDLE ASS'Y	1
3	11101	BOLT M8X45	4
4	11145	NUT M8	4
5	48134	RUBBER SHEATH	8
6	48135	PEDAL SPRING ,L	1
7	48136	PEDAL SPRING ,R	1
8	48139	LOCK SEAT,REAR TRUNK	2
9	11459	BOLT M6X20	4
10	10104	NUT M6	4
11	47731	REAR SIDE PROTECTING PLATE,LH	1
12	47732	REAR SIDE PROTECTING PLATE,RH	1
13	10783	BOLT M8X20	6
14	48316	TAPPING SCREW M5 ×16	2
15	55053	CAP,PROTECTOR END	2
16	48313	PIN SHAFT ,ROTATION	2
17	10140B	BOLT M6X12	2
18	26784	DAMPER	1
19	10089	WASHER 10	3
20	10501	PIN 2.5×25	2
21	73161	PIN AXLE	1
22	48151	DAMPER, CARGO BOX ADJUSTING	2
23	11483	NUT M8	2
24	48147	BOLT	2
25	11019	WASHER SPRING 6	8
26	46193	BOLT M6X20	4
27	11245	WASHER 6	4
28	11233	NUT M6	4
29	48153	HOOK	4
30	11245	WASHER 6	2

29. REFLECTION

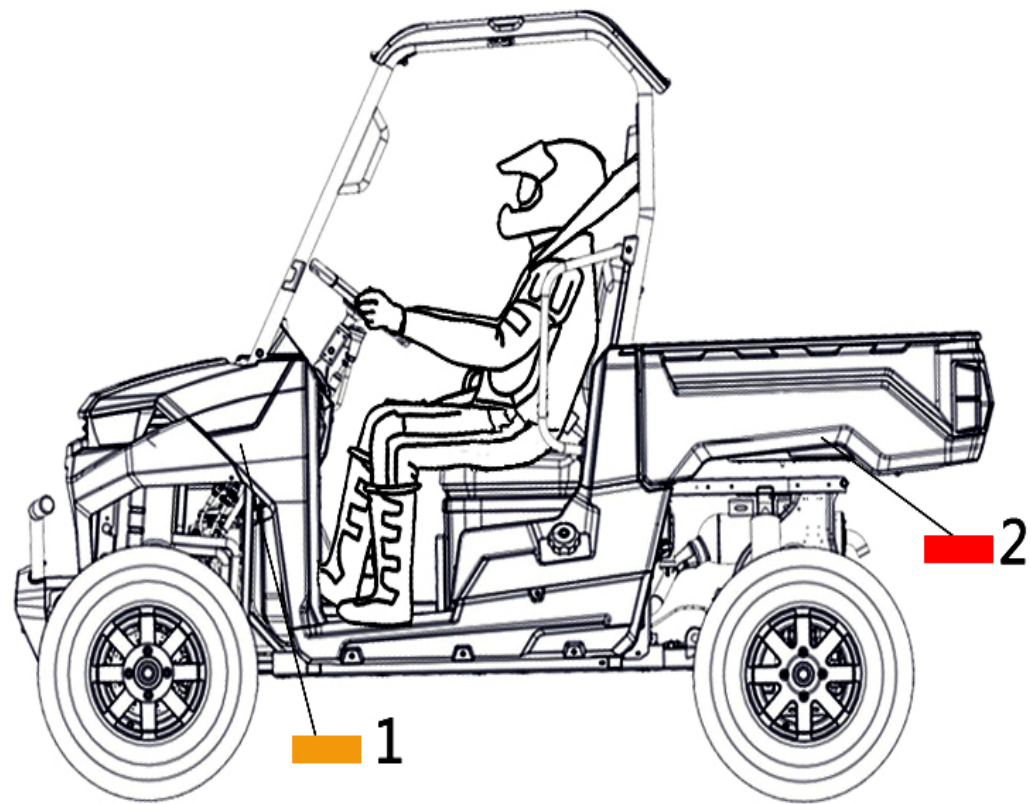


No.	PART No.	DESCRIPTION	QTY
1	71959	FRONT REFLECTOR YELLOW (FOR US)	2
2	71960	REAR REFLECTOR RED (FOR US)	2

30. SEAT BELTS

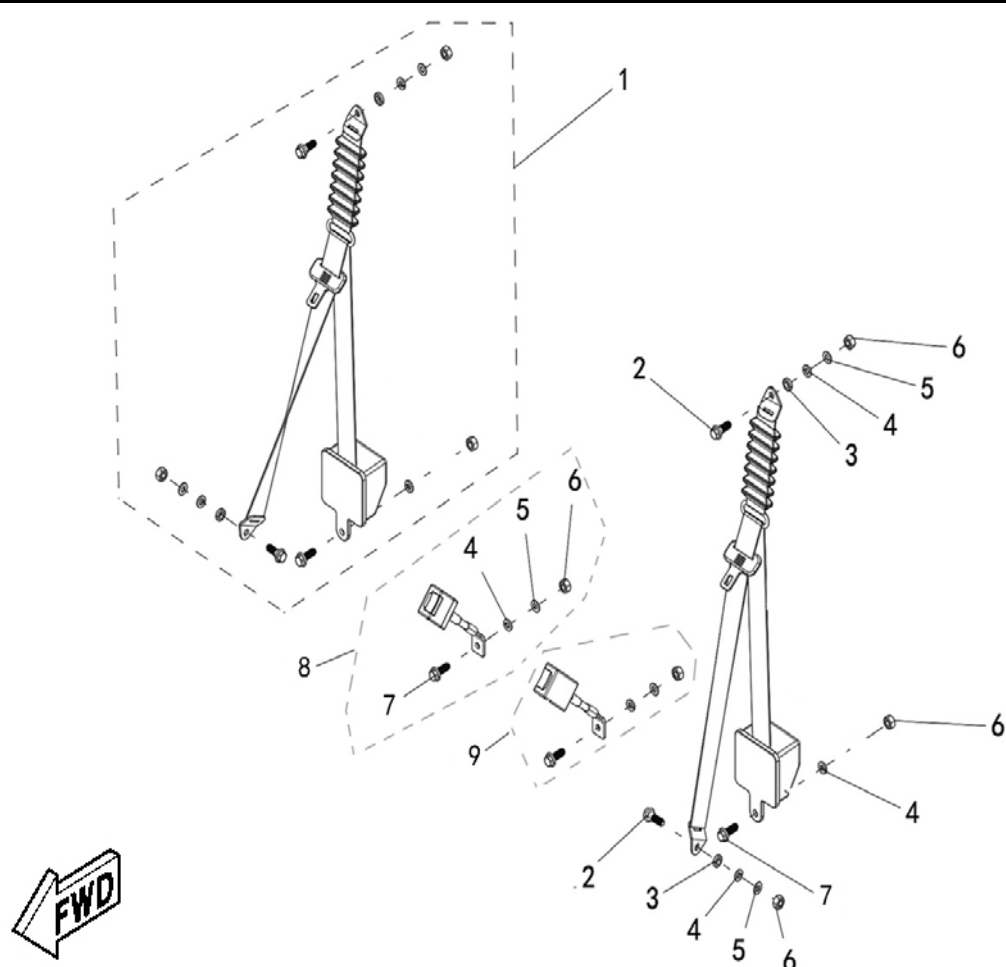


No.	PART No.	DESCRIPTION	QTY
1	48380	SEAT BELT ASSY	2
2	48381	BOLT 1	4
3	48382	WASHER 1	4
4	48383	SPRING WASHER	8
5	48384	WASHER 2	6
6	48385	NUT	8
7	48386	BOLT 2	4
8	48387	BELT RECEIVER ASSY, R	1
9	48388	BELT RECEIVER ASSY, L	1

31. BODY, SIDE NETS

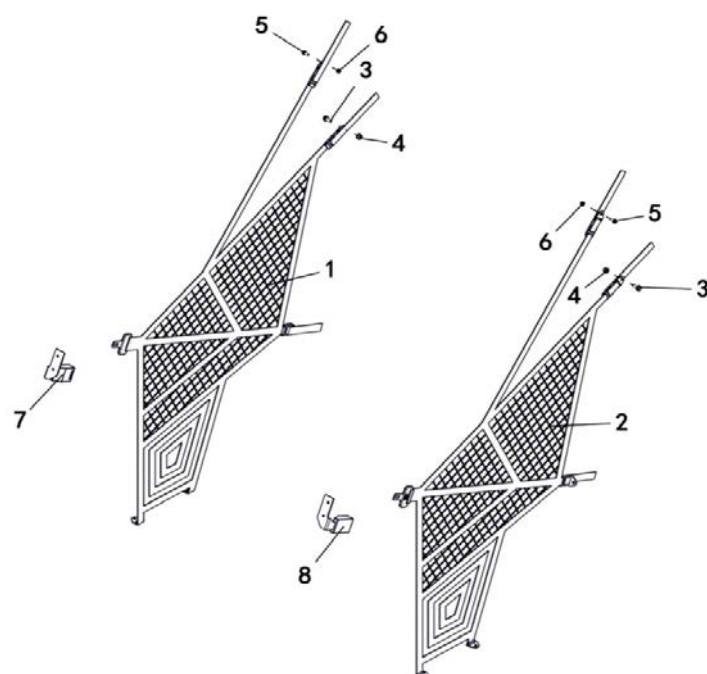


No.	PART No.	DESCRIPTION	QTY
1	48275	NET, SIDE,R	1
2	48276	NET, SIDE,L	1
3	10783	BOLT M8X20	2
4	11145	NUT M8	2
5	11495	BOLT M6X16	2
6	11233	NUT M6	2
7	48273	ASM., CLIP, NET,R	1
8	48274	ASM., CLIP, NET,L	1

32. TOOLS

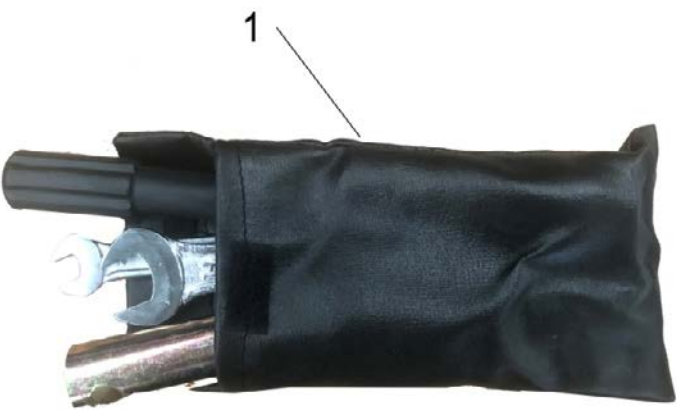


No.	PART No.	DESCRIPTION	QTY
1	80393	TOOLS	1

33. OPTIONS (ROOF)

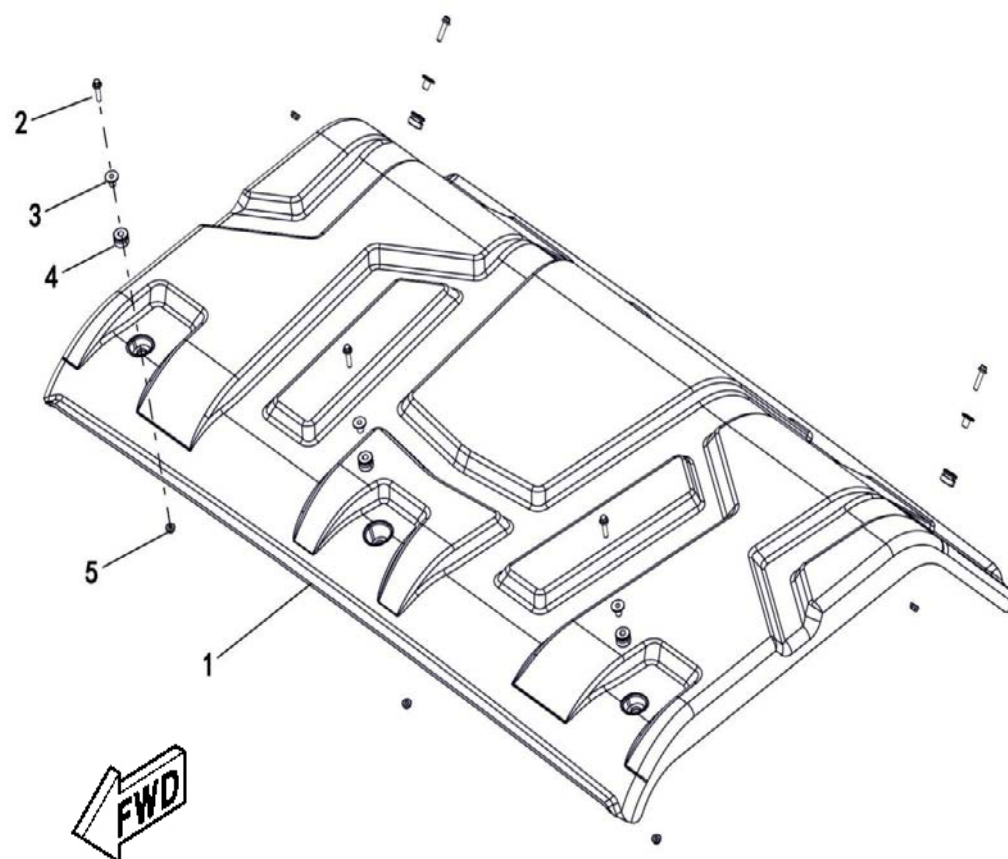

No.	PART No.	DESCRIPTION	QTY
1	47733	ROOF PANEL	1
2	48268	HEXAGON FLANGE BOLT M6×25	5
3	48256	T - SHAPED LINER BUSHING	5
4	48257	I - SHAPED RUBBER DAMPER	5
5	11233	NUT M6	5


33. OPTIONS (BACK-TO-BACK I)

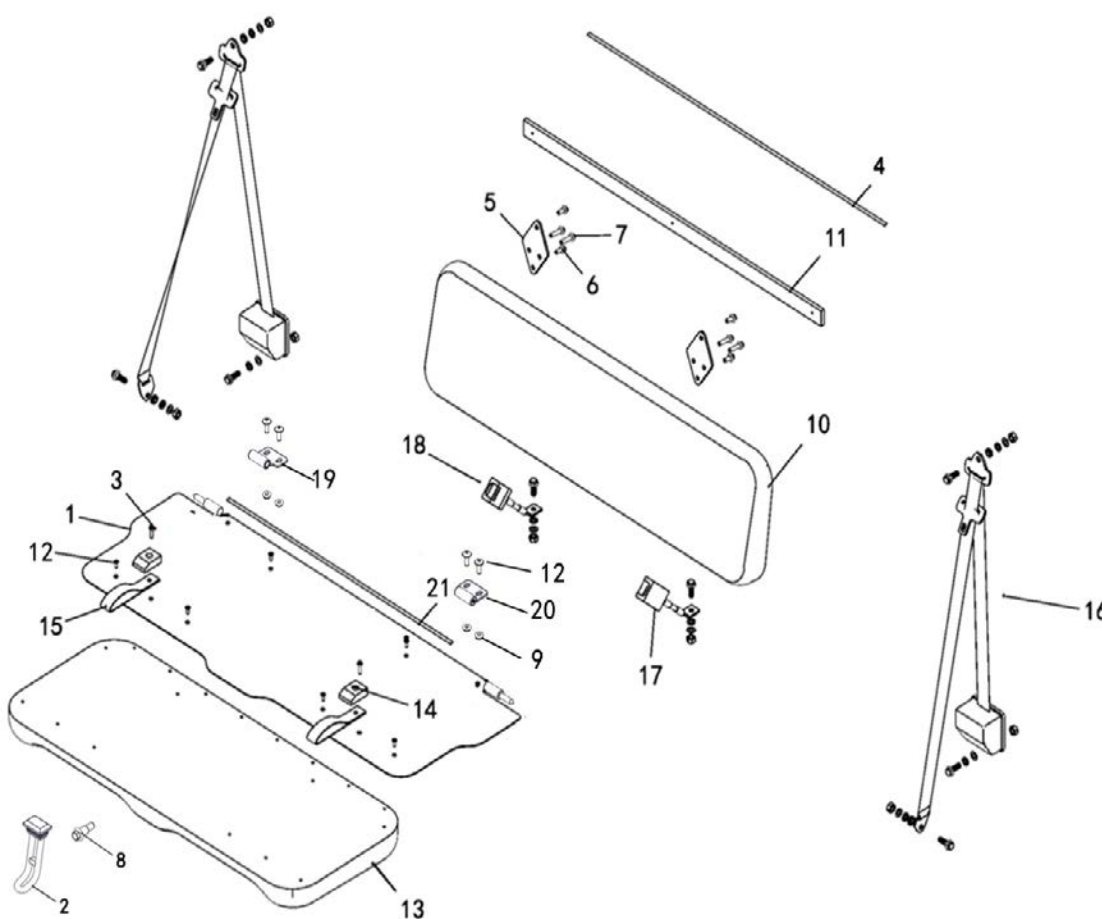

No.	PART No.	DESCRIPTION	QTY
1	48528	SEAT ASSY,BRACKET	1
2	47734	RUBBER LOCK	1
3	10187B	BOLT M6X25	2
4	47735	PACKAGE EDGE FILLET, ROOF PANEL	1
5	48529	BACK REST,BRACKET	2
6	10081	BOLT M8X20	4
7	10124	BOLT M8X35	4
8	48152	BOLT M6X22	1

9	11233	NUT M6	4
10	48531	BACK REST	1
11	48532	HEAD REST,SPONGE BARS	1
12	73056	BOLT M6X20	12
13	46065	SEAT ASSY	1
14	26382	BUFFER RUBBER	2
15	48534	SEAT STRAP	2
16	46066	SAFETY BELT	2
17	48130	BELT RECEIVER ASSY, RIGHT	1
18	48131	BELT RECEIVER ASSY, LEFT	1
19	47736	HINGE, L	1
20	47737	HINGE, R	1
21	47738	SEALING STRIP	1


33. OPTIONS (BACK-TO-BACK 2)

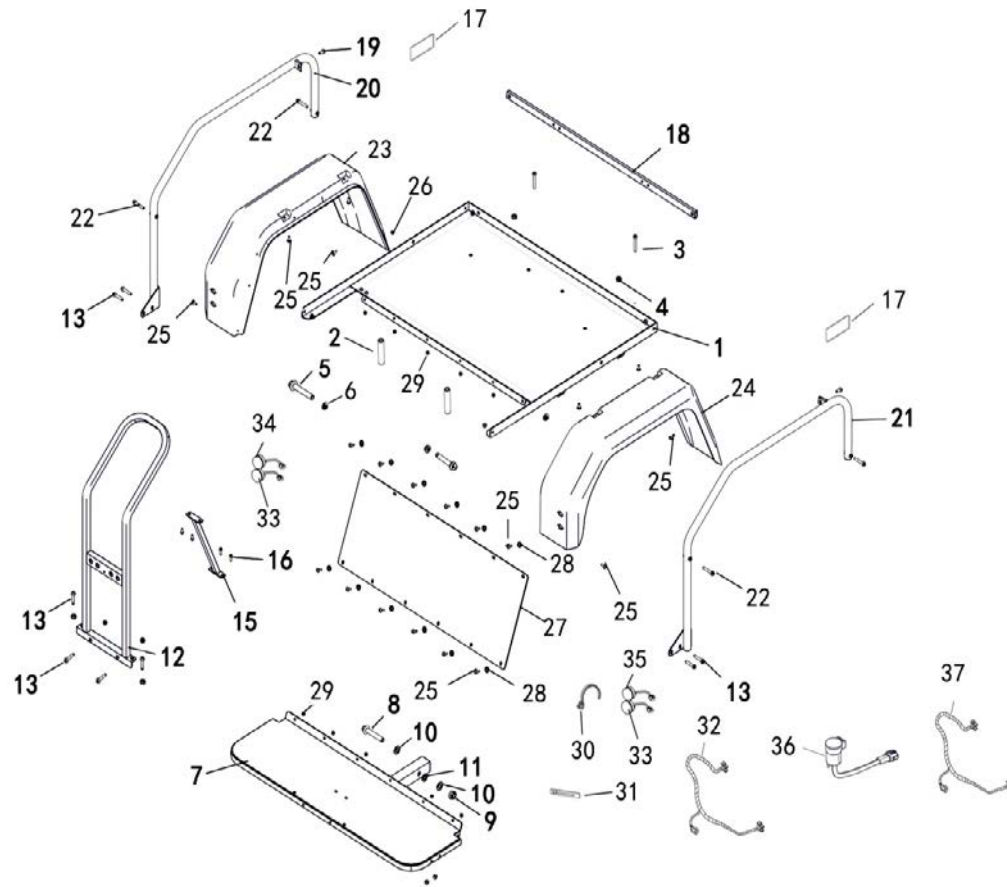

No.	PART No.	DESCRIPTION	QTY
1	47739	REAR PASSENGER,BRACKET	1
2	47740	SPACER	2
3	11354	BOLT M10X1.25X90	2
4	10795	NUT M10X1.25	2
5	11650	BOLT M12X1.25X75	2
6	11480	NUT M12X1.25	2
7	47742	PEDAL PLATE	1
8	10964	BOLT M16X95	1
9	11389	NUT M16	1
10	11247	WASHER 16	2
11	27050	WASHER SPRING 16	1
12	47743	PASSENGER ARMREST	1
13	11101	BOLT M8X45	8
14	10882	NUT M8	12
15	47744	PASSENGER ARMREST,BRACKET	1
16	11495	BOLT M6X16	4
17	71960	FRONT REFLECTOR	2
18	47745	BRACKET	1
19	10783	BOLT M8X20	2
20	47746	PEDAL PASSENGER,LINKAGE,L	1
21	47747	PEDAL PASSENGER,LINKAGE,R	1
22	10403	BOLT M8X50	4
23	47748	FENDER,LEFT	1
24	47749	FENDER,RIGHT	1
25	73056	BOLT M6X20	20
26	11192	NUT M6	2
27	48543	FENDER,REAR	1
28	11390	WASHER 8	12
29	11233	NUT M6	12


30	48294	TIE	1
31	35247	CLIP	10
32	47750	TAILLIGHT TRANSITION LINE	1
33	36844	TAILLIGHT	2
34	36125	TURN INDICATE LIGHT,L,RR	1
35	36127	TURN INDICATE LIGHT,R,RR	1
36	73326	FLASHER RELAY ASSY	1
37	46296	FLASH APPARATUS CONNECTING LINE	1

33. OPTIONS (BRACKET / HITCH)

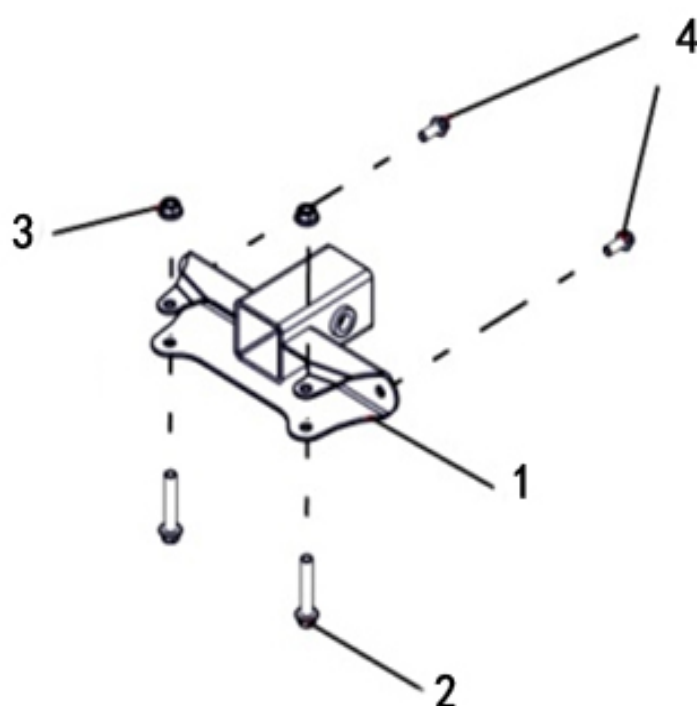

No.	PART No.	DESCRIPTION	QTY
1	47751	BRACKET, HITCH	1
2	11238	BOLT M10×1.25×57	2
3	10795	NUT M10	2
4	10783	BOLT M8X20	2

33. OPTIONS (TRACTOR)

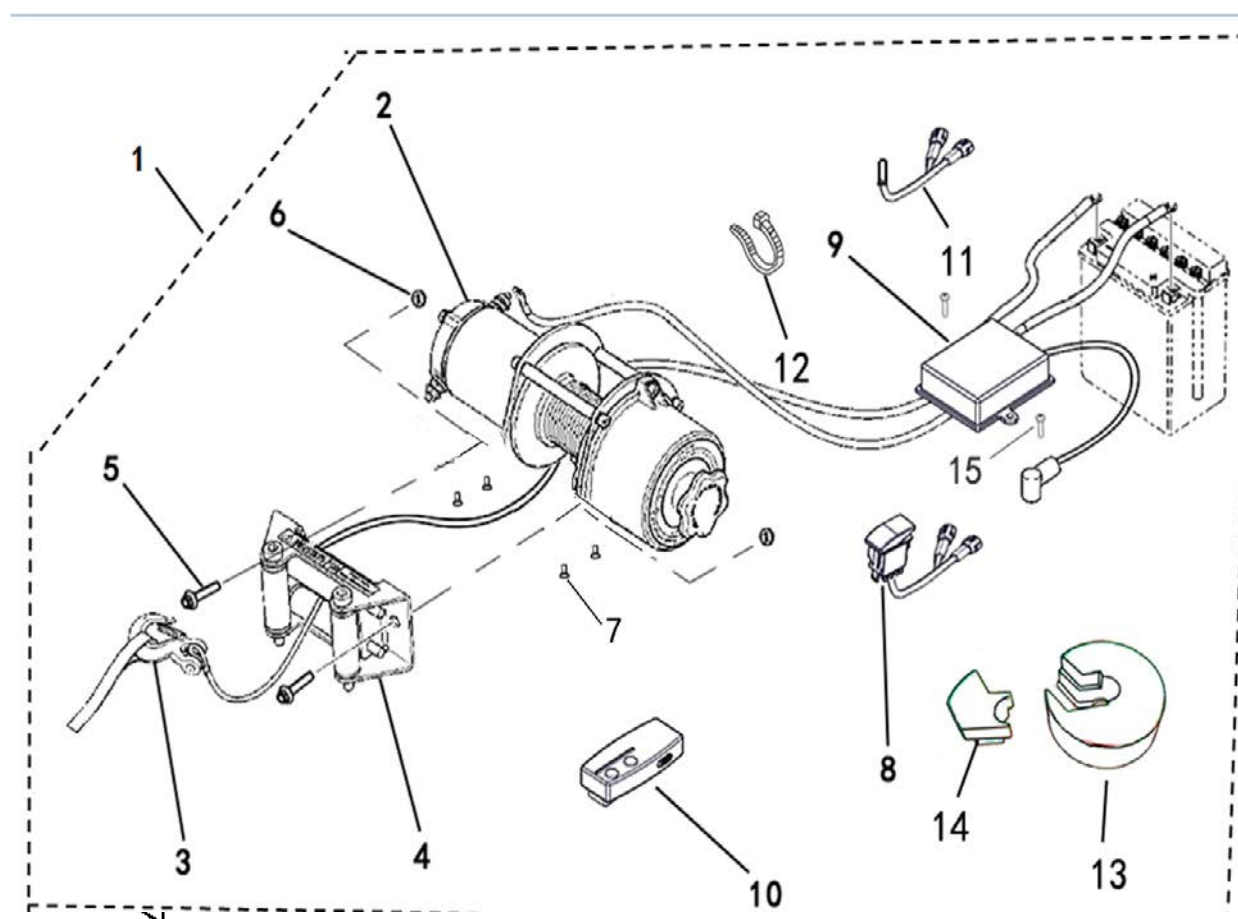

No.	PART No.	DESCRIPTION	QTY
-----	----------	-------------	-----

1	47752	TRACTOR ASSY	1
2	47753	TRACTOR	1
3	73545	TOW HOOK	1
4	73546	SLIDEWAY	1
5	10783	HEXAGON FLANGE BOLT M8×20	2
6	11145	PREVAILING TORQUE TYPE ALL-METAL HEXAGON NUT M8	2
7	11651	BOLT M6X16	4
8	73547	SWITCH	1
9	48368	CONTROLLER	1
10	73549	REMOTE CONTROL	1
11	48369	TEMPERATURE SENSOR	1
12	11334	TIE	1
13	48370	RING STOPPER 1	1
14	48371	RING STOPPER 2	1
15	11529	SCREW M5X16	2

33. OPTIONS (TRACTOR)


No.	PART No.	DESCRIPTION	QTY
1	48416	REAR VIEW MIRROR, L	1
2	48417	REAR VIEW MIRROR, R	1
3	48545	CENTER MIRROR KIT	1
4	48546	BRACKET, CENTER MIRROR KIT	1
5	11495	BOLT M6×16	2

33. OPTIONS (WINDSHIELD)




No.	PART No.	DESCRIPTION	QTY
1	47755	WINDSHIELD ASSEMBLY	1
2	47502	WINDSHIELD MOUNTING ACCESSORIES	1

33. OPTIONS

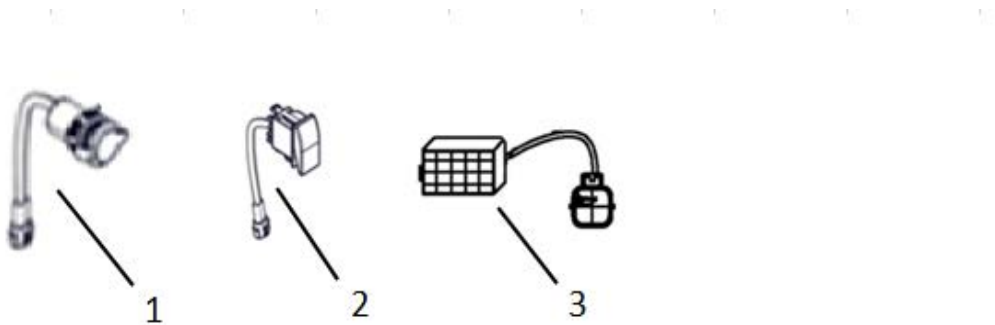


No.	PART No.	DESCRIPTION	QTY
1	70400	ACCESSORY SOCKET ASSY	1
2	73075C	EMERGENCY SWITCH	1
3	48402	WIRE, EMERGENCY SWITCH	1

2. VALVE

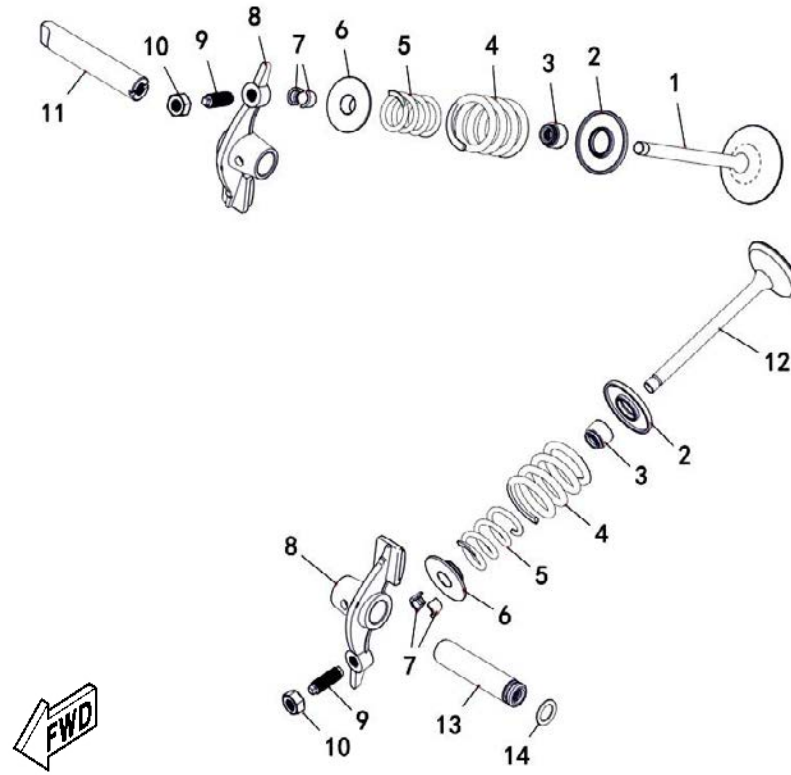


No.	PART No.	DESCRIPTION	QTY
1	27222	INTAKE VALVE	1
2	22603	SEAT SPRING VALVE	2
3	22606	SEAL VALVE STEM	2
4	22605	SPRING VALVE OUTER	2
5	22604	SPRING VALVE INNER	2
6	22607	RETAINER SPRING VALVE	2
7	22608	COTTER VALVE	4
8	22609	ROCKER ARM VALVE	2
9	22613	ADJUSTING SCREW VALVE	2
10	22614	NUT M6X0.75	2
11	22611	INTAKE ROCKER SHAFT	1
12	27223	EXHAUST VALVE	1
13	22610	EXHAUST ROCKER SHAFT	1
14	22612	O-RING 9X2	1

3. CAMSHAFT CHAIN

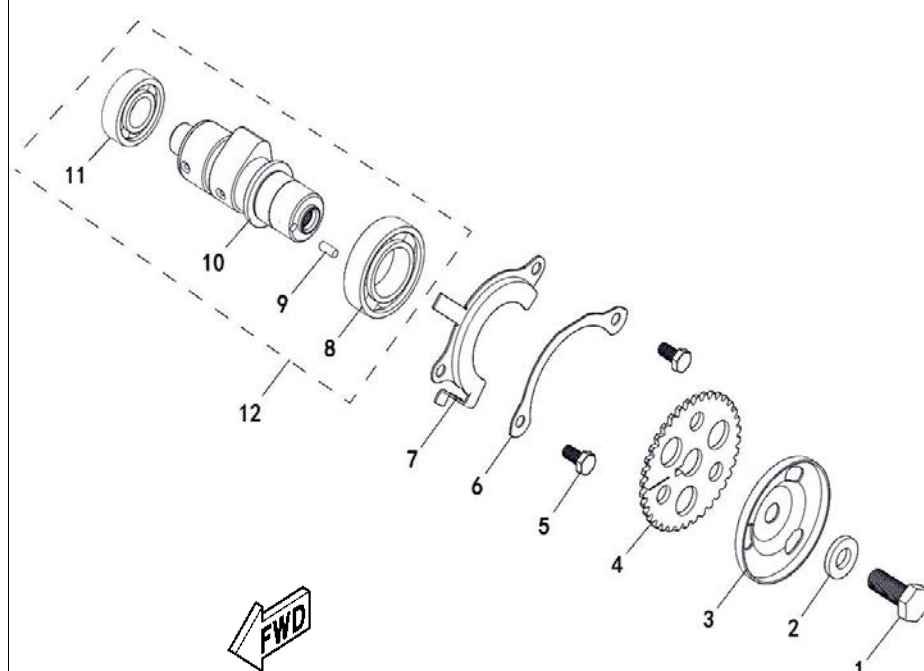


No.	PART No.	DESCRIPTION	QTY
1	10025	BOLT M10X1.25X25	1
2	22710	WASHER PLATE 10	1
3	22711	BREATHER PLATE2	1
4	22707	CAM CHAIN SPROCKET	1
5	11626	BOLT M6X12	2
6	27236	LOCK WASHER	1
7	27237	PLATE	1
8	10012	BEARING (6005/P5)	1
9	10024	DOWEL PIN B4X10	1
10	27235	CAMSHAFT	1
11	10013	BEARING(6202Z)	1
12	27234	CAMSHAFT ASSY	1

4. CYLINDER

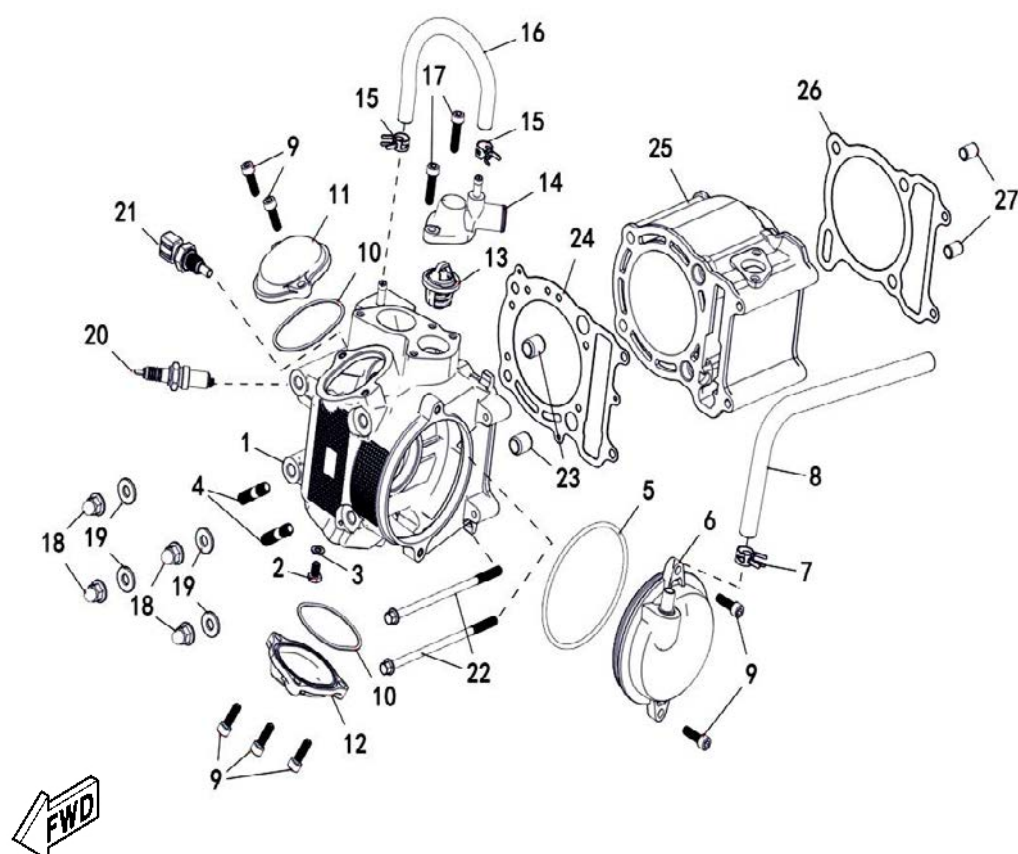


No.	PART No.	DESCRIPTION	QTY
1	27693	CYLINDER HEAD ASSY	1
2	10086	BOLT M6X12	1
3	22810	GASKET 6	1
4	10014	BOLT STUD M8X25	2
5	22408	O-RING 95X3.3	1
6	22407A	BREATHER ASSY	1
7	71358	CLIP 13MM	2
8	47756	PIPE BREATHER1	1
9	10008G	BOLT SOCKET HEAD M6X20	7
10	22412	O-RING 57.5X2.3	2
11	22410	VALVE COVER INTAKE SIDE	1
12	22411	VALVE COVER EXHAUST SIDE	1
13	22901	THERMOSTAT	1
14	22902	THERMOSTAT COVER	1
15	22914	HOSE CLAMP2	2
16	27154	HOSE1	1
17	10085G	SOCKET HEAD BOLT M6X25	2
18	22414	NUT CROWN M8	4
19	22415	WASHER PLATE 8	4
20	22419	PLUG SPARK-NGK DR8EA	1
21	35095e	WATER TEMPERATURE SENSOR	1
22	27339	BOLT FLANGE M6X130	2
23	22417	PIN DOWEL 14X16	2
24	27221	GASKET CYLINDER HEAD1	1
25	27228	CYLINDER	1
26	27226	GASKET CYLINDER	1
27	35094	PIN DOWEL 10X14	2

4. CHAIN

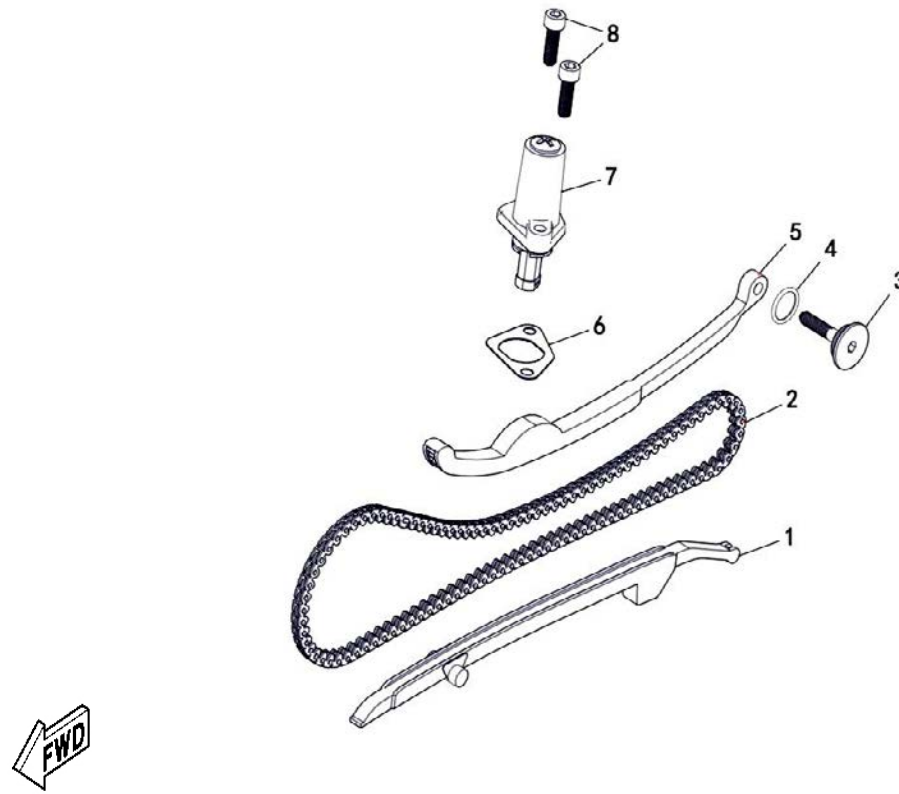


No.	PART No.	DESCRIPTION	QTY
1	27203	GUIDE STOPPER1	1
2	27201	CHAIN	1
3	22718	CHAIN TENSIONER PIVOT BOLT	1
4	22719	O-RING 14.5X1.8	1
5	27202	GUIDE STOPPER2	1
6	22716	GASKET TENSIONER CASE	1
7	22715a	CAM CHAIN TENSIONER ASSY	1
8	10008	SOCKET HEAD BOLT M6X20	2

5. CRANKSHAFT COMP

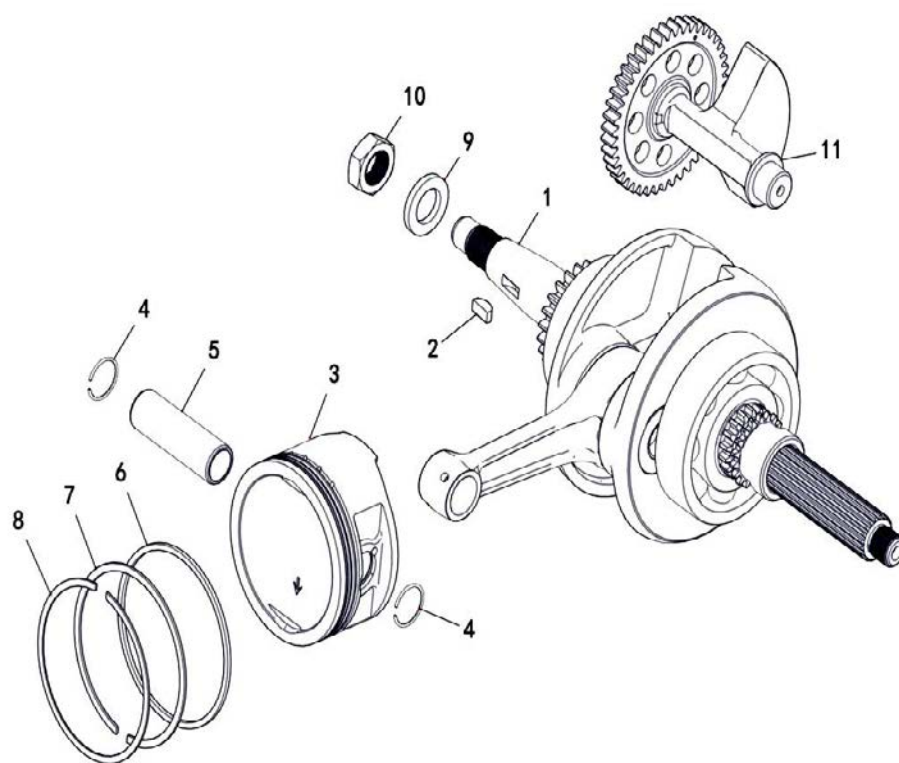


No.	PART No.	DESCRIPTION	QTY
1	47520	CRANKSHAFT ASSY	1
2	22504	KEY WOODRUFF	1
3	27241	PISTON	1
4	27239	CLIP	2
5	27240	PISTON PIN	1
6	27242	PISTON RING SET	1
7		PISTON RING 2 SET	1
8		PISTON RING 1 SET	1
9	22503	WASHER PLATE 16	1
10	22502	NUT M16X1	1
11	47521	BALABCE SHAFT ASSY	1

6. CRANKCASE

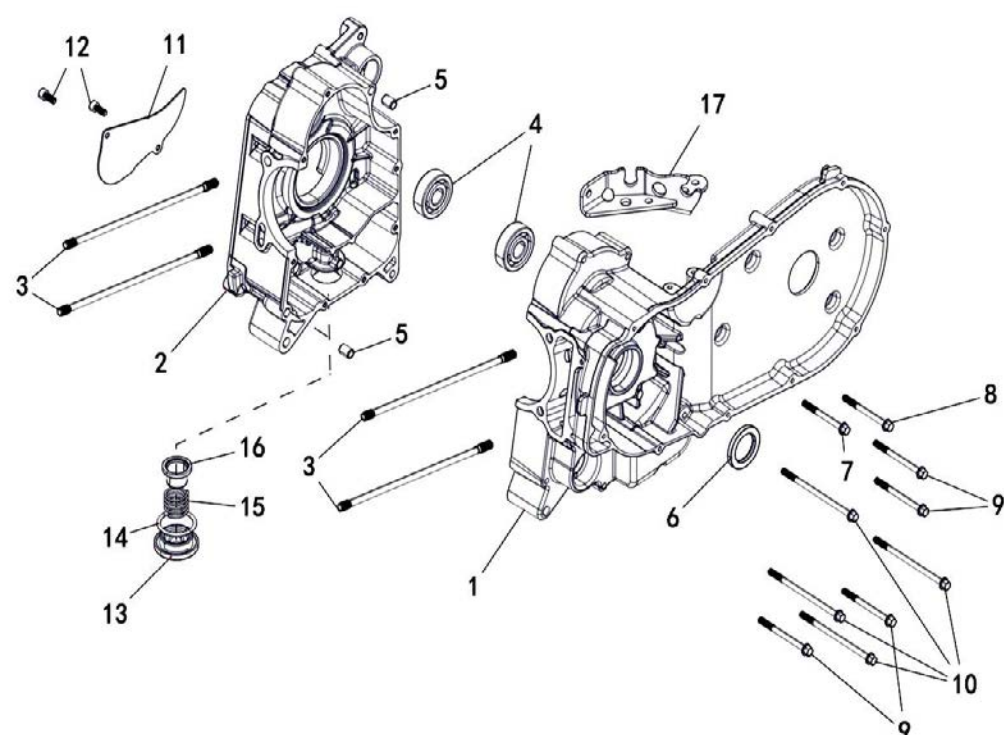


No.	PART No.	DESCRIPTION	QTY
1	47522	LEFT CRANKCASE	1
2	47523	RIGHT CRANKCASE	1
3	27205	STUD BOLT M8X253.6	4
4	10846	BEARING 6303C3	2
5	35094	PIN DOWEL 10X14	2
6	23510	OIL SEAL 30X45X5	1
7	11451	FLANGE BOLT M6X60	1
8	10161	FLANGE BOLT M6X65	1
9	10160	FLANGE BOLT M6X70	4
10	70219	FLANGE BOLT M6X105	4
11	23512	COVER CRANKCASE RIGHT	1
12	10036	SOCKET HEAD BOLT M6X14	2
13	23111	DRAIN PLUG	1
14	23112	O-RING 36X3.5	1
15	23110	COMPRESSION SPRING	1
16	23109	OIL STRAINER	1
17	47524	BRACKET SHIFT	1

9. LEFT CRANKCASE COVER

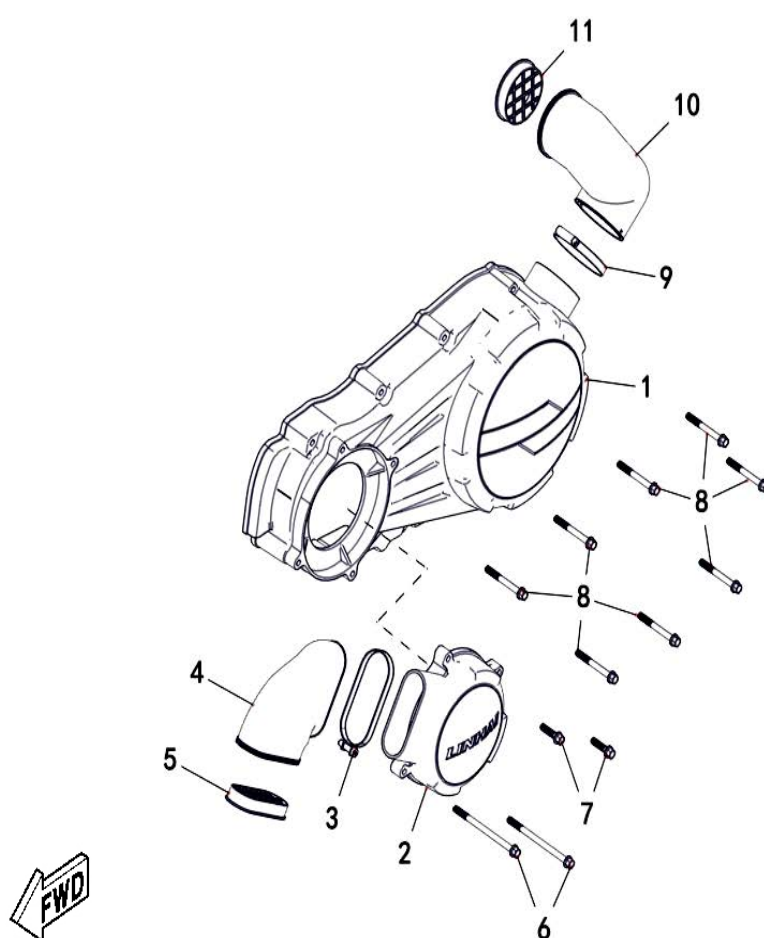


No.	PART No.	DESCRIPTION	QTY
1	47525	LEFT CRANKCASE COVER	1
2	47526	FRONT COVER	1
3	23608	HOSE CLAMP A	1
4	23607	JOINT B	1
5	23606	AIR STRAINER A	1
6	11007	FLANGE BOLT M6X95	2
7	10187B	FLANGE BOLT M6X25	2
8	11126	FLANGE BOLT M6X55	8
9	23603	HOSE CLAMP B	1
10	23604	JOINT A	1
11	23605	AIR STRAINER B	1

10. RIGHT CRANKCASE COVER

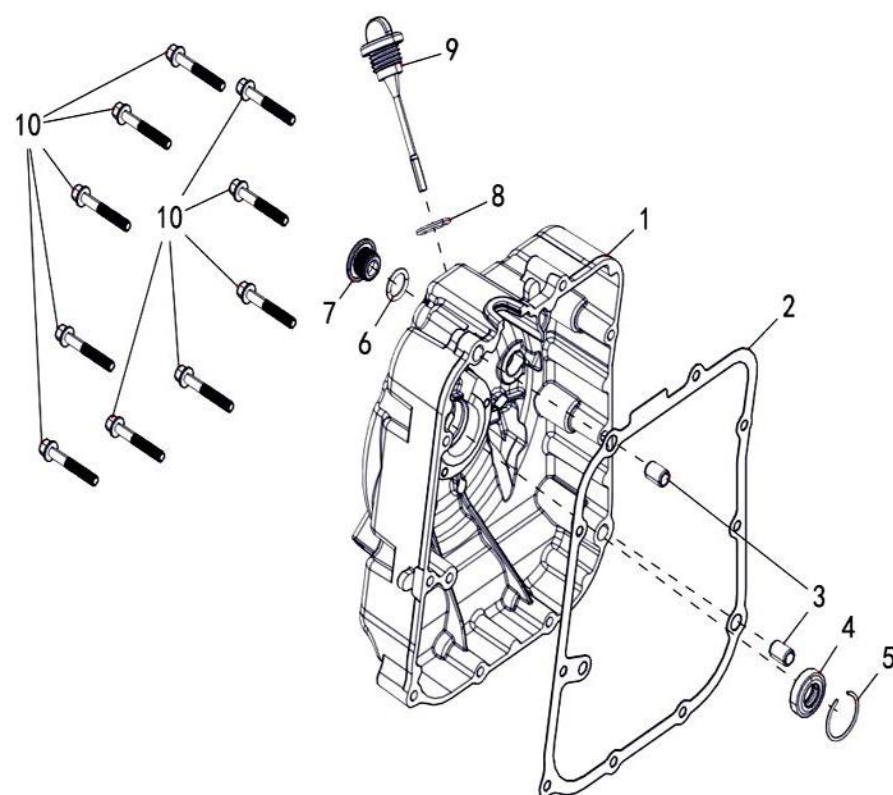


No.	PART No.	DESCRIPTION	QTY
1	47527	RIGHT CRANKCASE COVER	1
2	47528	RIGHT CRANKCASE COVER GASKET	1
3	35094	PIN DOWEL 10X14	2
4	23609	OIL SEAL14X27X6	1
5	27644	CLIP 27	1
6	10123	O-RING 14X2.65	1
7	23613	OBSERVED COVER	1
8	10122	O-RING 18X2.65	1
9	23611	OIL PLUG	1
10	23615	FLANGE BOLT M6X40	10

11. GENERATOR

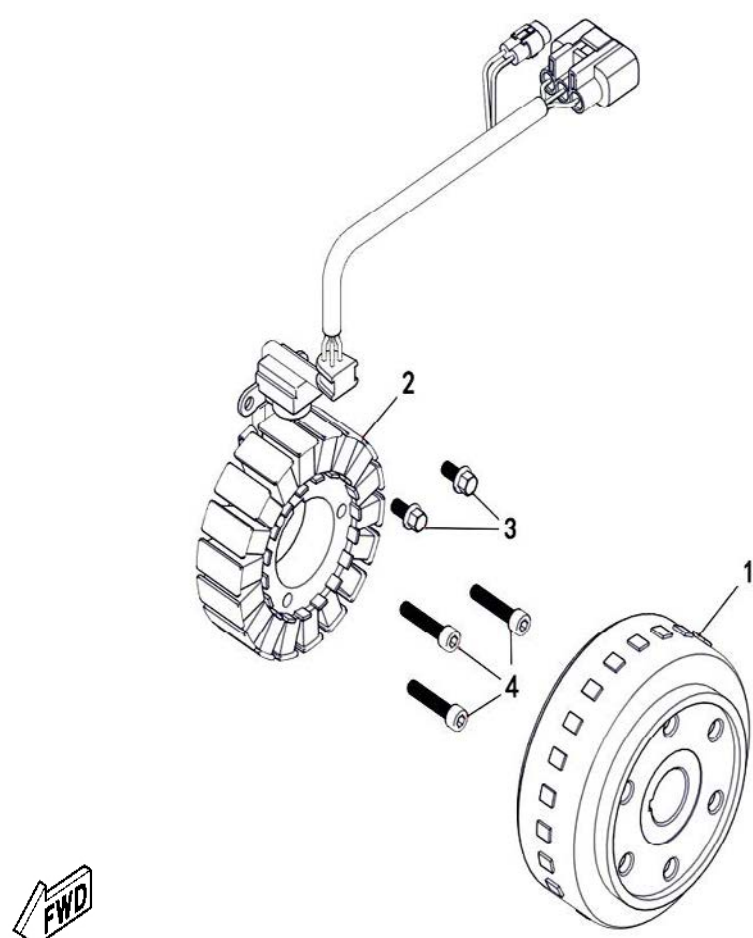


No.	PART No.	DESCRIPTION	QTY
1	47529	ROTOR ASSY	1
2	47530	STATOR ASSY	1
3	10140W	BOLT M6X12	2
4	10170	SOCKET HEAD BOLT M6X30	3

12. ELECTRIC STARTER

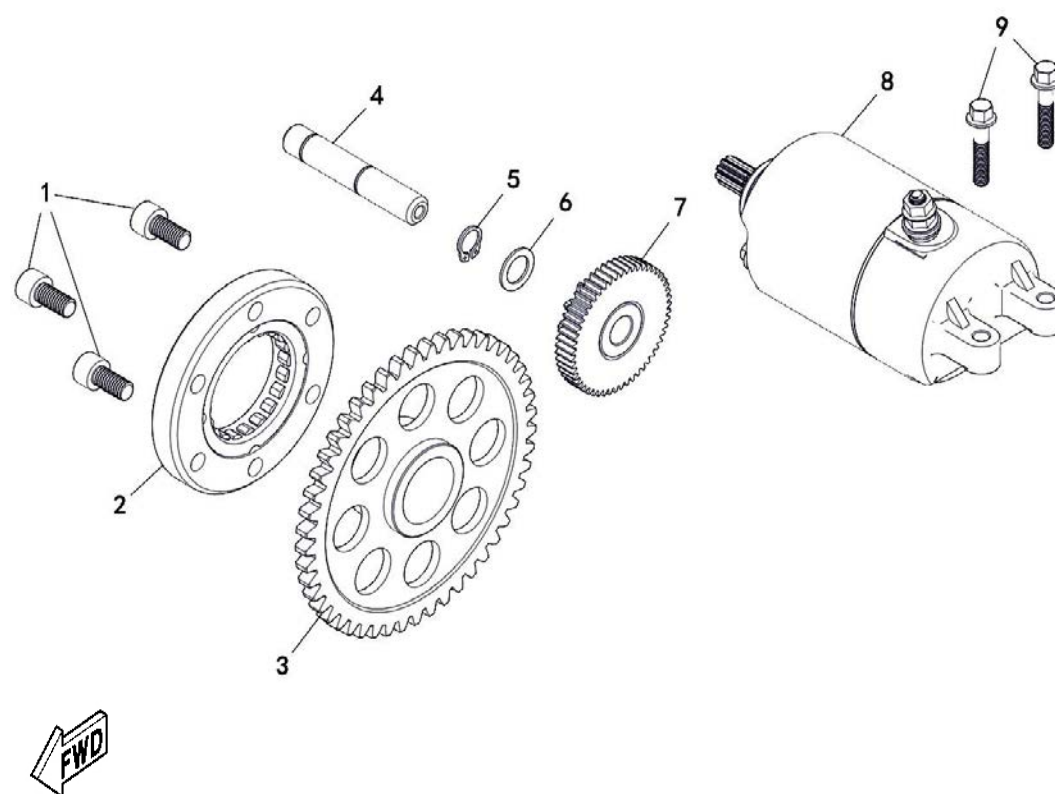


No.	PART No.	DESCRIPTION	QTY
1	10131	SOCKET HEAD BOLT M8X16	3
2	23706	STARTER CLUTCH	1
3	23705	GEAR REDUCTION	1
4	23702	SHAFT	1
5	11458	CIRCLIP 12	1
6	23703	WASHER 12	1
7	23701	GEAR IDLER	1
8	47531	STARTING MOTOR ASSY	1
9	23615	FLANGE BOLT M6X40	2

13. CLUTCH

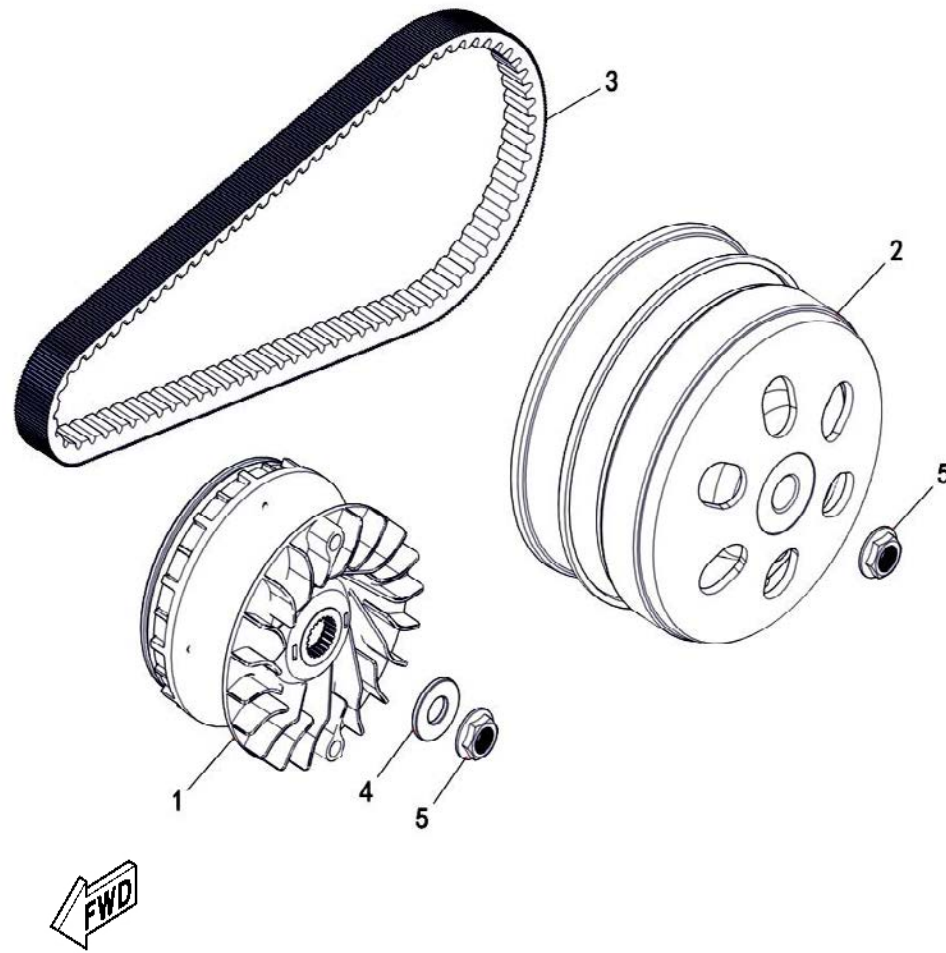


No.	PART No.	DESCRIPTION	QTY
1	47532	DRIVE ASSY COMPLETE	1
2	47533	DRIVEN ASSY COMPLETE	1
3	23817	V-BELT	1
4	47534	WASHER PLATE 14	1
5	46191	NUT M14X1	2

14. TRANSMISSION I

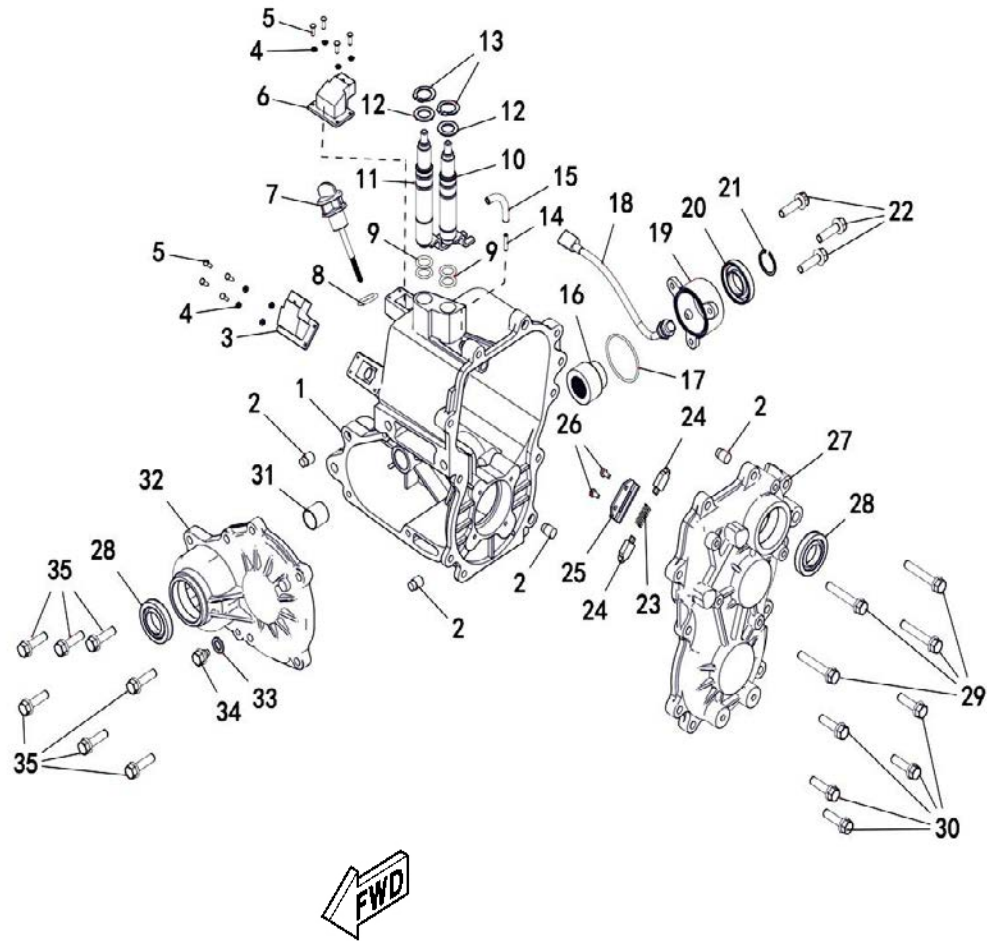


No.	PART No.	DESCRIPTION	QTY
1	47535	GEARCASE,RH (USE WITH SPEED SENSOR)	1
2	21104	DOWEL PIN	4
3	21457	GEAR INDICATOR SWITCH	1
4	10071	WASHER 4	8
5	11381	SCREW M4	8
6	21344	GEAR INDICATOR SWITCH	1
7	21475	DIPSTICK	1
8	10122	O RING 18X2.65	1
9	10123	O RING 14X2.65	4
10	21459	SHIFT ROD LOW	1
11	21460	SHIFT ROD HIGH/REVERSE	1
12	21338	WASHER	2
13	11384	SNAP RING	2
14	21340	VENT TUBE FITTING	1
15	21339	VENT TUBE	1
16	25511A	COLLAR(NEW MODEL)	1
17	25512	O RING 50X1.5	1
18	47536	SPEED SENSOR	1
19	25513A	SPEED SENSOR COVER(NEW MODEL)	1
20	11386	SEAL30X40X5 (NEW MODEL)	1
21	10164	CLAMP 24(NEW MODEL)	1
22	10010	BOLT M6X15	3
23	21213	SPRING	1
24	21211	INTERLOCK PIN	2
25	21212	INTERLOCK BRACKET	1
26	11380	SCREW M5X10	2
27	47537	GEARBOX COVER	1
28	21201	SEAL 25X47X8	2
29	11464	BOLT M8X50	4
30	11366	BOLT M8X28	10
31	47538	BUSHING	1
32	21468t	COVER	1
33	21470	WASHER	1
34	21469	DRAIN SCREW	1
35	11366	BOLT M8X28	14

15. TRANSMISSION II

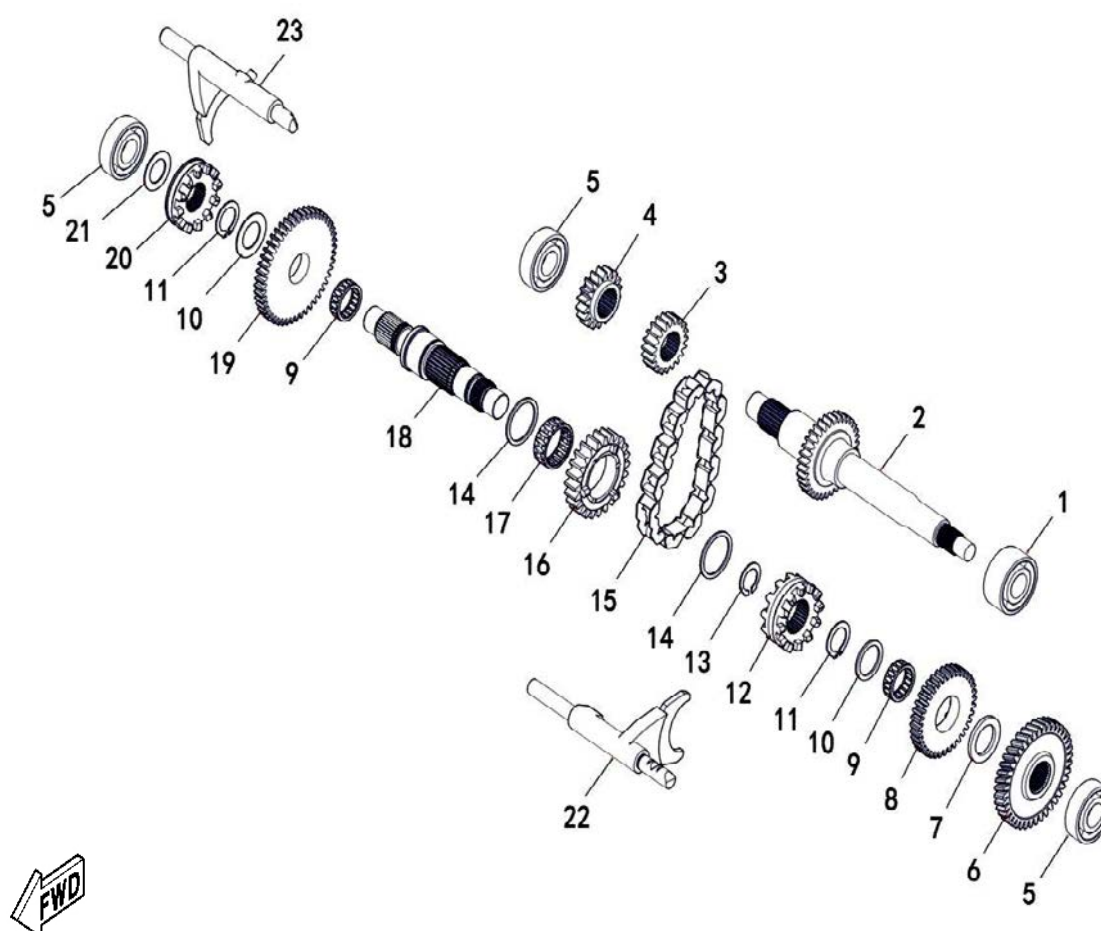


No.	PART No.	DESCRIPTION	QTY
1	10732	Bearing 5205C3	1
2	47539	INPUT SHAFT	1
3	21477	SPROCKET	1
4	21208	GEAR 16T	1
5	10062	BEARING 6204	3
6	21210A	GEAR, HELICAL 31T	1
7	21216	SPACER	1
8	21217	GEAR 31T	1
9	21218	NEEDLE BEARING 25	2
10	21219	THRUST WASHER	2
11	10064	SNAP RING	2
12	21221	DOG GEAR	1
13	11383	SNAP RING	1
14	21223	THRUST WASHER	2
15	21207	CHAIN	1
16	21224	SPROCKET 24T	1
17	21225	NEEDLE BEARING 25	1
18	21327	SHAFT	1
19	21329	GEAR 35T	1
20	21332	ENGAGEMENT	1
21	21333	THRST WASHER	1
22	21460	SHIFT ROD HIGH/REVERSE	1
23	21459	SHIFT ROD LOW	1

16. TRANSMISSION III

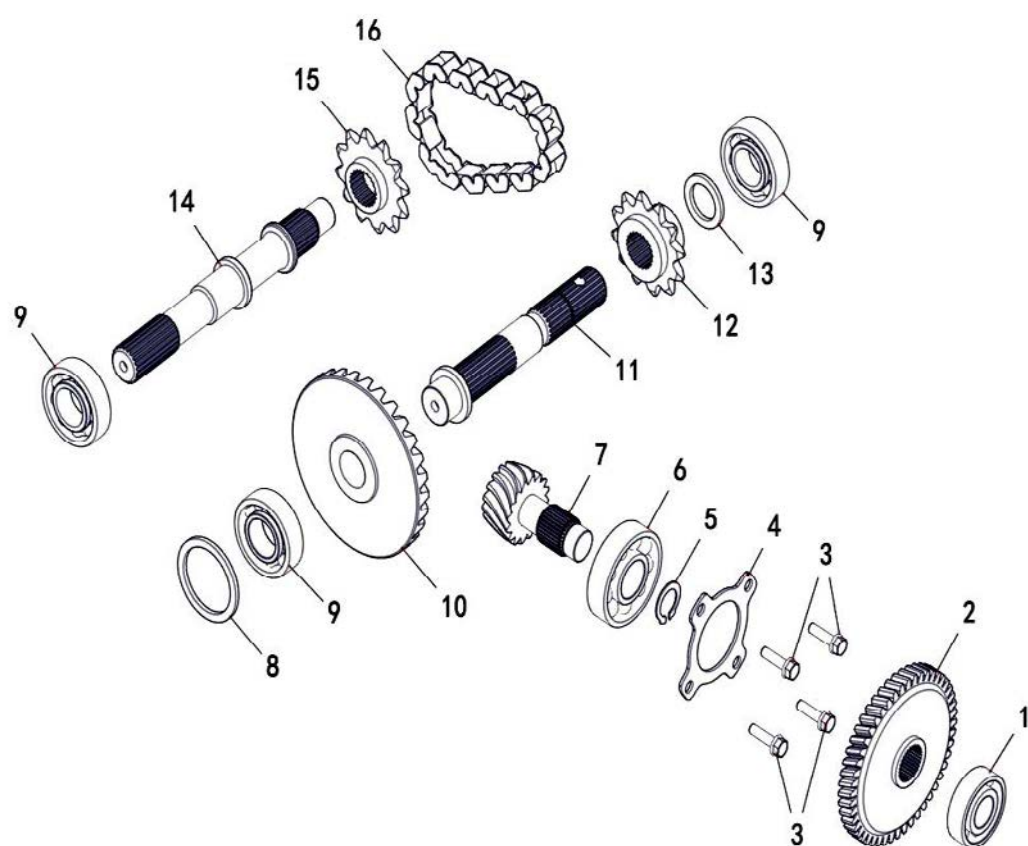


No.	PART No.	DESCRIPTION	QTY
1	10063	BEARING 6204C3	1
2	25109	GEAR HELICAL 51T	1
3	11377	SCREW M6X10	4
4	21351	BEARING RETAINER PLATE	1
5	21453	SNAP RING	1
6	10074	BEARING 6305ST	1
7	21455	PINION SHAFT 10T	1
8	21465	SHIM 1	1
9	10061	BEARING 6205c3	3
10	21462	GEAR	1
11	70354	SHAFT REAR OUTPUTA (USE WITH SPEED SENSOR)	1
12	21483	SPORCKET 12T	1
13	21461	THRUST WASHER	1
14	21480	SHAFT FRONT OUTPUT	1
15	21481	SPORCKET 12T	1
16	21482	CHAIN	1

17. OIL PUMP & WATER PUMP

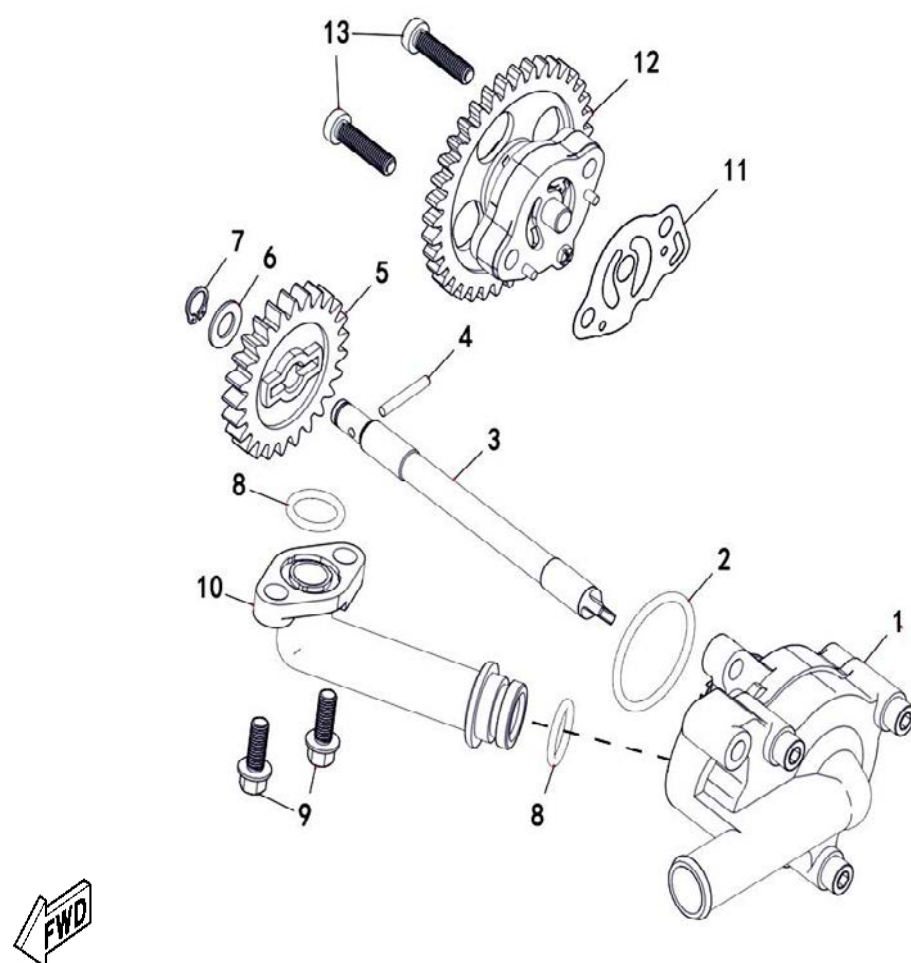


No.	PART No.	DESCRIPTION	QTY
1	22820	WATER PUMP ASSY	1
2	10049	O-RING 33.5X2.65	1
3	27230	SHAFT	1
4	10070	DOWEL PIN C3X22	1
5	22815	IMPELLER SHAFT GEAR	1
6	22814	WASHER PLATE 8	1
7	10072	CIRCLIP 8	1
8	10082	O-RING 15.5X2.5	2
9	10083	BOLT M6X15	2
10	27229a	JOINT (ADC12)	1
11	23107	GASKET	1
12	27245	OIL PUMP ASSY	1
13	10098	SCREW M6X25	2

19. FUEL INJECTION ASSY

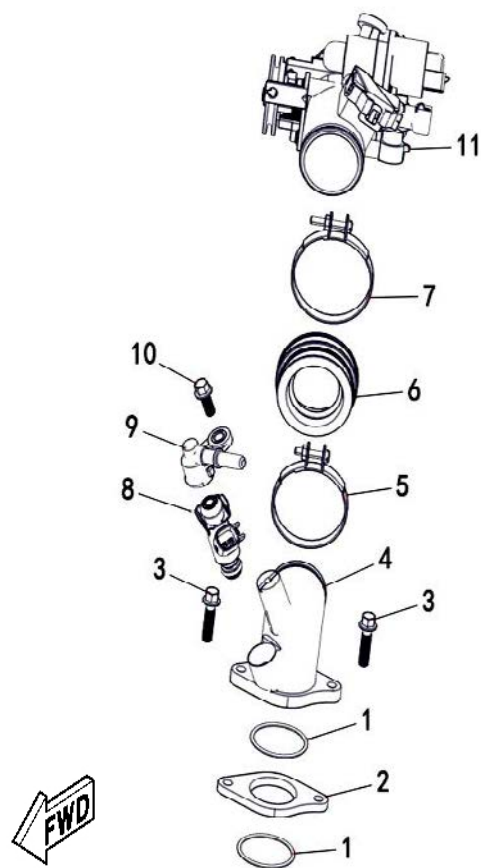


No.	PART No.	DESCRIPTION	QTY
1	23202	O-RING 35X2	2
2	27225	JOINT	1
3	10187W	BOLT M6X25	2
4	47540	FEED HOSE	1
5	27901	CLIP 49	1
6	27902	JOINT,FEED HOSE	1
7	27903	CLIP 53	1
8	27698	INJECTOR	1
9	47541	INJECTOR CAP	1
10	11495	BOLT M6X16	1
11	47542	THROTTLE BODY ASSEMBLY	1

21. RADIATOR

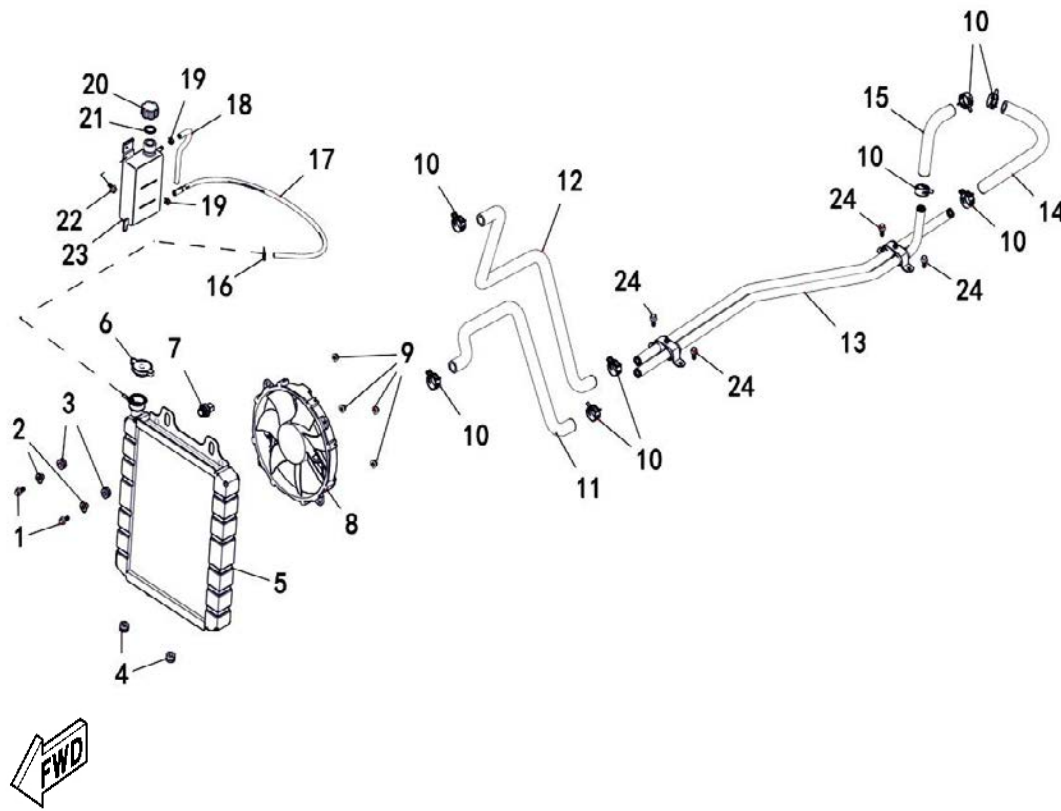


No.	PART No.	DESCRIPTION	QTY
1	10187B	BOLT M6×25	2
2	36052	COLLAR	2
3	36053	RADIATOR SIDE GROMMET,UP	2
4	36054	RADIATOR SIDE GROMMET,DOWN	2
5	47757	RADIATOR	1
6	22907a	SAFETY VALVE	1
7	48020	THERMOSTAT SWITCH ASSY	1
8	47543	BLOWER ASSY	1
9	11475	NUT M6	4
10	47758	CLIP 22	8
11	47759	HOSE,RETURN	1
12	47760	HOSE,FEED	1
13	47761	BRACKET	1
14	46269	RETURN HOSE, CYLINDER	1
15	46268	FEED HOSE, VALVE	1
16	48014	CLIP 8	1
17	47762	PIPE,SAFETY VALVE	1
18	48325	PIPE,TANK RECOVERY	1
19	47763	CLIP	2
20	70338	COVER,TANK RECOVERY	1
21	70339	WASHER,TANK RECOVERY	1
22	11031	BOLT M6×12	1
23	83456	TANK RECOVERY	1
24	10183B	BOLT M6×16	4

25. AIR CLEANER

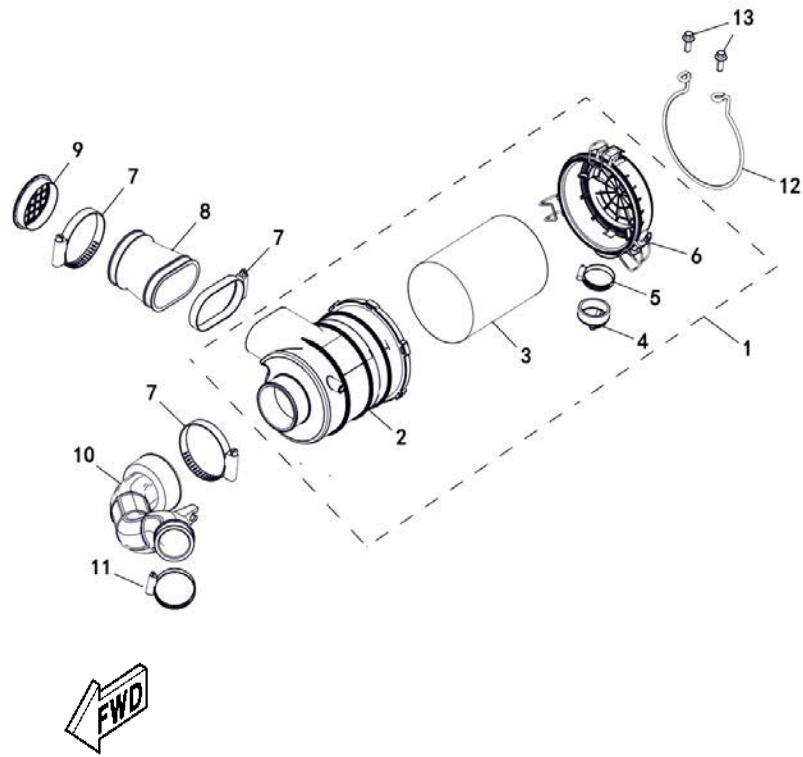

No.	PART No.	DESCRIPTION	QTY
1	47544	AIR CLEANER ASSY	1
2	73826	CASE, AIR CLEANER	1
3	73824	ELEMENT COMP AIR CLEANER	1
4	73835	OIL CAP	1
5	47545	CLIP 27/51	1
6	73823	COVER, AIR CLEANER	1
7	35670	CLIP 80	3
8	73834	AIR CLEANER INLET CONNECTION PIPE	1
9	47546	INTAKE HOSE	1
10	47765	FEED HOSE	1
11	71660	CLIP 33/57	1
12	73842	AIR CLEANER MOUNTING CLAMP	1
13	11492	BOLT M8×20	1

25. EXHAUST

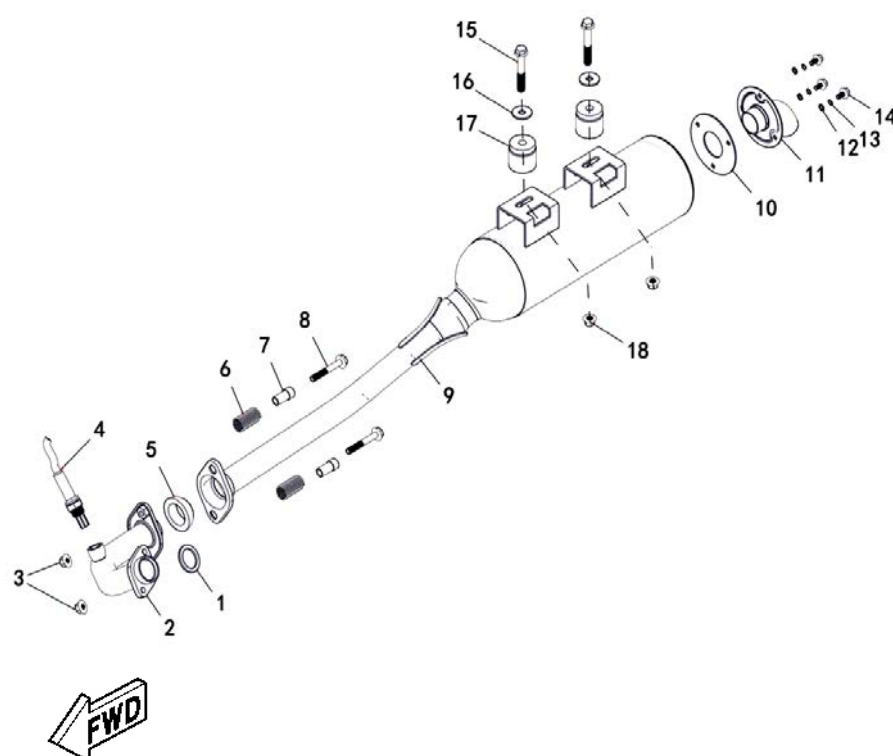

No.	PART No.	DESCRIPTION	QTY
1	47766	GASKET,EXHAUST PIPE	1
2	47767	PIPE,EXHAUST	1
3	11455	NUT M8	2
4	47555	OXYGEN SENSOR	1
5	47768	JOINT	1
6	47076	SPRING	2
7	46107	SPACER	2
8	11184	BOLT M10×60	2
9	47769	MUFFLER	1
10	47770	SEAL RING, TAIL PIPE	1
11	47771	TAIL PIPE	1
12	10801	GASKET 6	3
13	10308	SPRING WASHER 6	3
14	10812	BOLT M6×16	3
15	11652	BOLT M10×1.25×62	2
16	11653	WASHER 10	2
17	35344	BUFFER BLOCK	2
18	11287	NUT M10	2